



TROY PRODUCTS

INSTALLATION INSTRUCTIONS

Sep 27, 2019

Revision 0

A division of Troy Sheet Metal Works, Inc.
1024 South Vail Avenue, Montebello, CA 90640
55


Part No: AC-20-FDUV-MNT
Description: Console floor plate

Vehicle: Ford P.I. UV
Model year: 2020



I.) Remove O.E.M. floor plate:


- 1.) Loosen (4) bolts securing the O.E.M. floor plate. (2) front bolts do not need to be removed.

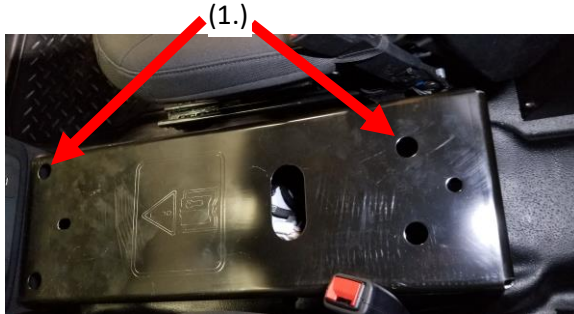

- 2.) Remove O.E.M. floor plate.

II.) Install Troy floor plate:

- 3.) Install rear cover plate onto the rear of the floor plate using (2) provided #10-32 bolts.
- 4.) Place the floor plate onto floor of vehicle and align with previously loosened bolts and slide forward.

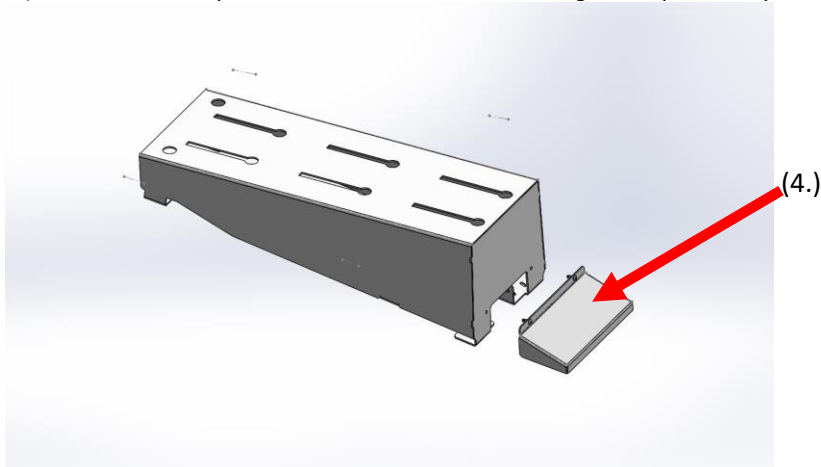

- 5.) Fasten console to floor using (4) O.E.M. bolts. Tighten securely.

Your installation is now complete. If you have any questions or suggestions for adding additional instructions, please call **Customer Service at (800) 700-8769.**

