



TROY PRODUCTS

INSTALLATION INSTRUCTIONS

Nov 20, 2019
Revision 0

A division of Troy Sheet Metal Works, Inc.
1024 South Vail Avenue, Montebello, CA 90640
www.troyproducts.com 800 700-8769

Part No: AC-20-UV-TRAY
Description: Electronics tray

Vehicle: Ford P.I. UV
Model year: 2020

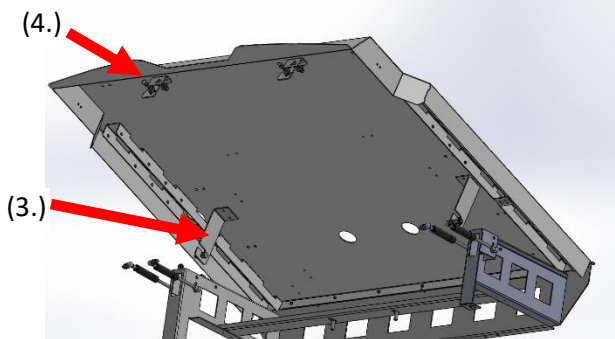


(NOTE: Open Box and make sure all parts and hardware are included. Check against Bill of Materials)


I.) Install brackets:

- 1.) Open the cargo mount.
- 2.) The electronics tray can be mounted on the Troy cargo mount either toward the front or rear area of the cargo mount.
- 3.) Install (2) front brackets to the underside of the cargo mount at the desired position using (4) provided #10-32 bolts and nuts. The flange is directed toward the inside.

(Tray mounted toward rear)



(Tray mounted toward front)

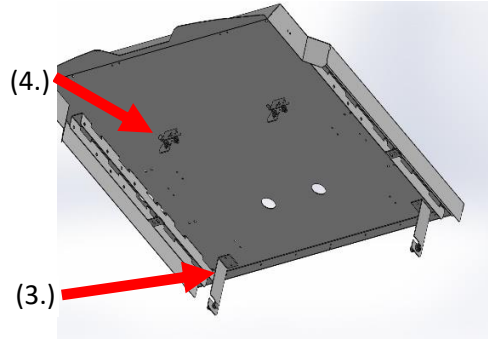


- 4.) Attach the (2) rear latch brackets to the underside of the cargo mount using (4) provided #10-32 bolts and nuts.

II.) Install tray:


- 5.) Install (2) provided 3/8-16 x 1.25" bolts into tray with (2) nuts on each bolt as shown. Securely tighten nut #1.

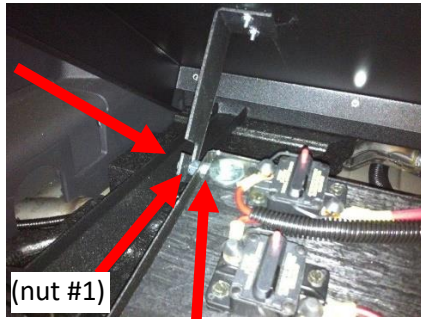(nut #2)




(nut #1)

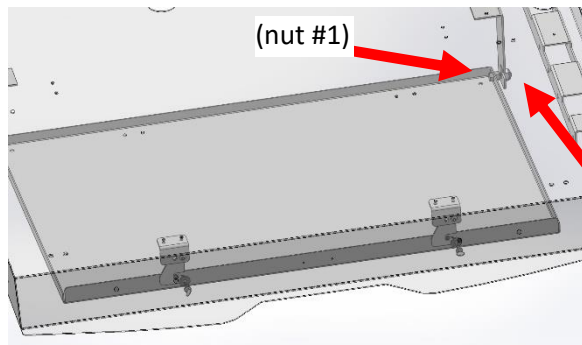(nut #2)



AC-20-UV-TRAY




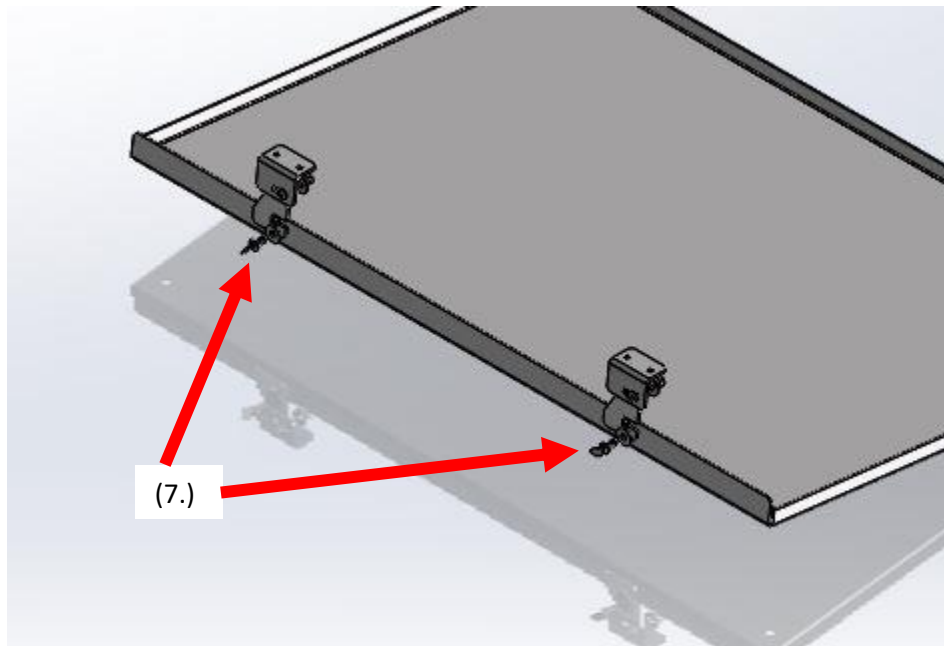
- 6.) Install tray ^(5.), angling (2) 3/8-16 bolts onto front brackets. Snug tighten nut #2.
- 7.) Attach rear latch brackets to tray using supplied thumb screws.








Note: Install taller electronics towards the back of the tray (front of vehicle). This allows for more clearance between the tray and underside of the cargo mount.

Your installation is now complete. If you have any questions or suggestions for adding additional instructions, please call **Customer Service at (800) 700-8769.**

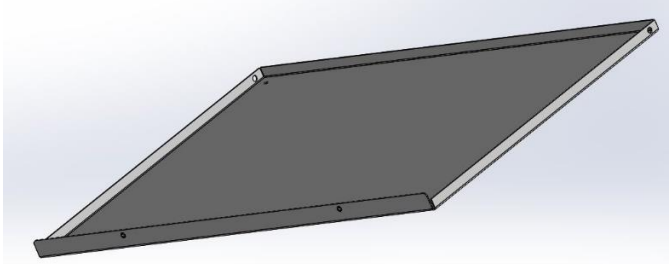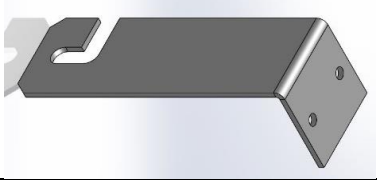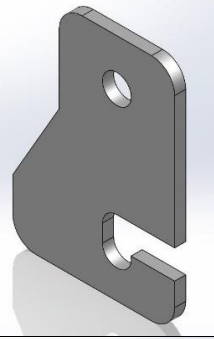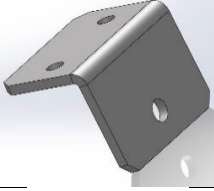**AC-20-UV-TRAY
BILL OF MATERIALS**

PART #	DESCRIPTION	QTY.	PHOTO
AC-20-UV-TRAY-#eqp	Electronics Tray	1	
AC-20-UV-TRAY-H#eqbp	Passenger Side Bracket	1	
AC-20-UV-TRAY-H#eqp	Driver Side Bracket	1	
AC-20-UV-TRAY-#b	Latch Strap	2	
AC-20-UV-TRAY-#h	Latch Angle Bracket	2	
1-FST-08-11240	Hex Head Bolt, 3/8-16 X 1	2	

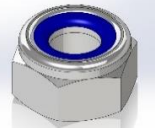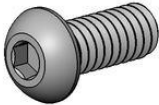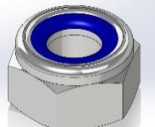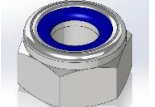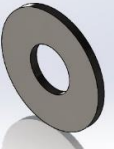1-FST-33-11200	3/8-16 Hex Nut	2	
1-FST-35-31200-stc	3/8-16 Nylon Nut	2	
1-FST-06-60825-stc	1 / 4-20 X 5/8 BH Socket Screw	2	
1-FST-06-10625-stc	10-32 X 5/8 BH Socket Screw	8	
1-FST-35-31000-stc	1 / 4-20 Nylon Nut	2	
1-FST-35-31150-stc	10-32 Nylon Nut	8	
1-FST-50-60815-stc	1 / 4 Washer, Black 3 / 4 OD	4	
1-FST-63-142050-stc	1 / 4 -20 X 1 / 2 Thumb Screw	2	