



Mar. 28, 2023

Revision 0

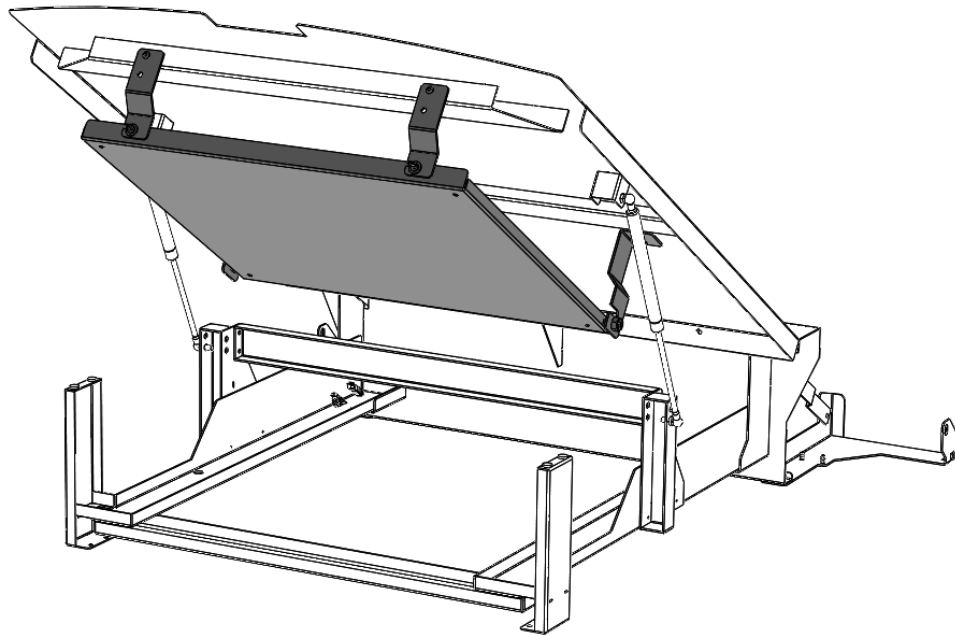
A division of Troy Sheet Metal Works, Inc.
1024 South Vail Avenue, Montebello, CA 90640
www.troyproducts.com 323 720-4100

Part No: AC-21DUR-TRAY
Description: 2021 Durango Electronic Storage Tray

Vehicle: Dodge Durango
Model year: 2018+

Tools Required: 1/8" Allen key 5/32" Allen key 3/8" socket/wrench 7/16" socket/wrench
(2x) 9/16 open wrench Socket extensions

Troy Products recommends reading through all installation instructions prior to installation to check all necessary parts have been included (check against bill of materials table.)















Quick Guide

1. Install rear brackets.
2. Install front strap brackets.
3. Prep tray with hardware.
4. Install tray to mount brackets.

AC-21DUR-TRAY

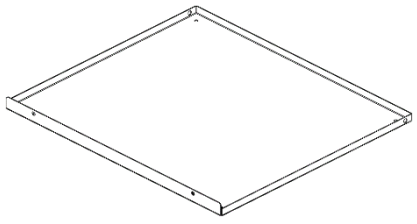
AC-21DUR-TRAY - BILL OF MATERIALS

PARTS			
Part number: AC-21DUR-TRAY-#db Description: DRIVER REAR BRACKET QTY: 1		Part number: AC-21DUR-TRAY-#pb Description: PASSENGER REAR BRACKET QTY: 1	
Part number: AC-21DUR-TRAY-#bkt Description: STRAP BRACKET QTY: 2		Part number: AC-21DUR-TRAY-#eqp Description: TRAY QTY: 1	

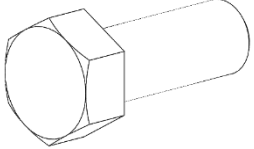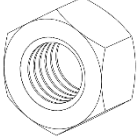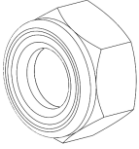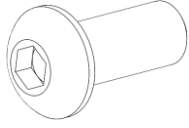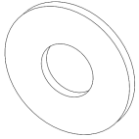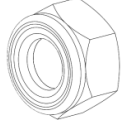
HARDWARE			
Part number: 1-FST-08-51240 Description: 3/8-16 X 1" HEX BOLT QTY: 2		Part number: 1-FST-33-11200 Description: 3/8-16 X HEX NUT QTY: 2	
Part number: 1-FST-35-31200 Description: 3/8-16 X NYLON LOCK NUT QTY: 2		Part number: 1-FST-06-60825 Description: 1/4-20 X 5/8 BH SCREW QTY: 2	
Part number: 1-FST-50-60815 Description: Ø1/4 WASHER QTY: 4		Part number: 1-FST-35-31000 Description: 1/4-20 NYLON LOCK NUT QTY: 2	
Part number: 1-FST-63-142050 Description: 1/4-20 X 1/2 THUMB SCREW QTY: 2		Part number: 1-FST-06-10625 Description: #10-32 X 5/8 BH SCREW QTY: 4	
Part number: 1-FST-35-31150 Description: #10-32 NYLON LOCK NUT QTY: 4			

Installation

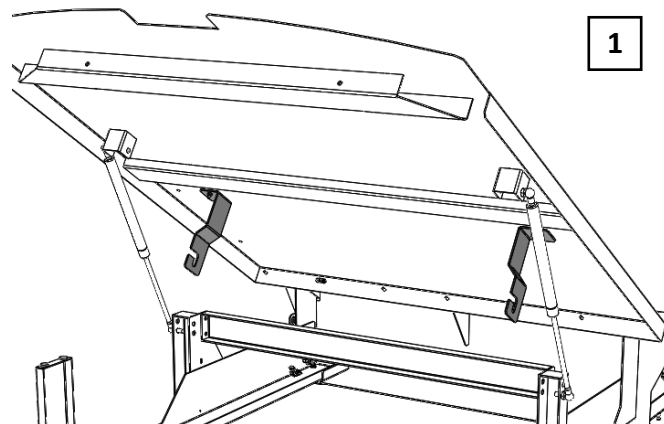
- 1.) With the cargo mount installed, bring rear driver and passenger brackets, and secure them to cargo mount panel with a total of (4) #10-32 X 5/8" BH screws and (4) #10-32 nylon lock nuts as shown.



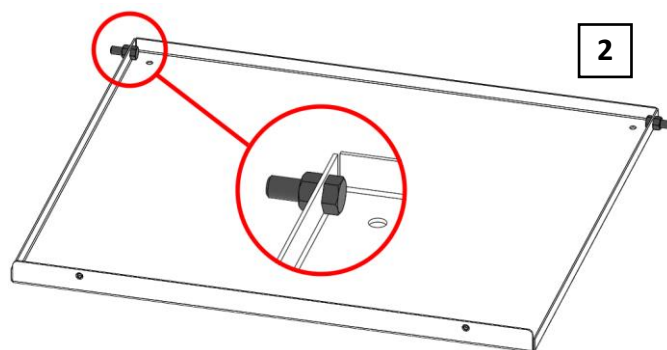
- 2.) Prep tray by installing (1) 3/8-16 X 1" bolt with (1) 3/16-18 nut per side as shown.



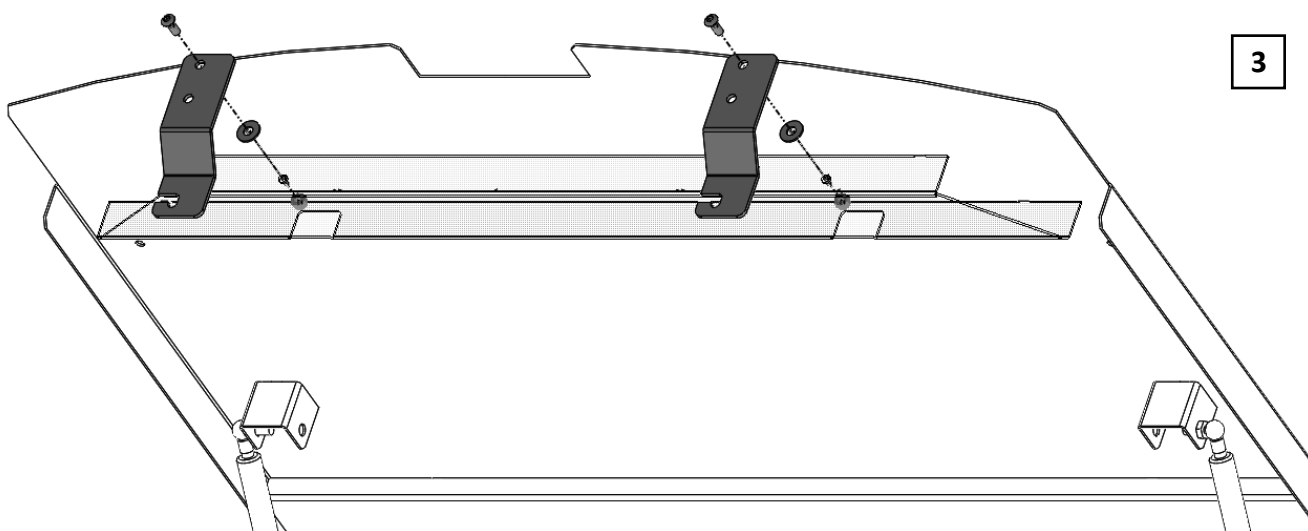
- 3.) Install front strap brackets on cargo mount front support with (1) 1/4-20 X 5/8" BH screw, (1) Ø1/4 washer and (1) 1/4-20 nylon lock nut per bracket in the shown order, washers are set to be installed in between the front strap and to outer face of the support from the cargo mount.



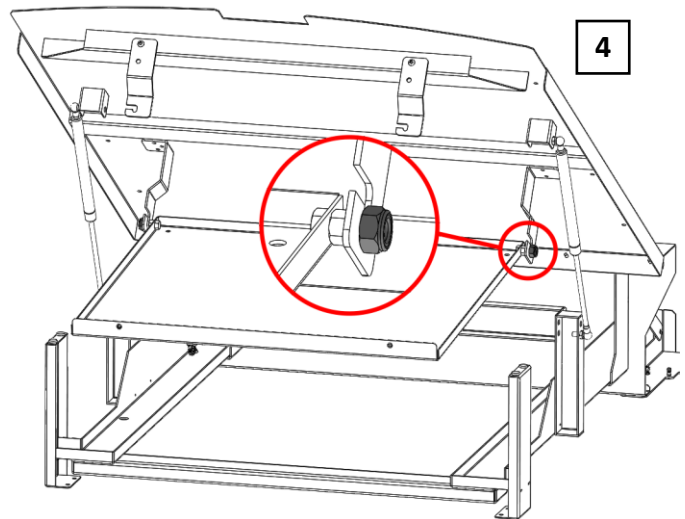- 4.) Bring tray and install it on rear brackets with (1) 3/8-16 nylon lock nut per side as shown.



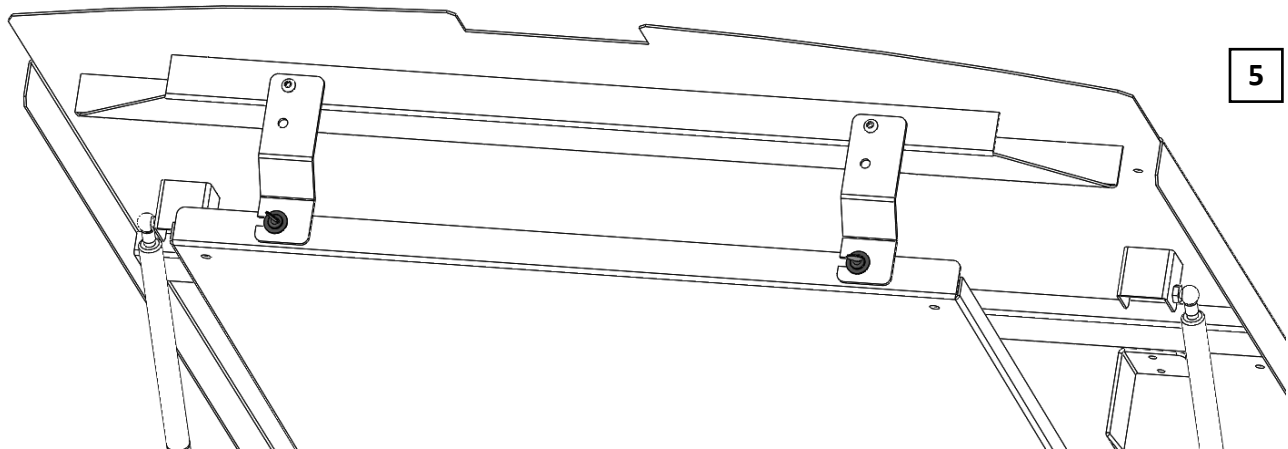- 5.) Turn tray up to the strap brackets, and secure tray to brackets using (1) 1/4-20 X 1/2" Thumb screw and (1) Ø1/4 washer per side.



- 6.) To lower the tray, loosen the thumb screws (do not fully loosen thumb screws) and rotate the strap brackets away, bring tray down.

Your installation is now complete. If you have any questions or suggestions for adding additional instructions, please call **Customer Service at (800) 700-8769.**