



TROY PRODUCTS

INSTALLATION INSTRUCTIONS

Oct 27, 2011
Revision 0

A division of Troy Sheet Metal Works, Inc.
1024 South Vail Avenue, Montebello, CA 90640
www.troyproducts.com 800 700-8769

Part No: AC-DG2500-RWS
Description: Cab rear window guard

Vehicle: Dodge Ram 2500
Model year: 2008 - 2010



I.) Remove crew cab seats:

- 1.) Remove crew cab seats to access area near bottom of rear window.
- 2.) Remove seat belt bolts at the bottom of each "C" pillar.
- 3.) Remove lower and upper "C" pillar plastic covers on both sides of vehicle.
- 4.) Center shoulder belt must be disconnected at the bottom to remove the seat.
- 5.) Remove (3) infant car seat anchoring straps using a 13mm socket.
- 6.) Remove (2) coat hanger hooks.




II.) Install window guard:

- 7.) Place window guard on top of the window ledge.
- 8.) Secure the window guard at the top using the (2) O.E.M. coat hanger bolts.



(9.)

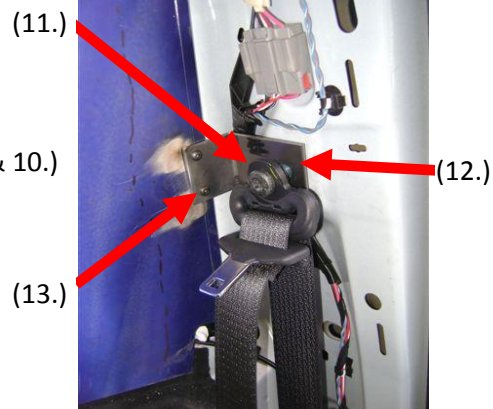


- 9.) Secure the window guard at the bottom using the (3) O.E.M. infant seat strap bolts.
- 10.) Using the existing holes in the upper tabs as a template, drill (2) 3/16" holes into the vehicle and secure the upper tabs using (2) supplied 3/16" pop rivets.
- 11.) Remove shoulder harness bolt on both sides of vehicle using a Torx bit.

- 12.) Place loose angle brackets behind shoulder harness bolts and replace shoulder harness bolts. Do not tighten at this time.
- 13.) Attach angle brackets to window screen using (4) 10-32 x 3/8" bolts and tighten securely.
- 14.) Tighten (2) shoulder harness bolts to O.E.M. specifications.

III.) Install O.E.M. trim and seats:

- 15.) Install upper plastic trim on both sides of vehicle. The upper trim must be trimmed approximately 1/4" to 3/8" to clear the shoulder harness angle brackets.
- 16.) Install the lower plastic trim on both sides of the vehicle.
- 17.) Install the seat belt mechanism.
- 18.) Install the rear seats and seat belt anchors at all points. Tighten all fasteners to O.E.M. specifications.

Your installation is now complete. If you have any questions or suggestions for adding additional instructions, please call **Customer Service at (800) 700-8769.**

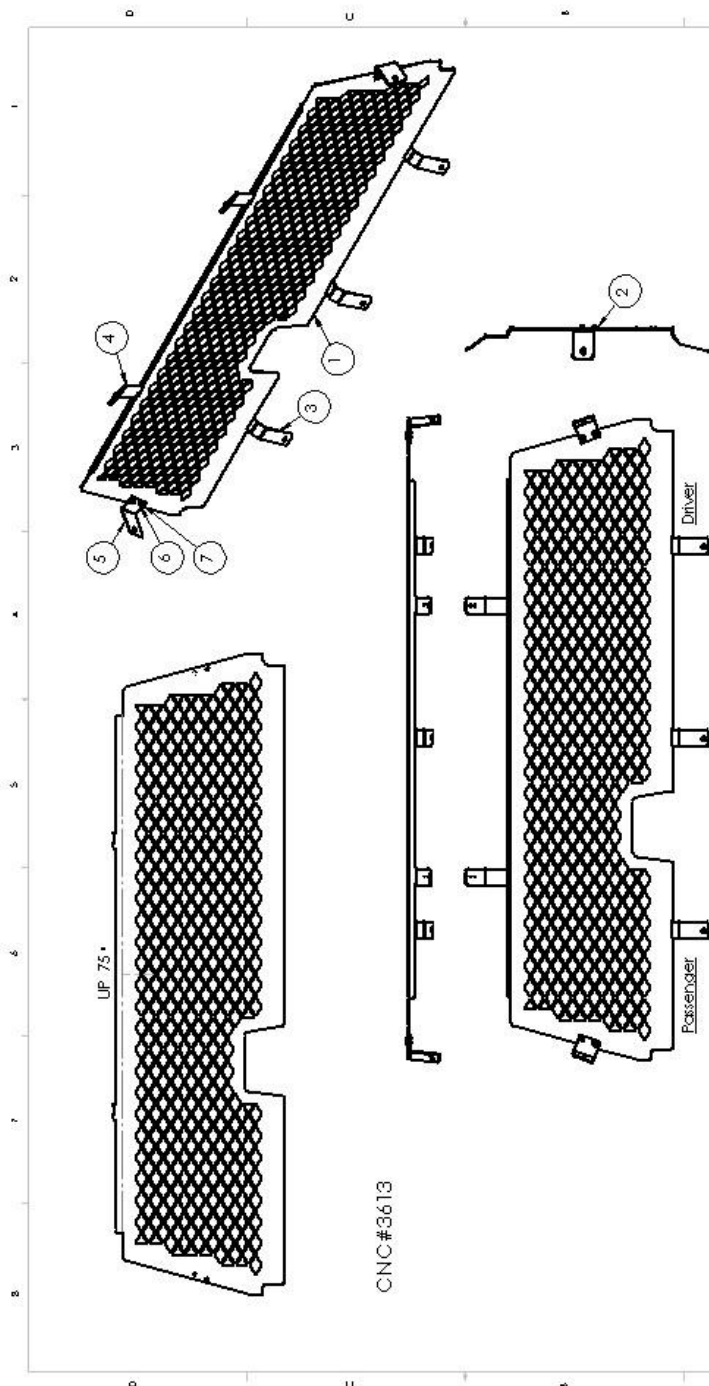

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	0-3HT-15-01405	SHEET 14GA, CRS	1
2	1-PSI-31-10600	PEW NUTS, ZL #10-32	4
3	DG22500RWS-B1	BOTTOM TABS	3
4	DG22500RWS-T1	TOP TABS	3
5	D122500RWS-36	SIDE BRACKETS	2
6	1-PSI-50-44011	EXT. TUBOCHLOCK WASHERS, #10	4
7	8PH-SCREW-#10-32 37200-875-HX-N	ALLEN 8H SCREW, #10-32 x 3/8	4

[illegible][illegible]