



TROY PRODUCTS

INSTALLATION INSTRUCTIONS

July 3, 2019

Revision 1

A division of Troy Sheet Metal Works, Inc.
1024 South Vail Avenue, Montebello, CA 90640
www.troyproducts.com 800 700-8769

Part No: AC-DUR18-SET
Description: Window screen

Vehicle: Dodge Durango
Model year: 2018



I.) Install window screen:

- 1.) Remove door panel. (2) screws must be removed. Door panel then un-snaps from door.




- 2.) Remove upper plastic trim and discard.
3.) Re-install door panel -or- install Troy Products door panel.
4.) Place window screen on top of the door panel with flange inside the window slot and center in the opening.
5.) Using the existing holes in the guard as a template, drill (10) 3/16" holes into the door frame. Be careful to only drill through the first layer of the door frame.
6.) Fasten the guard to the door using the included 3/16" dia. pop rivets.



- 7.) Repeat above steps on opposite side of vehicle.

Your installation is now complete. If you have any questions or suggestions for adding additional instructions, please call Customer Service at (800) 700-8769.

AC-DUR18-SET

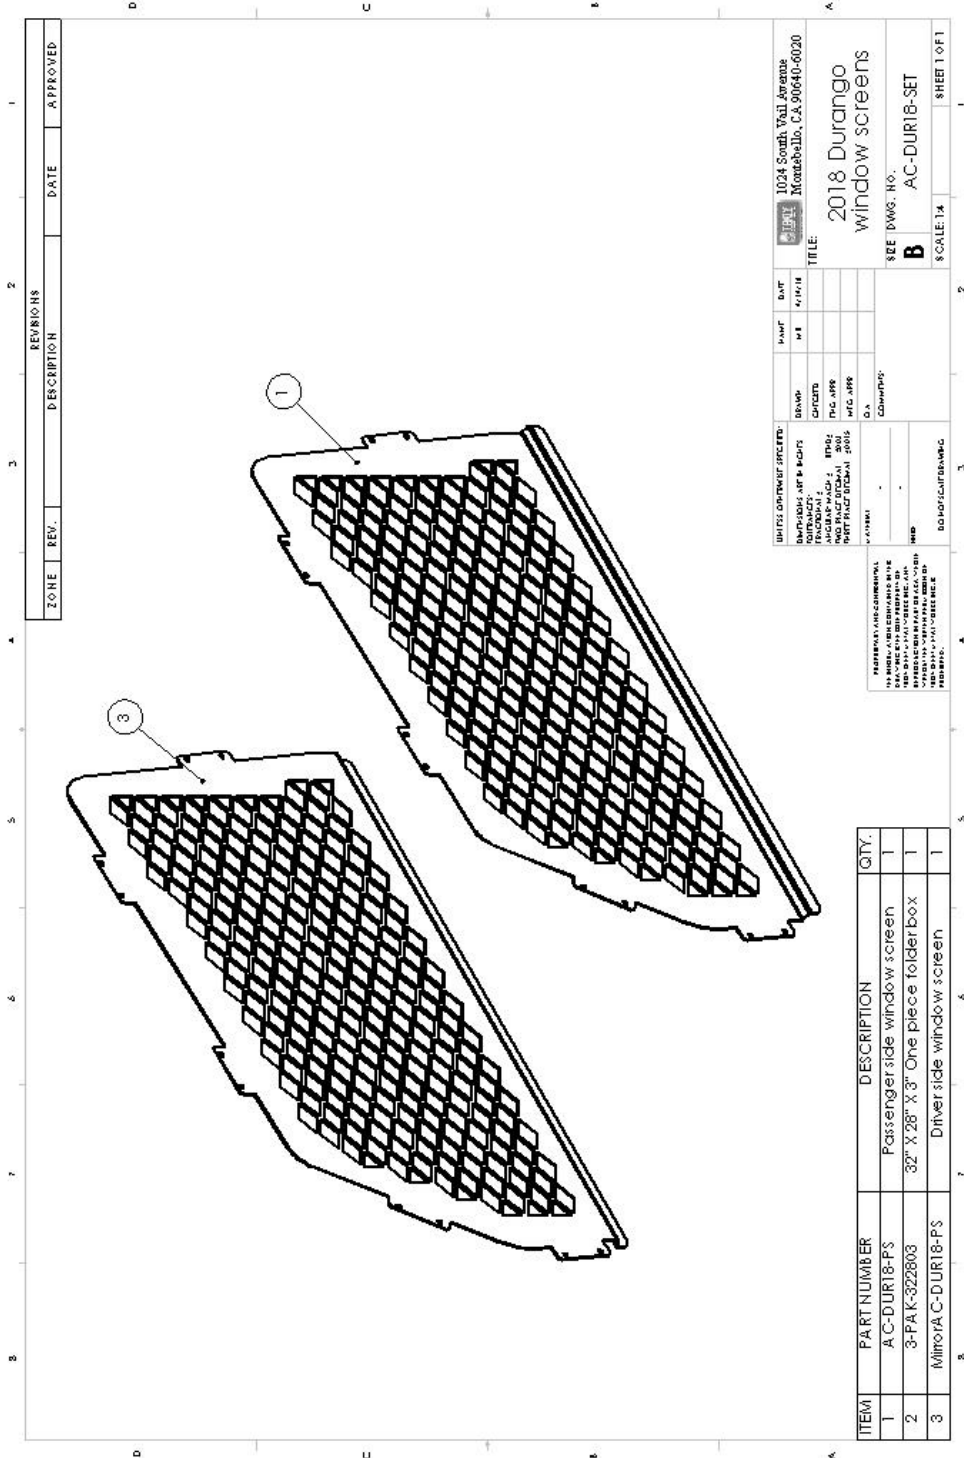

REVISIONS		DATE		APPROVED	
ZONE	REV.	DESCRIPTION			

1024 South Vail Avenue Montebello, CA 90640-0020		DATE 4/11/18	DRAWN BY M
2018 Durango window screens		TITLE	
UNITS: DIMENSIONS: SHEETS: DIMENSIONS: 48" X 84" 1/2" SHEETS: 1	SHEET NO. B	DWG. NO. AC-DUR18-SET	
SCALE: 1/4" = 1'-0"		SHEET 1 OF 1	

ITEM	PART NUMBER	DESCRIPTION	QTY.
1	A-C-DUR18-PS	Passenger side window screen	1
2	3-PAK-322803	32" X 28" X 3" One piece folder box	1
3	MirrorA-C-DUR18-PS	Driver side window screen	1