

A division of Troy Sheet Metal Works, Inc. 1024 South Vail Avenue, Montebello, CA 90640 www.troyproducts.com 800 700-8769


Part No: AC-TP-TRAY Vehicle: Tahoe Description: Cargo electronics enclosure Model year: 2015

I.) Install Troy Products rear partition for Tahoe:

II.) Install enclosure:

- 1.) From the rear of the vehicle, place the enclosure onto the rear partition and align the notch in the backside (front of vehicle) of the enclosure with the bead in the rear partition.
- 2.) Transfer location of (10) holes onto the rear partition.

3.) Drill (10) 9/32" holes into the rear partition.

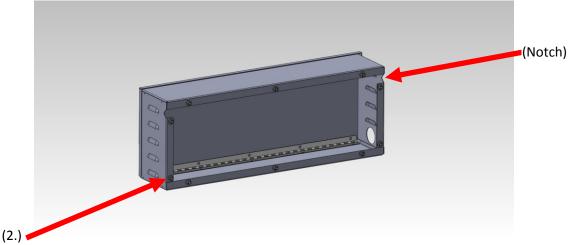

4.) Attach the enclosure to the rear partition using (10) provided %-20 x 5/8 bolts, washers and nuts and securely tighten.

Your installation is now complete. If you have any questions or suggestions for adding additional instructions, please call **Customer Service at (800) 700-8769.**

