



TROY PRODUCTS

INSTALLATION INSTRUCTIONS

Feb 18, 2020

Revision 1

A division of Troy Sheet Metal Works, Inc.
1024 South Vail Avenue, Montebello, CA 90640
55

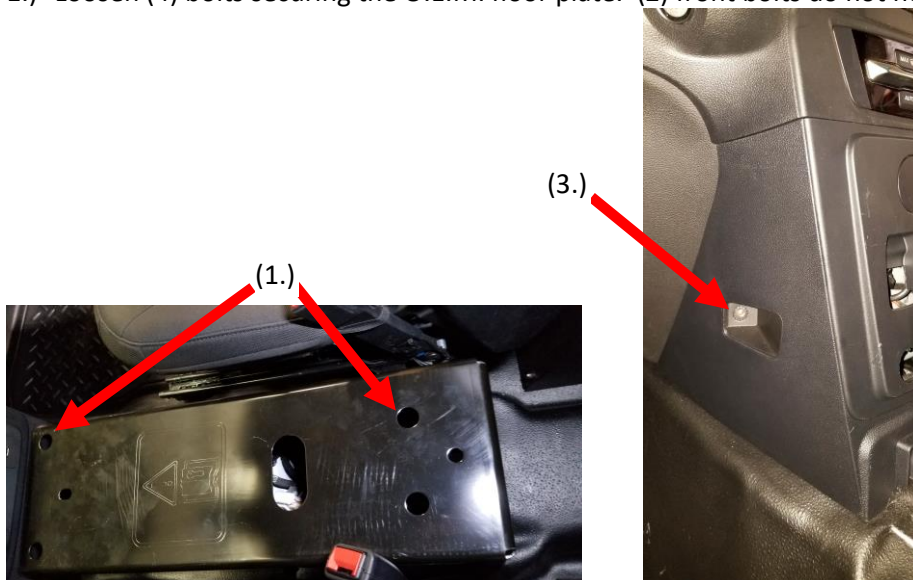
Part No: CC-20-UV10-L8
Description: Console

Vehicle: Ford P.I. UV
Model year: 2020



I.) Remove O.E.M. floor plate:

- 1.) Loosen (4) bolts securing the O.E.M. floor plate. (2) front bolts do not need to be removed.



- 2.) Remove O.E.M. floor plate.

II.) Remove O.E.M. dash plate and modules:

- 3.) Remove (2) bolts from either side of lower dash.
- 4.) Un-snap center dash panel from dash.
- 5.) Disconnect parking brake module, USB module and DC outlet module.
- 6.) Remove parking brake module, USB module and DC outlet module.
- 7.) Route cables thru holes and re-install dash panel.
- 8.) Install and tighten (2) dash bolts to O.E.M. specifications.

III.) Install O.E.M. modules in troy console:

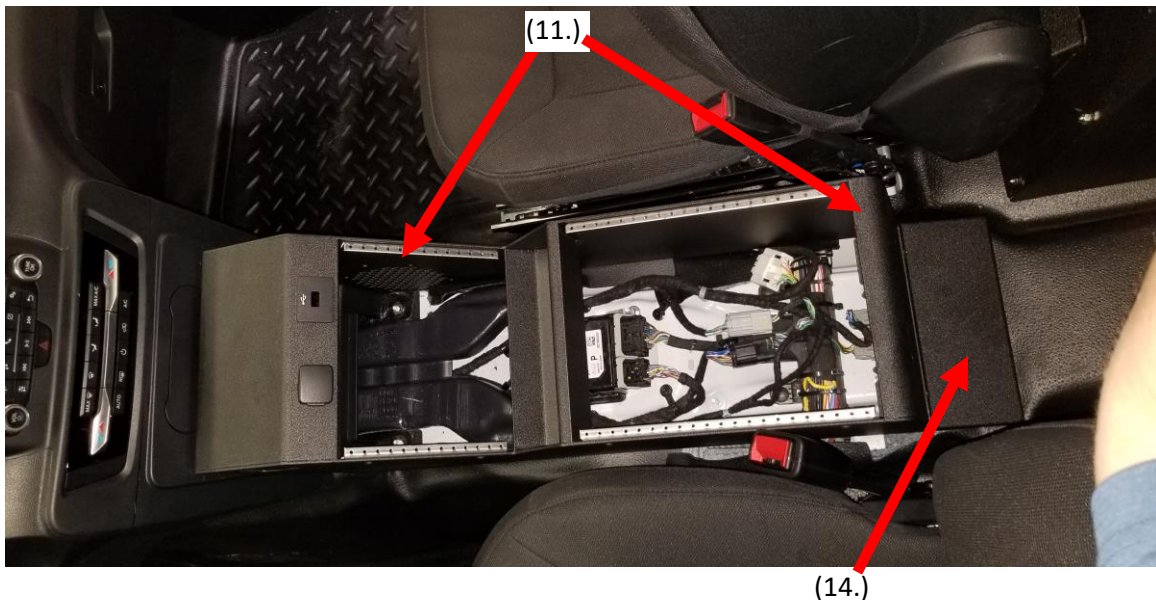
- 9.) Install parking brake module into Troy console as shown below using (3) provided #8-32 nylon locking nuts. Tighten securely but do not over-tighten.



- 10.) Install O.E.M. DC outlet and USB module into Troy console.

IV.) Install Troy Console:




- 11.) Place console onto metal floor of vehicle (console tabs are UNDER A/C duct tabs, spacers and rubber mat) and align with previously loosened bolts and slide forward under the AC ducts until console contacts dash.



- 12.) Connect parking brake module, USB module and DC outlet module.
13.) Fasten console to floor using (4) O.E.M. M6 nuts. Tighten securely.
14.) Install rear cover plate using (2) provided ¼-20 Button Head Socket Head bolts and ¼-20 nylon locking nuts.

Your installation is now complete. If you have any questions or suggestions for adding additional instructions, please call **Customer Service at (800) 700-8769.**

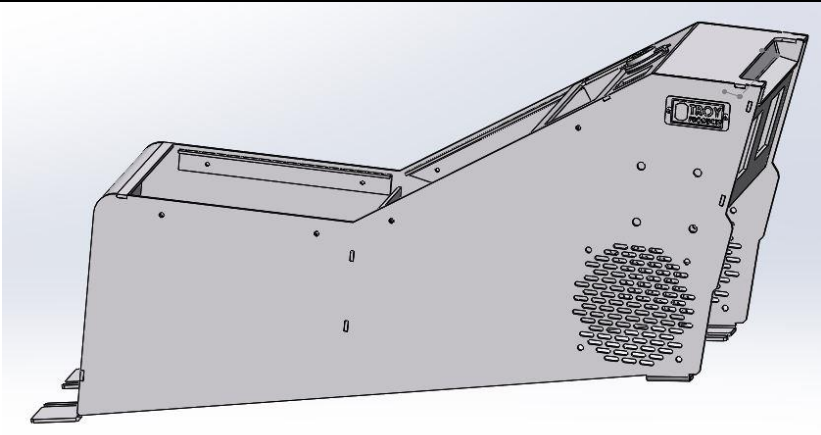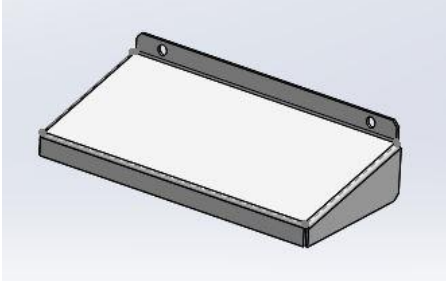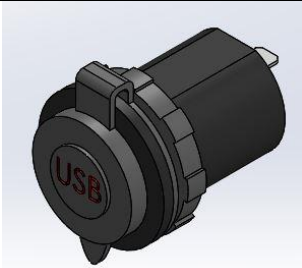CC-20-UV10-L8
BILL OF MATERIALS

PART#	DESCRIPTION	QTY.	PHOTO
CC-UV20-L-18-#hw	Housing	1	
CC-20-UVLP-14-#fc	Cover Plate	1	
1-FST-35-31125	#8-32 Nylon lock nut	3	
1-FST-06-60825	#1/4-20 X 5/8" BH socket screw	2	
1-FST-35-31000	#1/4-20 Nylon lock nut	2	
AC-DUALUSB	Waytek Dual USB	1	
HW-CC-06	Hardware Kit		(1) AC-MCM, (1) AC-MICLIP, (4) 3/8-16 X 3/4 " Carriage Bolts, 3/8-16 Flange Nuts, 25 Pk Security Torx Screws