



TROY PRODUCTS

INSTALLATION INSTRUCTIONS

Feb 18, 2020

Revision 1

A division of Troy Sheet Metal Works, Inc.
1024 South Vail Avenue, Montebello, CA 90640
55


Part No: CC-20FDUV-22
Description: Console

Vehicle: Ford P.I. UV
Model year: 2020



I.) Remove O.E.M. floor plate:

- 1.) Loosen (4) bolts securing the O.E.M. floor plate. (2) front bolts do not need to be removed.

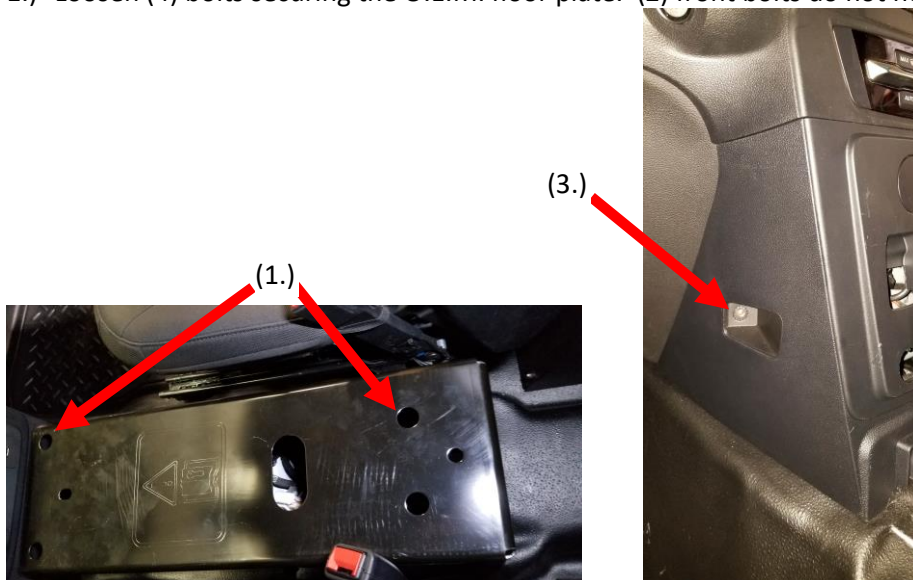

- 2.) Remove O.E.M. floor plate.


II.) Remove O.E.M. dash plate and modules:

- 3.) Remove (2) bolts from either side of lower dash.
- 4.) Un-snap center dash panel from dash.
- 5.) Disconnect USB module and DC outlet module.
- 6.) Remove USB module and DC outlet module.
- 7.) Route cables thru holes and re-install dash panel.
- 8.) Install and tighten (2) dash bolts to O.E.M. specifications.




III.) Install O.E.M. modules in troy console:

9.) Install USB module and DC Outlet module.

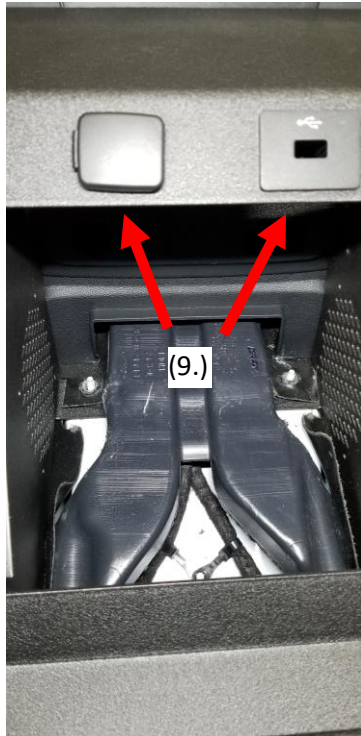

IV.) Install Troy Console:

10.) Place console onto metal floor of vehicle (console tabs are UNDER A/C duct tabs, spacers and rubber mat) and align with previously loosened bolts and slide forward under the AC ducts until console contacts dash.

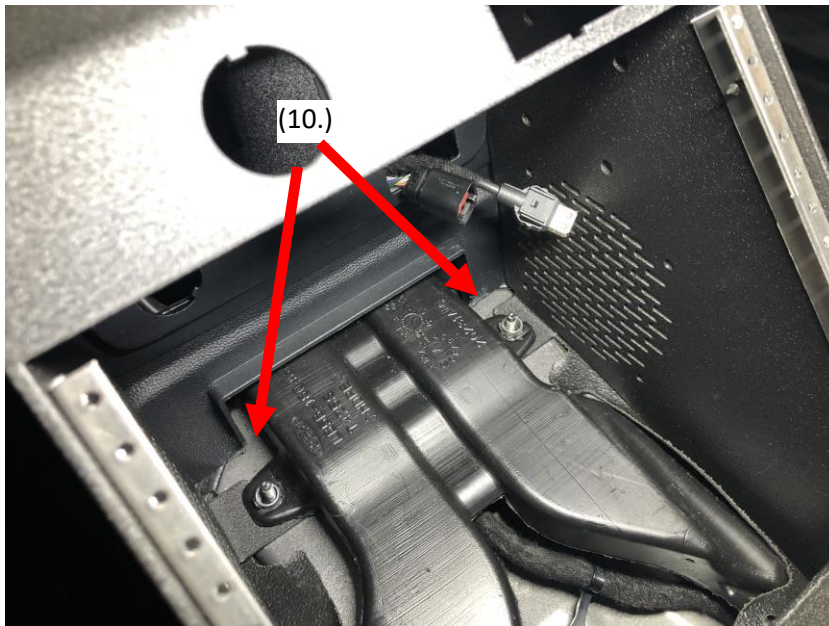



11.) Connect parking brake module, USB module and DC outlet module.

12.) Fasten console to floor using (4) O.E.M. M6 nuts. Tighten securely.

13.) Install rear cover plate using (2) provided ¼-20 Button Head Socket Head bolts and ¼-20 nylon locking nuts.

Your installation is now complete. If you have any questions or suggestions for adding additional instructions, please call **Customer Service at (800) 700-8769.**

CC-20-FDUV-22
BILL OF MATERIALS

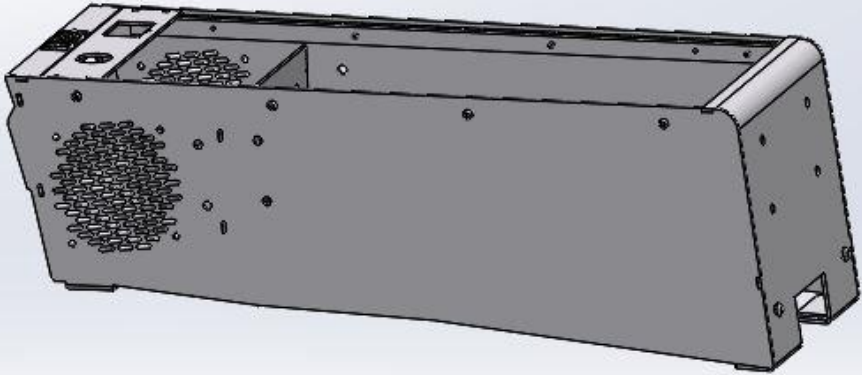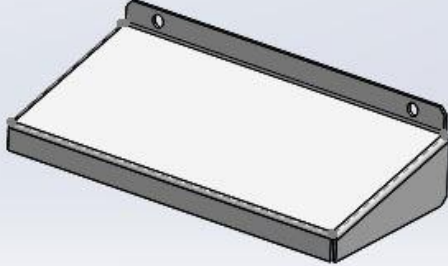PART #	DESCRIPTION	QTY	PHOTO
CC-20-FDUV-2218-#hw	Housing	1	
CC-UV20-L-18-#dh	Cover Plate	1	
1-FST-35-31000	#1/4-20 X 5/8" BH socket screw	2	
HW-CC-06	#1/4-20 Nylon lock nut	2	
	Hardware Kit		(1) AC-MCM, (1) AC-MICLIP, (4) 3/8-16 X 3/4 " Carriage Bolts, 3/8-16 Flange Nuts, 25 Pk Security Torx Screws