



TROY PRODUCTS

INSTALLATION INSTRUCTIONS

Mar 1, 2023

Revision 0

A division of Troy Sheet Metal Works, Inc.
1024 South Vail Avenue, Montebello, CA 90640
www.troyproducts.com 800 700-8769

Part No: CC-21CH-XX

Description: Console

Vehicle: Dodge Charger
Model year: 2021+




I.) Remove O.E.M. console:

- 1.) Remove nut from center of console.
- 2.) Pull up and back to remove console.
- 3.) Disconnect wiring harness plugs and remove O.E.M. console.



II.) Install dash plate:

- 4.) Remove (4) screws securing electronic module bracket and remove module from bracket. Discard bracket.

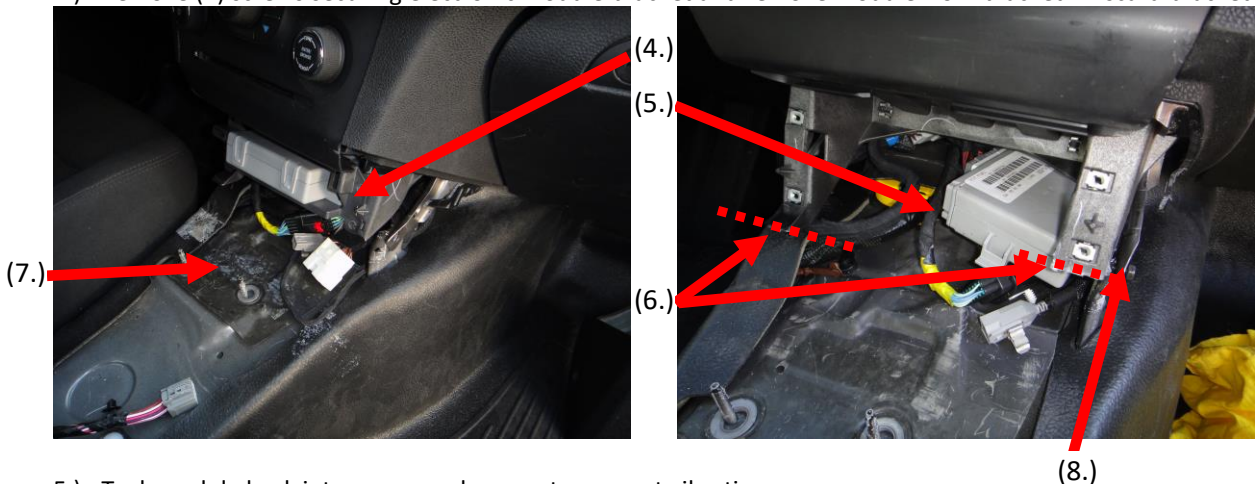

- 5.) Tuck module back into recess and secure to prevent vibration.
- 6.) Trim off tabs as shown in picture.
- 7.) Remove keyless ignition antenna.
- 8.) Loosen (2) bolts (1 on each side) and slide dash plate into dash ensuring that the tab forks slide between the vehicle inner and outer brackets.
- 9.) Position dash plate flush with front of dash, aligned with vehicle dash profile and tighten side bolts.

CC-21CH-XX



10.) Re-install keyless ignition antenna.

11.) Install (2) hole plugs.

III.) Install console:

12.) Position console onto vehicle floor and move forward to contact the dash plate.




13.) Attach console to dash plate using supplied ¼-20 x 5/8 bolts.

14.) Secure console to vehicle floor in (4) places using M6 x 1 hardware.

IV.) Re-install O.E.M. wiring harness:

15.) Remove wiring harness from O.E.M. console and install into Troy console.

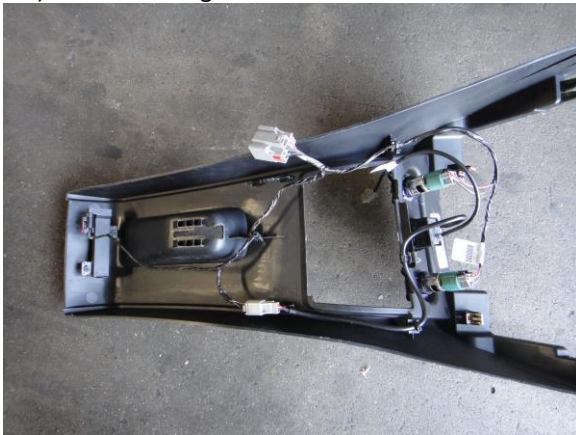

16.) Optional: Remove and re-locate the USB port and O.E.M. DC outlets into Troy faceplate part # FP-RAM-USB2-AUX. Connect wiring to USB port and DC outlets and install face plate onto rails where desired.

17.) Connect all wiring harness plugs.

Below is what the completed installation will look like.



Your installation is now complete. If you have any questions or suggestions for adding additional instructions, please call **Customer Service at (800) 700-8769.**