



June 29, 2021
Revision A

*A division of Troy Sheet Metal Works, Inc.
1024 South Vail Avenue, Montebello, CA 90640
www.troyproducts.com 323 720-4100*

Part No: CC-21DUR-0810 REV. A
Description: 2021 DURANGO 8" SLOPE/10" LEVEL

Vehicle: Dodge Durango PPV
Model year: 2021



Tools Required

- | | | |
|-------------------------|------------------------|---------------------|
| ▪ 10 mm. socket | ▪ 7 mm. drive | ▪ 5/32 allen wrench |
| ▪ 1/8 allen wrench | ▪ 7/16 wrench/socket | ▪ 3/8 nut driver |
| ▪ Flat head screwdriver | ▪ Phillips screwdriver | ▪ T9 drive |


Troy Products recommends reading through all installation instructions prior to installation to check all necessary parts have been included (check against bill of materials table).

IMPORTANT NOTES

- This center console fits 8" of Troy Products face plate inserts on the slope area and 10" on the flat section.
- Consoles allows the transfer of the USB/AUX, AWD and auto park override modules.

Prepare vehicle for installation


- 1.) Remove four O.E.M. screws holding the cover plate were shown (two screws per side), to access rear O.E.M. screw locations set seats all the way forward (do not discard screws, these are to be re-used in **Steps 11 and 16**), use the 10mm. socket.

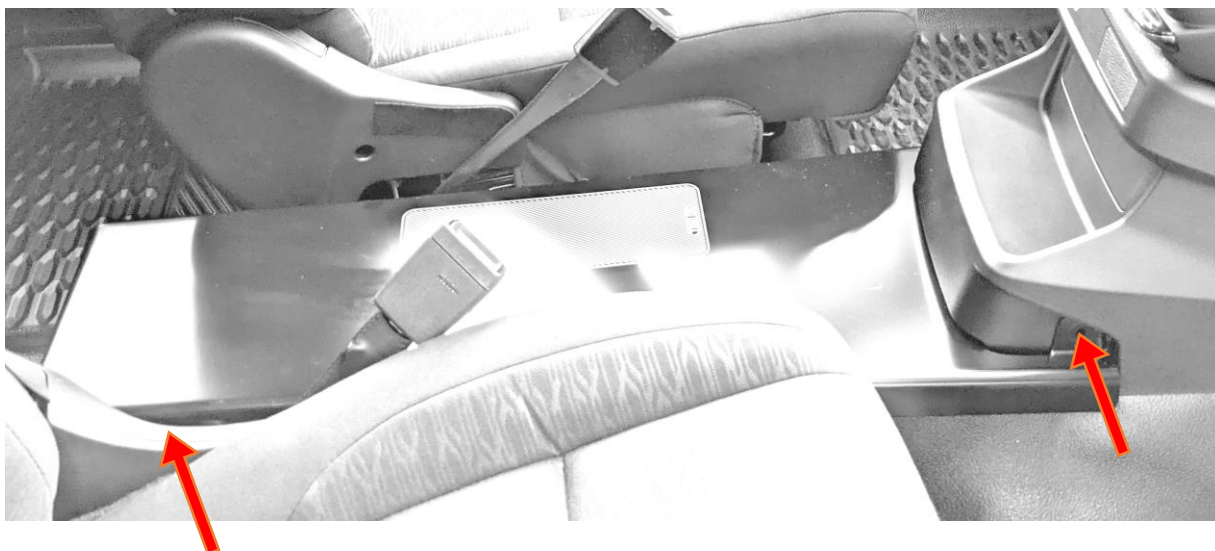


CC-21DUR-0810 REV. A

2.) Remove lower dashboard panel by pulling it towards rear side of vehicle, lower dash panel has insertion clips where indicated.

3.) Unplug harness extensions from USB/AUX module (make note of the harness connections order so these can be connected back in the same manner in **Step 18**. Unplug harness from AWD module **if equipped**.

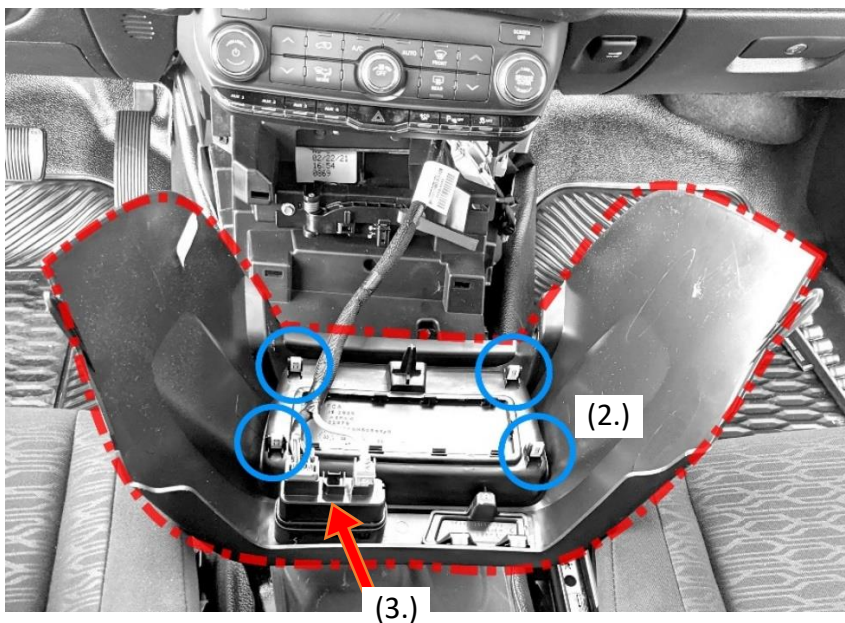


4.) Remove USB/AUX module from lower dashboard panel, use the flat head screwdriver to free up the tabs holding the module. Remove AWD module or AWD plastic cover using the T9 drive.

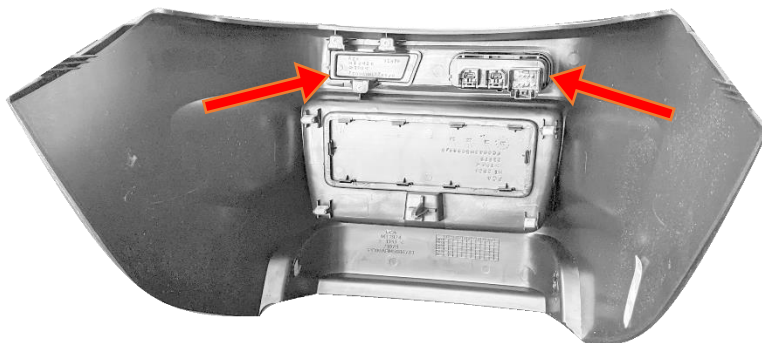


5.) Disconnect USB/AUX module harness extension from sub panel.

6.) Remove lower dashboard sub-panel, sub-panel is being held by two marked screws (one per side). Use the 7 mm. drive to remove these. Pull sub panel towards rear side of vehicle to unsnap it.

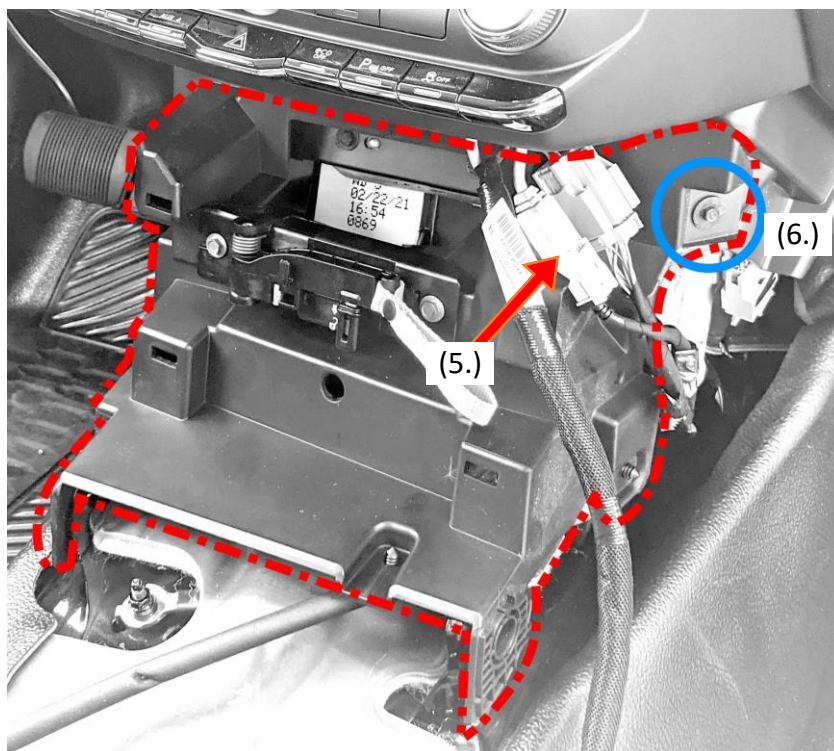


7.) Remove USB/AUX module harness extension from lower dashboard sub-panel.

8.) Remove auto park override module from sub panel. Module is being held by two screws, remove these from the front of sub-panel using the 7 mm. drive. Detach cable pins attached to sub-panel.

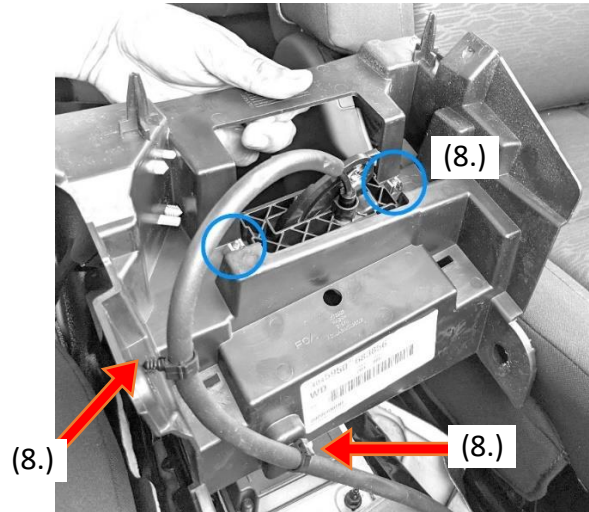


Prepare center console

9.) Transfer AWD module or AWD plastic cover to center console in the shown manner, secure module or cover using (3) provided #6-32 X 1/2" screws. If vehicle is equipped with AWD module, make sure the module is centered within cutout and fully functional before tightening screws.

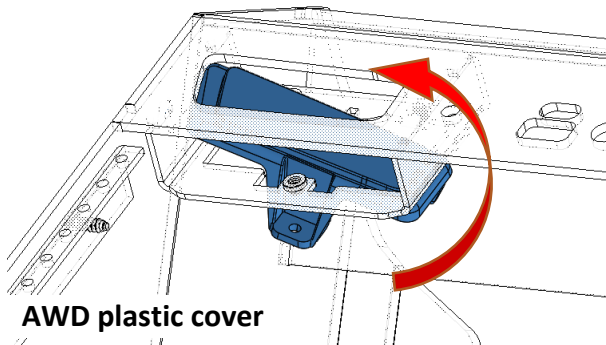


AWD plastic cover

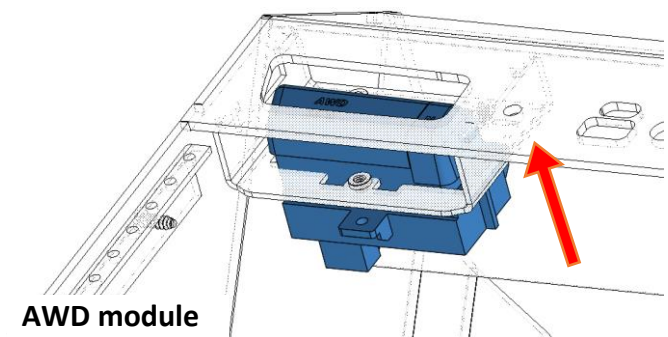

AWD module

10.) Transfer the USB/AUX module to center console as shown, insert module in USB/AUX bracket and attach it to console using two provided #10-32 x 5/8" button head screws and #10-32 nylon hex nuts. Use the 1/8 allen wrench to drive the screws and the 3/8 nut driver to hold the hex nuts.

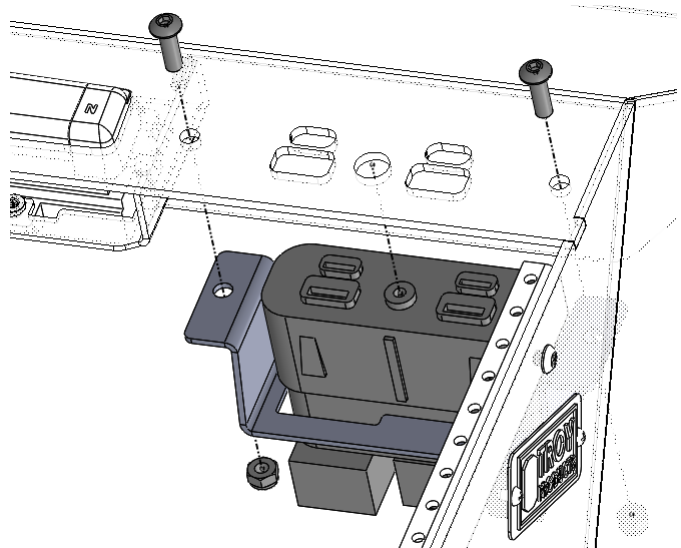


- 11.) Transfer auto park override module to rear mount bracket as shown. Use two provided 1/4-20 x 3/4" button head screws and 1/4-20 nylon hex nuts.




Install center console


- 12.) Install rear mount bracket at the shown rear mount location, use two O.E.M. screws from **Step 1**. (secure screws tightly)

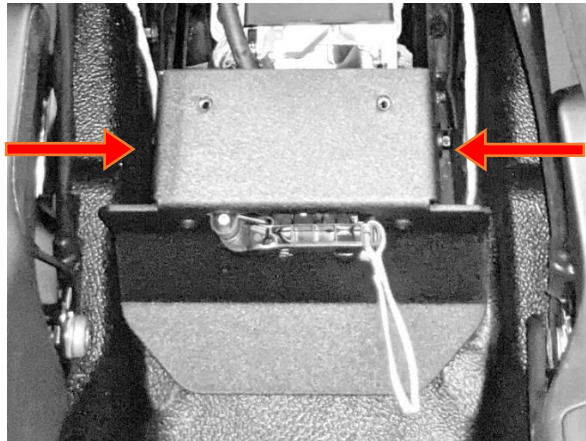

- 13.) Set front seats all the way back and tilt them down to facilitate placement of console.
14.) Insert console in the shown motion by inserting the front end of the console first.

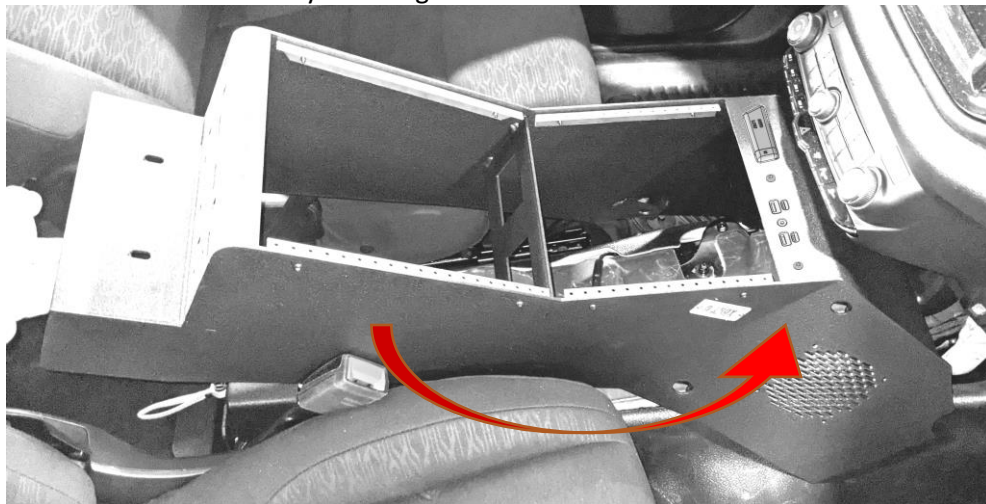

- 15.) Secure rear end of console to rear mount bracket using two provided 1/4" washers and 1/4-20 x 3/4" button head screws (**do not tight screws at this time**).

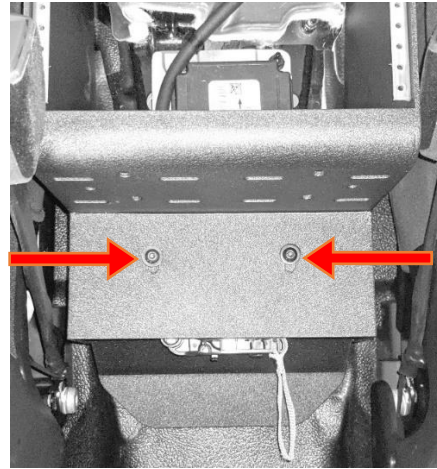


- 16.) Align console to front mount points, use remaining two of the O.E.M. screws from Step 1. (one per side) secure screws tightly. Go back and tightly secure screws from previous step.

- 17.) Insert two provided 7/8" dome plugs on access mount points cutouts (one per side).




- 18.) Connect harness extensions to USB/AUX module in console in the same order as originally.
19.) Connect harness to AWD module, **if equipped**.
20.) Insert 12V. outlet on console on passenger side.

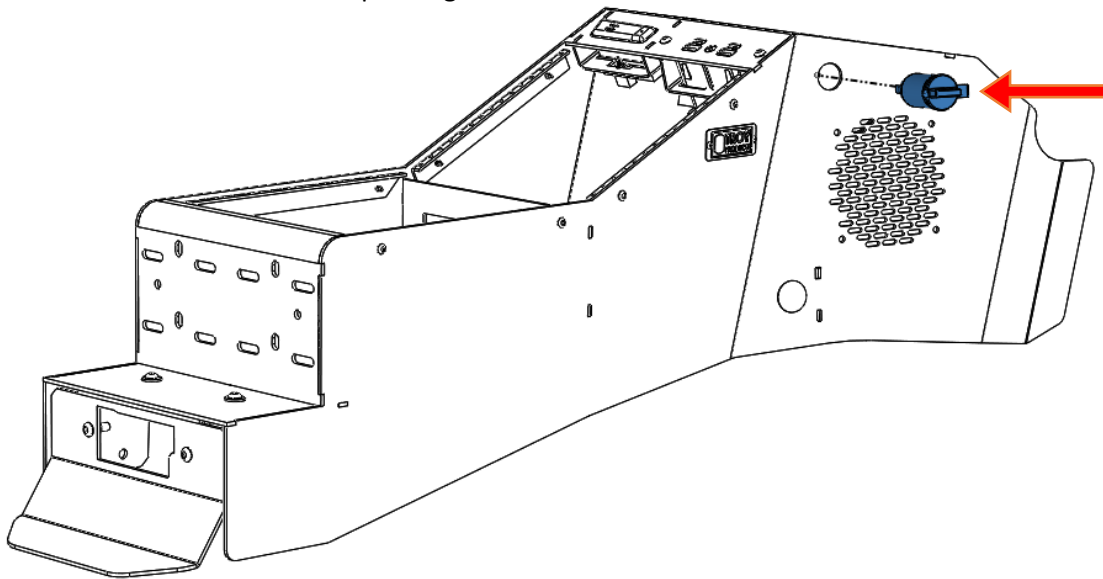

Your installation is now complete. If you have any questions or suggestions for adding additional instructions, please call **Customer Service at (800) 700-8769.**

REVISIONS			
ZONE	REV.	DESCRIPTION	DATE
	A	ADDED BRACKET FOR AWD MODULE; RELOCATED USB MODULE AND 12V. OUTLET	6/17/2021
			APPROVED NG

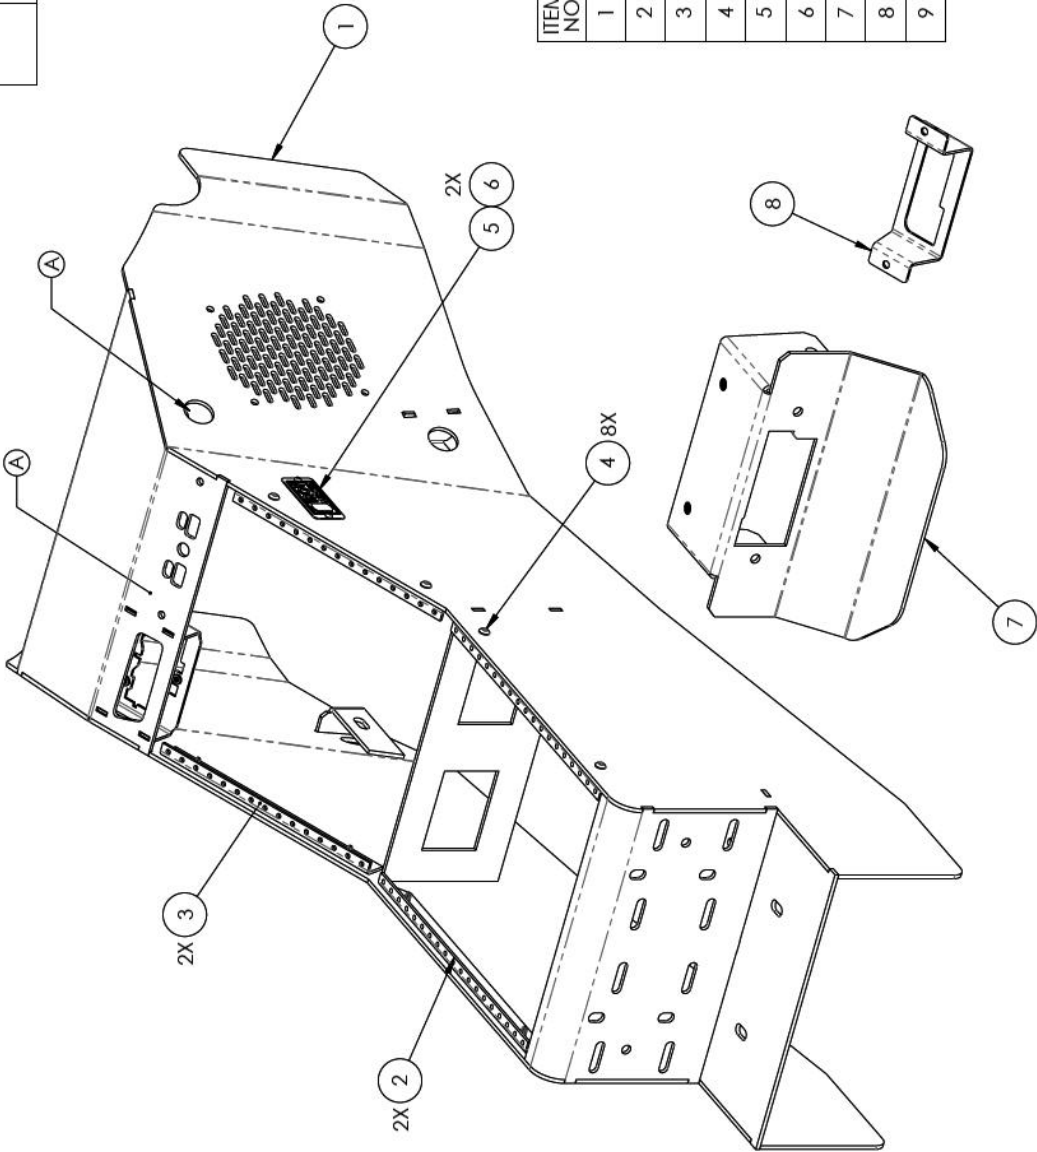

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	CC-21DUR-0810-#hw	HOUSING WELDMENT	1
2	AC-RAIL-10	10" Faceplate rail	2
3	AC-RAIL-8	8" Faceplate rail	2
4	1-FST-05-330305	BH SEC TORX SCREW #8 X 1/2	8
5	3-PAK-TPLOGO	Troy Products Logo	1
6	1-FST-02-91654A	#4 x 3/16 drive screw	2
7	CC-21DUR-0810-#rb	Rear bracket (SHIP LOOSE)	1
8	CC-21DUR-0810-#usb	USB/AUX MODULE BRACKET (SHIP LOOSE)	1
9	CC-21DUR-0810-#hdw	HARDWARE KIT	1

UNLESS OTHERWISE SPECIFIED:		NAME	DATE
DIMENSIONS ARE IN INCHES		NG	4/23/2021
TOLERANCES FRACTIONAL		NG	4/23/2021
ANGULAR: MACH: BEND: 1			
TWO PLACE DECIMAL			
THREE PLACE DECIMAL			
INTERPRET GEOMETRIC TOLERANCING PER:			
MATERIAL:			
FINISH:			
DO NOT SCALE DRAWING			







2021 DURANGO 8" SLOPE/10" LEVEL



PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
TROY PRODUCTS ANY REPRODUCTION
IN PART OR AS A WHOLE WITHOUT THE
WRITTEN PERMISSION OF TROY PRODUCTS
IS PROHIBITED.

SIZE	DWG. NO.	REV
B	CC-21DUR-0810	A
SCALE: 1:8		SHEET 1 OF 1

CC-21DUR-0810 - Bill of materials

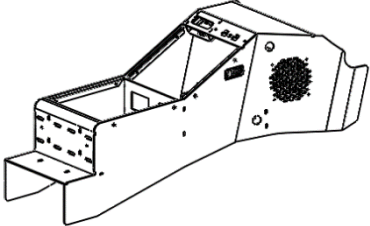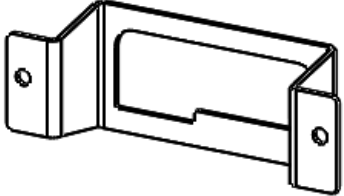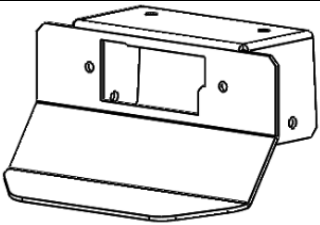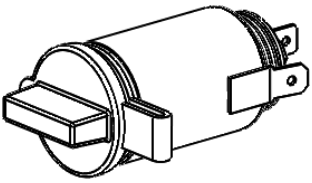PARTS			
Part #	Description	QTY.	Picture
CC-21DUR-0810	2021 DURANGO 8" SLOPE/10" LEVEL	1	
CC-21DUR-0810-#usb	USB/AUX bracket	2	
CC-21DUR-0810-#mb	Rear mounting bracket	1	
L3-AP1SET	DC OUTLET PLUG W/BLACK CAP	1	
HARDWARE			
Part #	Description	QTY.	Picture
1-FST-50-60800	1/4" Flat Washer Black Zinc	2	
1-FST-06-60830	1/4-20 x 3/4" Socket Screw - Black Zinc	4	
1-FST-35-31000	1/4-20 Nylon Insert Locknut - Zinc	2	
1-FST-06-10625	#10-32 x 5/8" Button Head Socket Screw - Blk Zinc	2	
1-FST-35-31150	#10-32 Nylon Insert Nut - Zinc	2	
AC-CC-875CAP	7/8" DOME PLUG - Black	2	
1-FST-10-10220	#6-32 X 1/2 ROUND HEAD PHILLIPS, ZI	3	