

A division of Troy Sheet Metal Works, Inc. 1024 South Vail Avenue, Montebello, CA 90640 www.troyproducts.com 323 720-4100

Part No: CC-21F1-0709-OS **Vehicle:** FORD F150 POLICE RESPONDER

Description: 2021 F150 16" Wide Body Console **Model year:** 2021




Tools Required: • 18 mm. socket • 1/8" allen key • 5/32" allen key

Troy Products recommends reading through all installation instructions prior to installation to check all necessary parts have been included (check against bill of materials table).

IMPORTANT NOTES


• This center console fits 7" of Troy Products face plate inserts on the slope area and 9" on the flat section. Console allows the transfer of the USB and 12V OEM modules from dashboard.

1.) Remove OEM bolts holding the center seat/console, driver and passenger seat bolts might need to be loosen/removed.

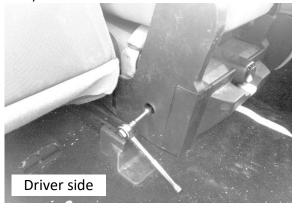





- 2.) Unplug electrical connectors from center seat/console and remove from vehicle (if equipped).
- 3.) Remove four OEM bolts holding the floor brackets using the 18mm. socket. Remove OEM floor brackets.

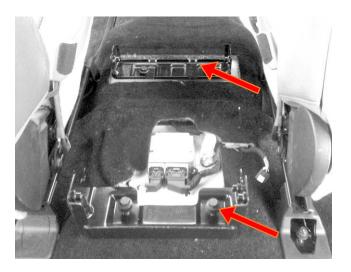


4.) Remove/pry out OEM USB and 12V modules from dashboard section, unplug harnesses. Depending on the vehicle's trim level, the dashboard might have been equipment with a wiring management clip instead of the 12V. outlet, if this is the case transfer the wiring clip to the passenger side cutout on the center console.

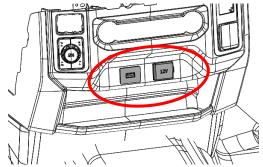

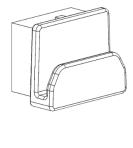


Wiring clip insert


Transfer the OEM USB and 12V or Wiring clip modules to center console by pressing them into their corresponding cutout.

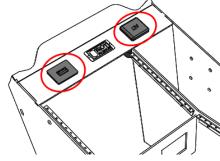


6.) Install Floor bracket using two of the OEM bolts from <u>Step 3</u>, do not tight bolts at this moment.

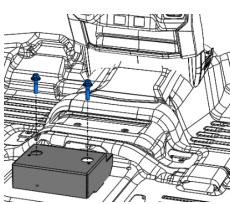


7.) Bring in center console and set it on floor bracket. Insert driver and passenger side wing panels as shown and secure them tightly with provided #10-32 X 1/2" screws using the 1/8" allen key. Insert and connect additional provided 12V and Dual USB outlets to passenger side wing prior securing it to console.

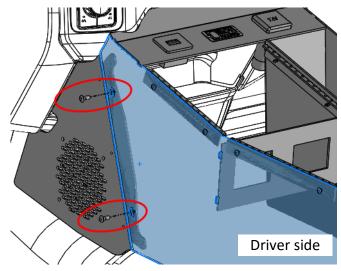


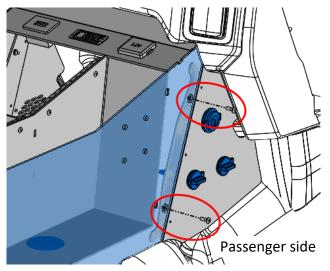

8.) Install remaining of two OEM bolts on center console front mounting points, do not tight bolts at this moment.

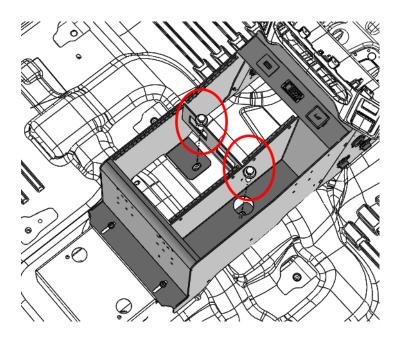


9.) Using the 5/32" allen key secure center console rear mounting points to floor bracket using provided 1/4-20 X 3/4" button head socket screws and 1/4" washers, do not tight bolts at this moment.

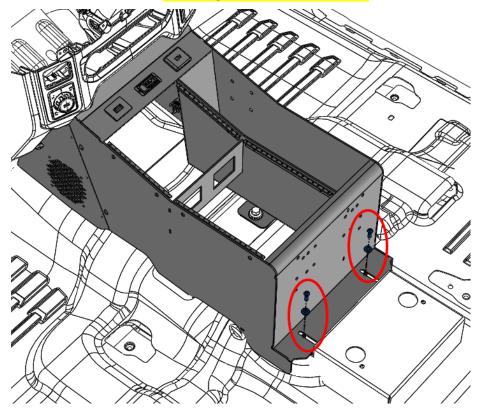

- 10.) Adjust console to match the dashboard waterfall profile and proceed to tight down OEM bolts at console front mounting points and to floor bracket, finally securely tight screws at console rear mount points to floor bracket.
- 11.) Connect OEM USB and 12V modules with their corresponding harnesses.
- 12.) Insert the 2" cap on access cutout of front mount point shown at Step 8.

Your installation is now complete. If you have any questions or suggestions for adding additional instructions, please call **Customer Service at (800) 700-8769.**

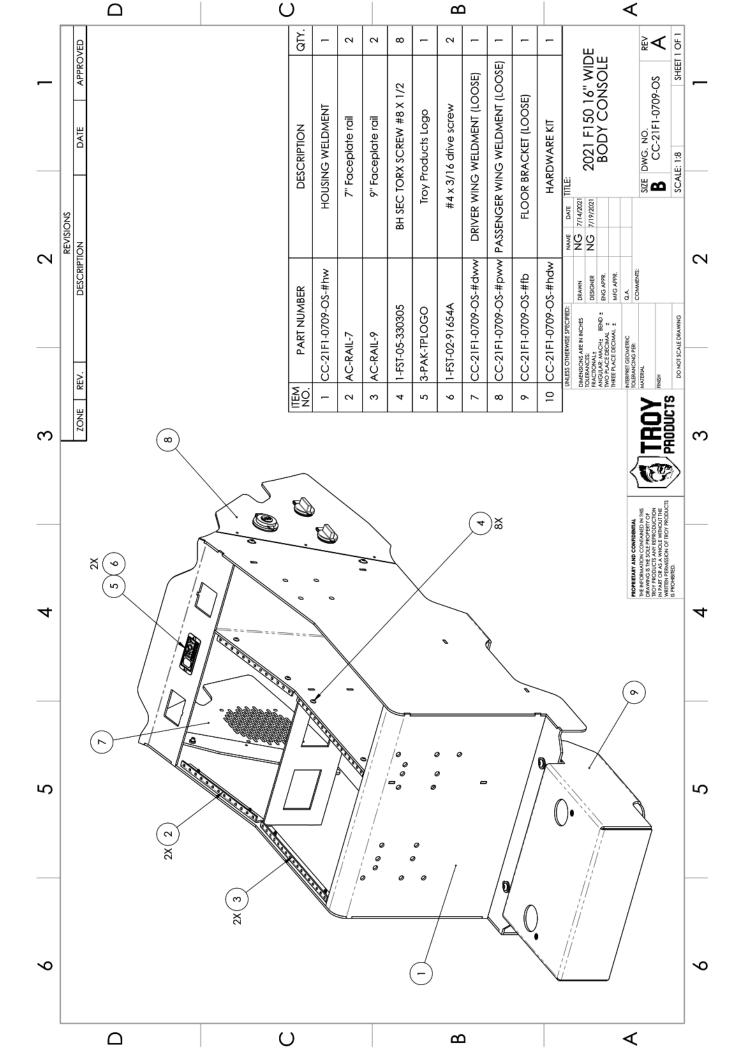

PARTS				
Part #	Description	QTY.	Picture	
CC-21F1-0709-OS	2021 F150 16" WIDE BODY CONSOLE	1		
CC-21F1-0709-OS-#dww	DRIVER WING WELDMENT	1		
CC-21F1-0709-OS-#pww	PASSENGER WING WELDMENT	1		
CC-21F1-0709-OS-#fb	FLOOR BRACKET	1		

HARDWARE				
Part #	Description	QTY.	Picture	
AC-DUALUSB	DUAL USB PORT	1		
L3-AP1SET	DC OUTLET PLUG W/BLACK CAP	2		
AC-CC-2CAP	DOME CAP, Ø2	1		
1-FST-06-60830	#1/4-20 X 3/4" BH SOCKET SCREW	2		
1-FST-50-60800	1/4" FLAT WASHER, BLACK	2		
1-FST-06-65620	#10-32 X 1/2" BH SOCKET SCREW	4		