



Jan 25, 2022

Revision 0

A division of Troy Sheet Metal Works, Inc.
1024 South Vail Avenue, Montebello, CA 90640
www.troyproducts.com 323 720-4100

Part No: CC-21TH-XXXX-DM

Vehicle: Chevrolet Tahoe



Description: Direct mount center consoles

Model year: 2021

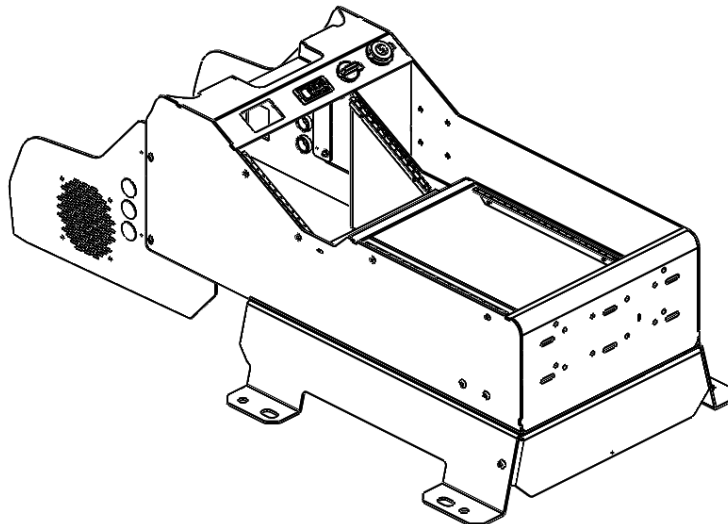
Troy Products recommends reading through all installation instructions prior to installation to check that all necessary parts have been included.

IMPORTANT NOTES:

- Consoles are not compatible with civilian Tahoe models without considerable modification vehicle.
- These instructions are applicable for various sizes of 2021 Tahoe direct mount consoles, pictures on this guide might look slightly different from the actual received parts (CC-21TH-0711-OS-DM model shown.)
- All Bill of materials parts for available consoles are listed in this document, compare received parts with corresponding parts list. Hardware kit is the same across available direct mount consoles.

Tools Required: T55 socket or wrench 5/32" Allen key 3/32 Allen key 7/16 socket/wrench

Hardware pack is located inside a resealable plastic bag in the packaging cardboard box.















Quick start Guide

1. Direct mount consoles require of base brackets to be installed at inner front seat mount points.
2. Seat spacers are to be installed at outer front seat mount points.
3. Consoles are to be installed on formed base of brackets.







CC-21TH-XXXX-DM

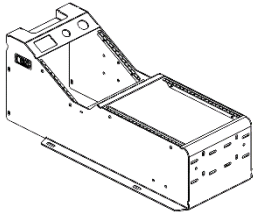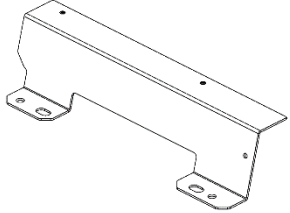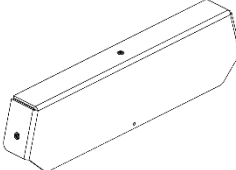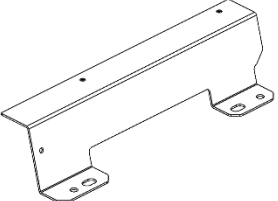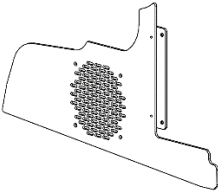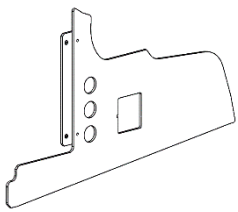BILL OF MATERIALS







CC-21TH-0711-DM - PARTS			
Part number: CC-21TH-0711-DM-#hw Description: HOUSING WELDMENT QTY: 1		Part number: CC-21TH-0711-DM-#fd Description: FLOOR BRACKET, DRIVER QTY: 1	
Part number: CC-21TH-0711-DM-#fr Description: FLOOR BRACKET, REAR QTY: 1		Part number: CC-21TH-0711-DM-#fp Description: FLOOR BRACKET, PASSENGER QTY: 1	
Part number: CC-21TH-1008-#fpd Description: FRONT DRIVER SIDE PANEL QTY: 1		Part number: CC-21TH-1008-#fpp Description: FRONT PASSENGER SIDE PLATE QTY: 1	

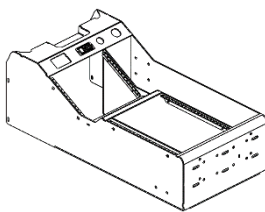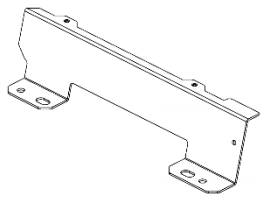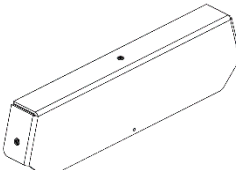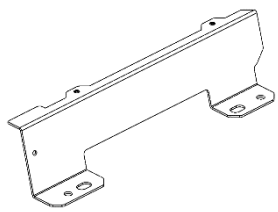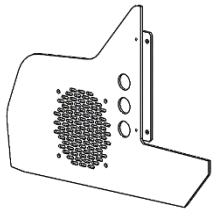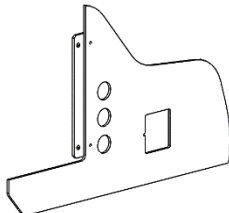CC-21TH-0711-OS-DM (WIDE BODY VERSION) - PARTS			
Part number: CC-21TH-0711-OS-DM-#hw Description: HOUSING WELDMENT QTY: 1		Part number: CC-21TH-0711-OS-DM-#fd Description: FLOOR BRACKET, DRIVER QTY: 1	
Part number: CC-21TH-0711-DM-#fr Description: FLOOR BRACKET, REAR QTY: 1		Part number: CC-21TH-0711-OS-DM-#fp Description: FLOOR BRACKET, PASSENGER QTY: 1	
Part number: CC-21TH-1008-OS-#fpd Description: FRONT DRIVER SIDE PANEL QTY: 1		Part number: CC-21TH-1008-OS-#fpp Description: FRONT PASSENGER SIDE PLATE QTY: 1	

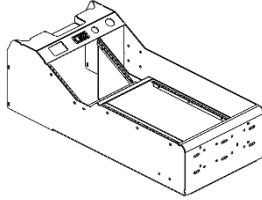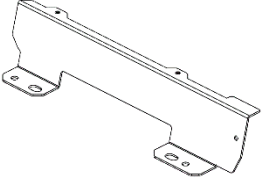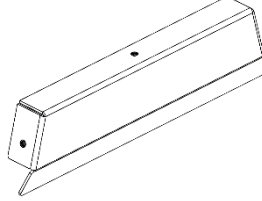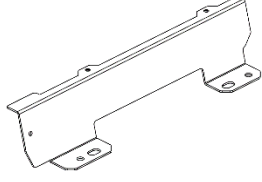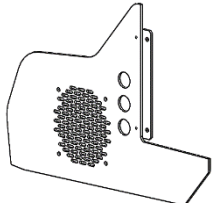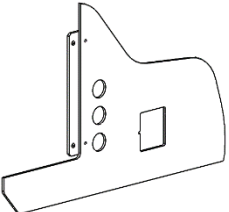CC-21TH-0713-OS-DM (WIDE BODY VERSION) - PARTS









Part number: CC-21TH-0713-OS-DM-#hw Description: HOUSING WELDMENT QTY: 1		Part number: CC-21TH-0713-OS-DM-#fd Description: FLOOR BRACKET, DRIVER QTY: 1	
Part number: CC-21TH-0713-DM-#fr Description: FLOOR BRACKET, REAR QTY: 1		Part number: CC-21TH-0713-OS-DM-#fp Description: FLOOR BRACKET, PASSENGER QTY: 1	
Part number: CC-21TH-1008-OS-#fpd Description: FRONT DRIVER SIDE PANEL QTY: 1		Part number: CC-21TH-1008-OS-#fpp Description: FRONT PASSENGER SIDE PLATE QTY: 1	

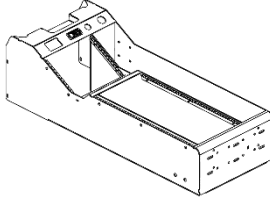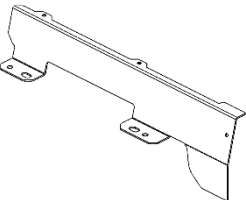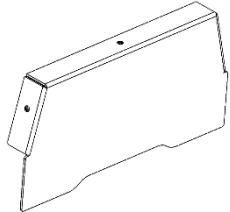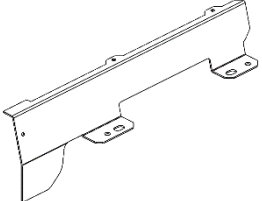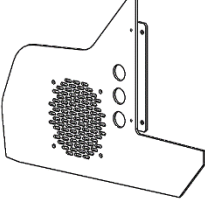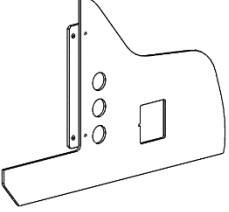CC-21TH-0718-OS-DM (WIDE BODY VERSION) - PARTS

Part number: CC-21TH-0718-OS-DM-#hw Description: HOUSING WELDMENT QTY: 1		Part number: CC-21TH-0718-OS-DM-#fd Description: FLOOR BRACKET, DRIVER QTY: 1	
Part number: CC-21TH-0718-DM-#fr Description: FLOOR BRACKET, REAR QTY: 1		Part number: CC-21TH-0718-OS-DM-#fp Description: FLOOR BRACKET, PASSENGER QTY: 1	
Part number: CC-21TH-1008-OS-#fpd Description: FRONT DRIVER SIDE PANEL QTY: 1		Part number: CC-21TH-1008-OS-#fpp Description: FRONT PASSENGER SIDE PLATE QTY: 1	

HARDWARE

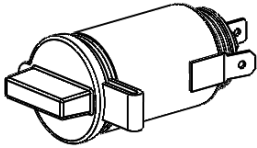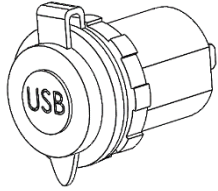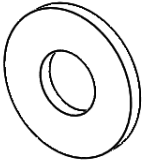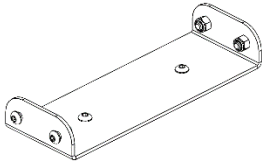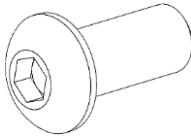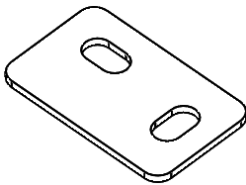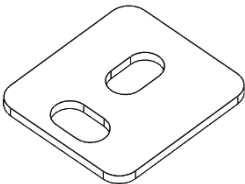(Hardware is common across direct mount consoles)



Part number: L3-AP1SET Description: DC OUTLET PLUG W/BLACK CAP QTY: 1		Part number: AC-DUALUSB Description: DUAL USB PORT QTY: 1	
Part number: 1-FST-50-60800 Description: 1/4" FLAT WASHER, BLACK QTY: 5		Part number: AC-CC-875CAP Description: 7/8" DOME PLUG - Black QTY: 6	
Part number: AC-CC-EBKT-SD Description: CONSOLE BRACKET QTY: 1		Part number: AC-TSSCR25 Description: FACE PLATE SCREWS W/ BIT QTY: 1	
Part number: 1-FST-06-60835 Description: #1/4-20 X 7/8" BH SOCKET SCREW QTY: 7		Part number: 1-FST-06-60420 Description: #8-32 X 1/2" BH SOCKET SCREW QTY: 4	
Part number: FM-21TH-#fos Description: FRONT OUTSIDE SPACER QTY: 2		Part number: FM-21TH-#ros Description: REAR OUTSIDE SPACER QTY: 2	

Preparation

- 1.) Pull out and disconnect OEM USB module out of dashboard.



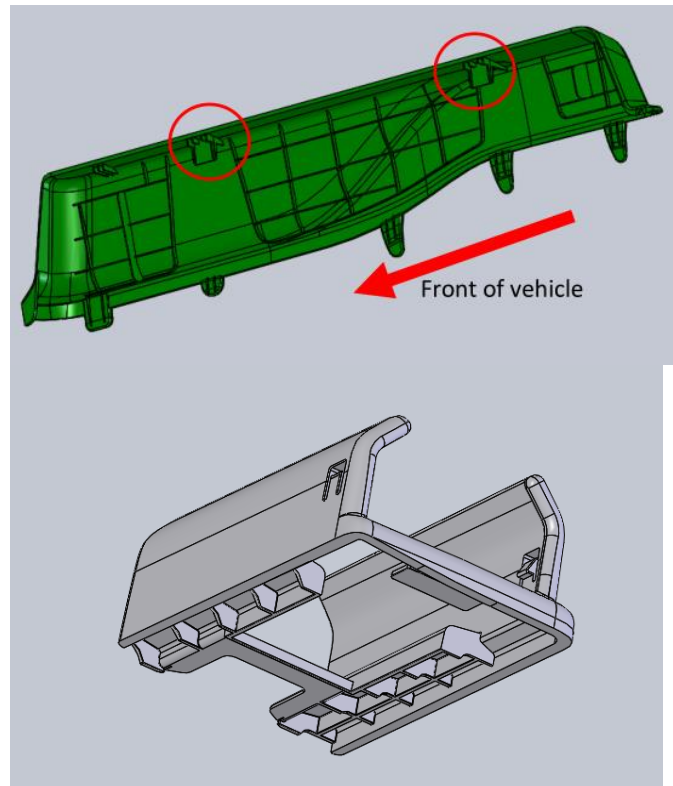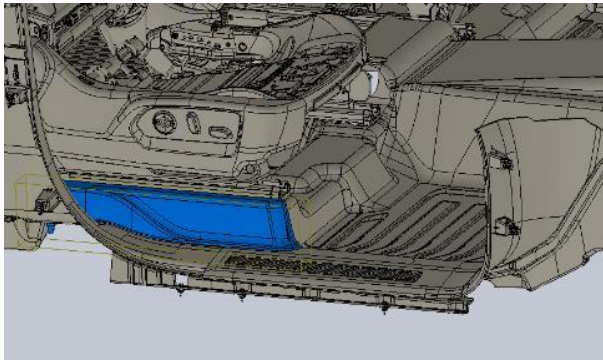
- 2.) Remove OEM plastic trim from outboard sides of front seat rails by pulling on trim, being careful not to break metal mounting pins. Inside of trim is pictured below; remove by pulling upward. If pins don't snap free from trim, they can be removed from mounting slots using two screwdrivers and re-inserted onto plastic trim posts.




- 3.) Remove front driver and passenger seats bolts, 8 in total using T55 driver.

Installation

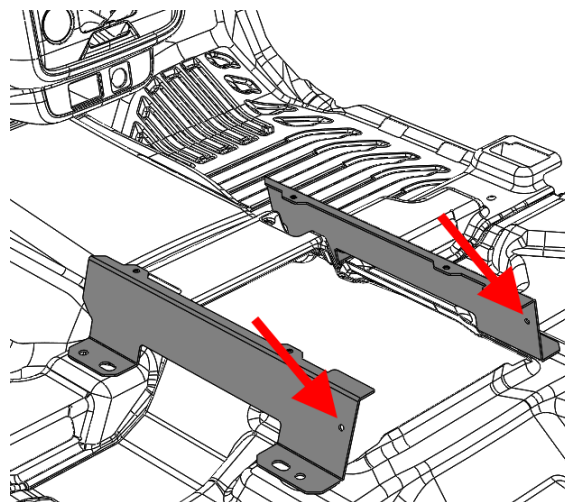
- 4.) Tilt seats toward outside of vehicle and slide in base brackets under seats as shown, (seats not shown for clarity, make sure screw hole from side brackets is set towards rear side of vehicle, marked by arrow) (depending on the purchased center console, base brackets might look slightly different.) Set seats back in positions and install back with OEM hardware. **Do not fully tight bolts at this time.**




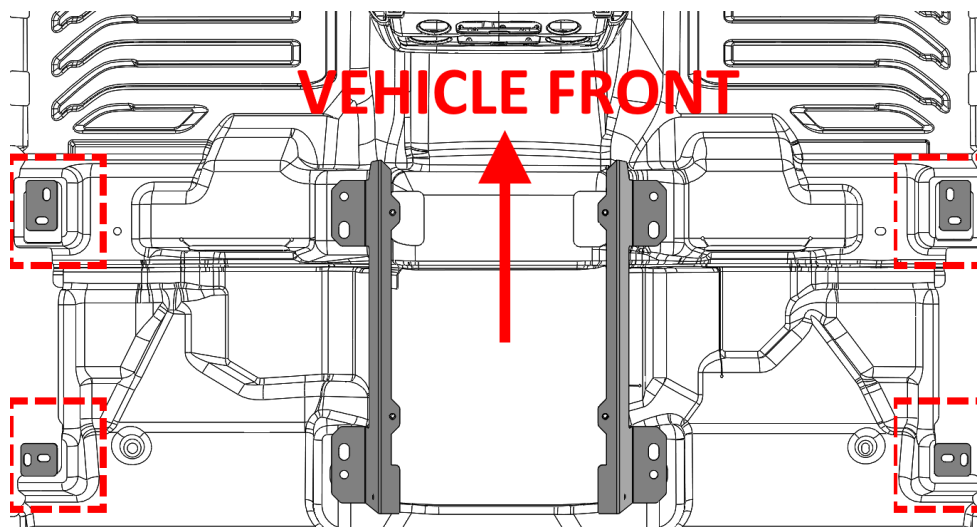
- 5.) Tilt seats towards inside of vehicle and insert spacers under outer mounting points of seats, noting orientation of spacers and location of locating pins in seat mounts. There are two rear spacers and two front spacers, one of each for each seat. Install back OEM bolts, **Do not fully tight bolts at this time.**



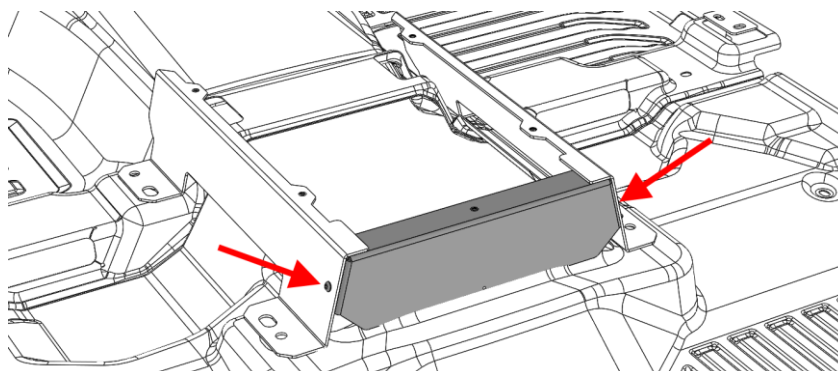
- 6.) Bring rear plate and attach it in between side base brackets using supplied 1/4-20 X 3/4 screws. **Do not tight screws at this time.**



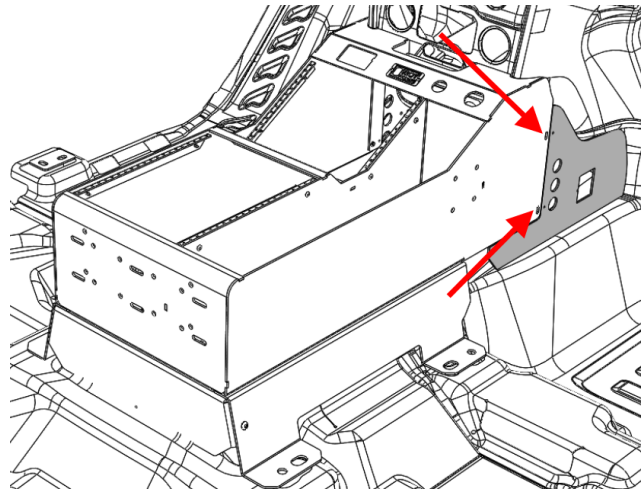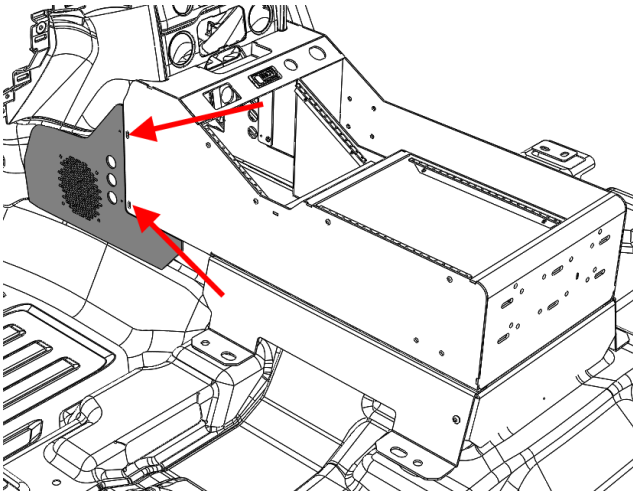
- 7.) Set center console on brackets base and securely attach front plates (#fpp, #fpd) to console housing using 3/32 hex driver and four #8-32 X 1/2 screws, provided. Note driver and passenger side profiles.



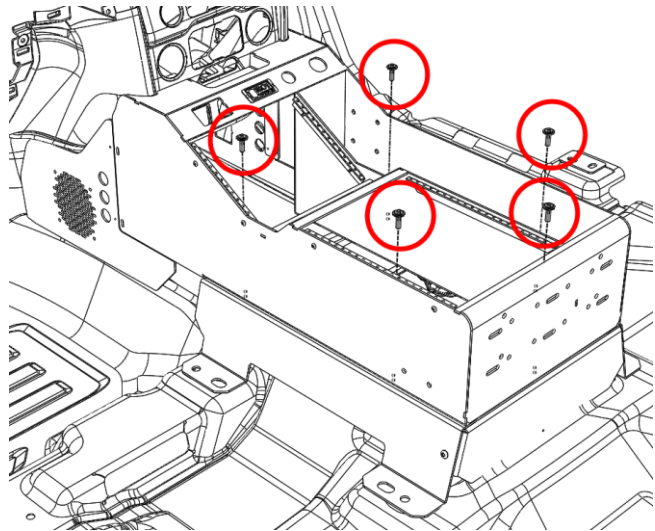
- 8.) Center console with base bracket and align it to dashboard using supplied 1/4-20 X 3/4 screws and washers, tightly secure it after all adjustments have been done. (Wide body console will have screw mounting points on the inside of side walls, while slim body console will have them on its outside walls.)



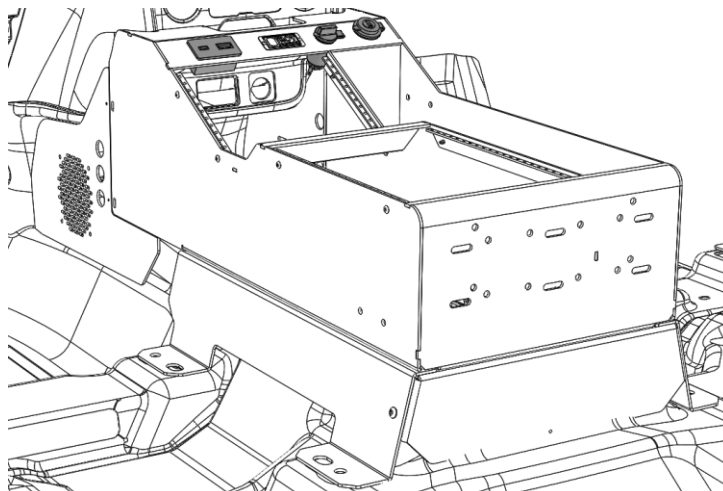- 9.) Transfer OEM USB module to console by inserting it in place as shown, connect USB module with its corresponding harness. Insert and connect provided 12V and dual USB modules to console.



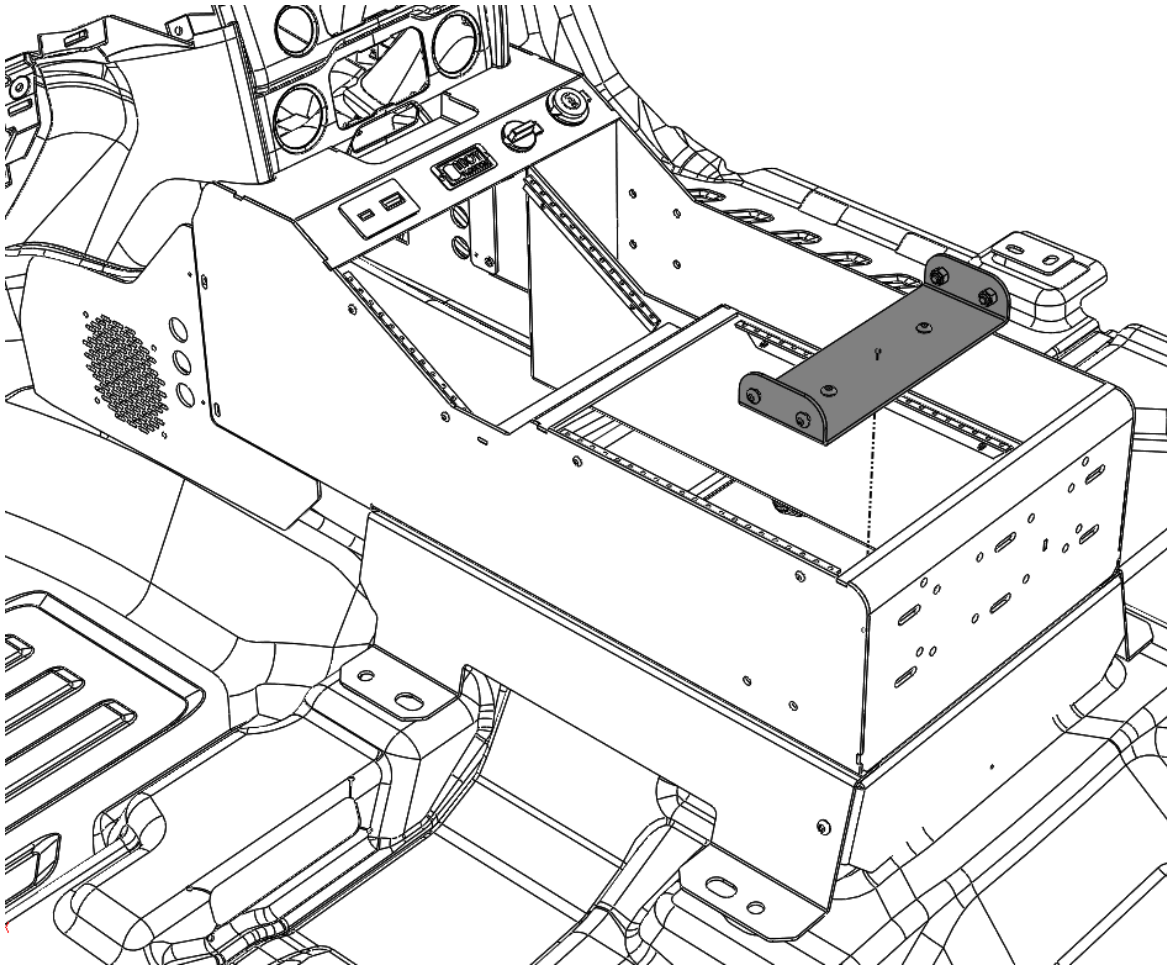- 10.) **OPTIONAL STEP**, install console bracket with supplied 1/4-20 X 5/8 button head screws and nylon lock nuts. Console bracket serves as a surface to mount wiring or electronic components.



- 11.) Go back and tightly secure screws from **Step 6**.
- 12.) Go back and tightly secure OEM bolts from **Steps 4 and 5** to manufacturers specifications.
- 13.) Re-insert front side plastic trims. Discard rear plastic trims.

Your installation is now complete. If you have any questions or suggestions for adding additional instructions, please call **Customer Service at (800) 700-8769**.