



TROY PRODUCTS

INSTALLATION INSTRUCTIONS

Feb 4, 2014

Revision 0

A division of Troy Sheet Metal Works, Inc.
1024 South Vail Avenue, Montebello, CA 90640
www.troyproducts.com 800 700-8769


Part No: CC-HDWB-XX
Description: HD wide body console 20", 25", 30"

I.) Remove O.E.M. floor plate and install Troy floor plate:

Note: Please follow installation instruction provided with your Troy floor plate.

II.) Install Troy Console:

- 1.) Place console on floor plate and align console slot end holes with slot end holes on floor plate.

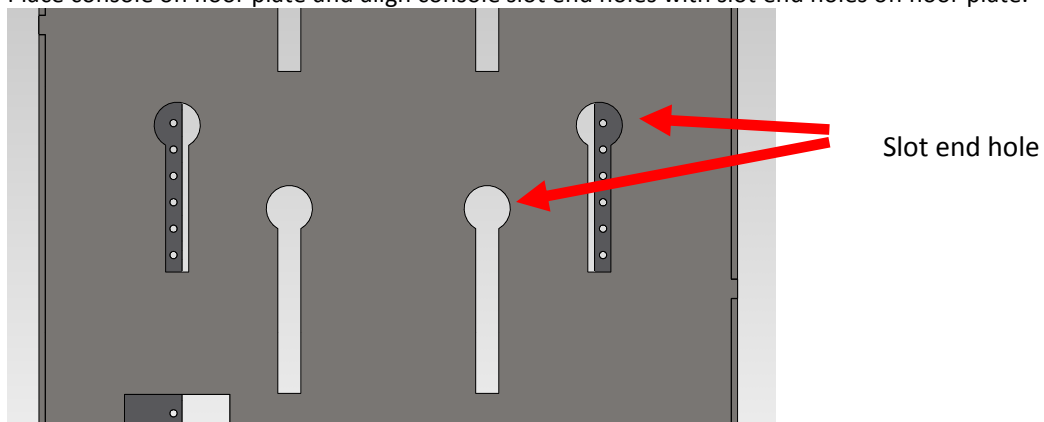


- 2.) Start 3/8-16 nut onto carriage bolt threads and insert bolt head through console slot and floor plate slot so carriage bolt faces up. Slide carriage bolt to center of slot. Repeat with all (4) carriage bolts.
- 3.) Reconnect any DC outlets to the console through dc pre-cutouts.
- 4.) Move console to desired position, position bolts at the center of the slots and securely tighten all fasteners.
- 5.) Any accessory face plate is provided with your console and should be mounted in the top-most portion of the face plate rails. Long radios and other components can be installed below this accessory plate to take advantage of the console depth. This accessory plate can be modified to accommodate customer installed switches, etc.

6.) Your installation is now complete. Below is an image of a fully installed console for you to use as reference.



Your installation is now complete. If you have any questions or suggestions for adding additional instructions, please call **Customer Service at (800) 700-8769.**

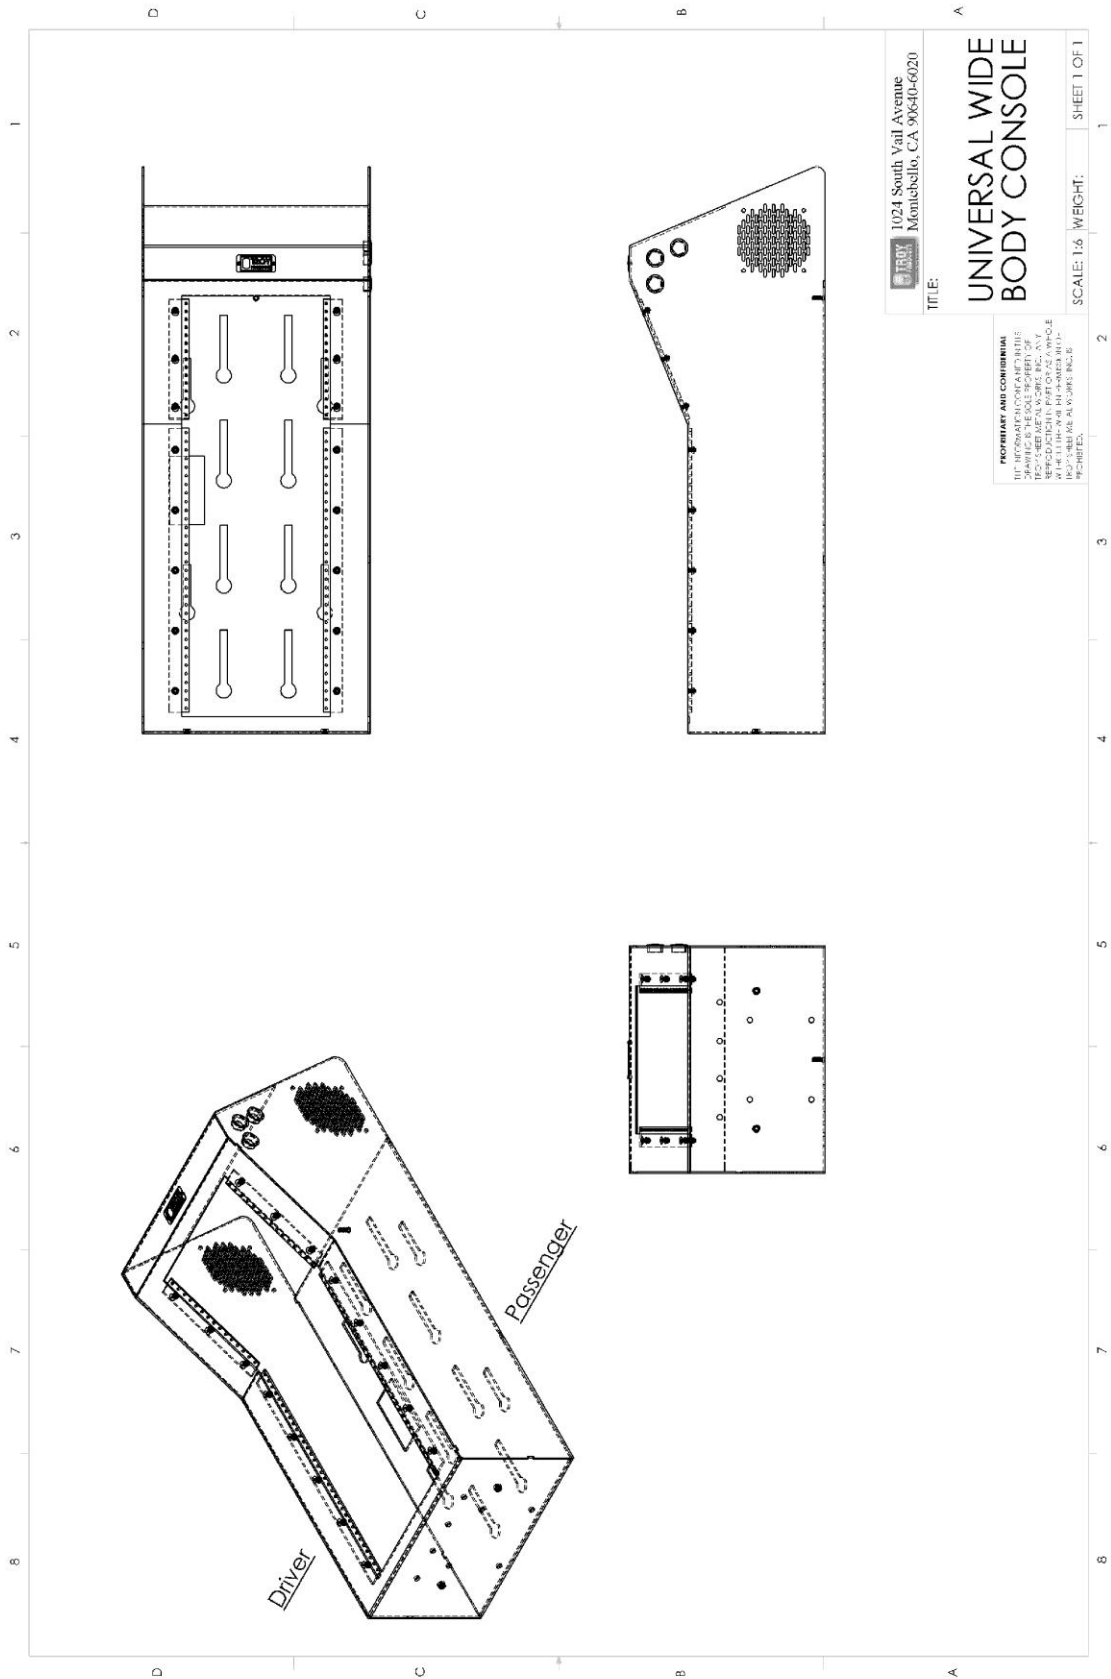

1024 South Vail Avenue
Montebello, CA 90640-6020

TITLE:

UNIVERSAL WIDE BODY CONSOLE

PROPRIETARY AND CONFIDENTIAL
THIS INFORMATION CONTAINS TRADE
SECRETS AND IS THE PROPERTY OF
TFC SYSTEMS, INC. ANY
REPRODUCTION OR DISCLOSURE
HEREOF WITHOUT THE WRITTEN
PERMISSION OF TFC SYSTEMS, INC. IS
PROHIBITED.

SCALE: 1/8" = 1' WEIGHT: SHEET 1 OF 1