



May 07, 2021

Revision 0

A division of Troy Sheet Metal Works, Inc.
1024 South Vail Avenue, Montebello, CA 90640
www.troyproducts.com 323 720-4100

Part No: CC-OH-DUR18
Description: DURANGO OVERHEAD CONSOLE

Vehicle: Dodge Durango
Model year: 2018+



Tools Required

- 1/4 drive
- T15 torx drive
- 3/8 drive or socket


Troy Products recommends reading through all installation instructions prior to installation to check all necessary parts have been included (check against bill of materials table).

IMPORTANT NOTES

- This overhead console fits one 4" and one 3" Troy Products face plate inserts.
- Overhead console does not allow for OEM lights to be transferred over.


Remove O.E.M. overhead and sub-panel

- 1.) Pull down and unsnap OEM overhead from headliner and unplug light harness, remove OEM overhead.
- 2.) Use the 1/4 drive along with the T15 torx drive to remove shown three OEM screws (do not discard screws, these are to be re-used at **Step 8**). Screws at sides are located inside plastic visor support clips, flip down plastic covers to reveal screws.

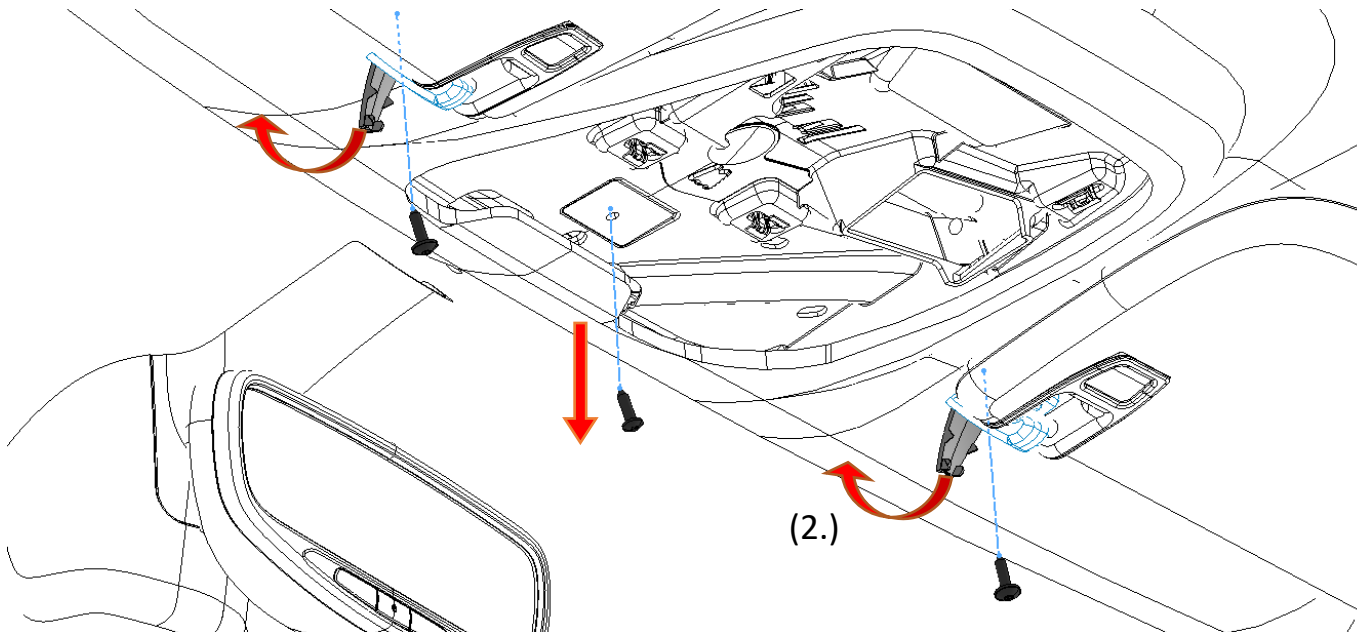


CC-OH-DUR18

3.) Harnesses have pins attached to sub-panel, push-in/detach shown harnesses pins from sub-panel.

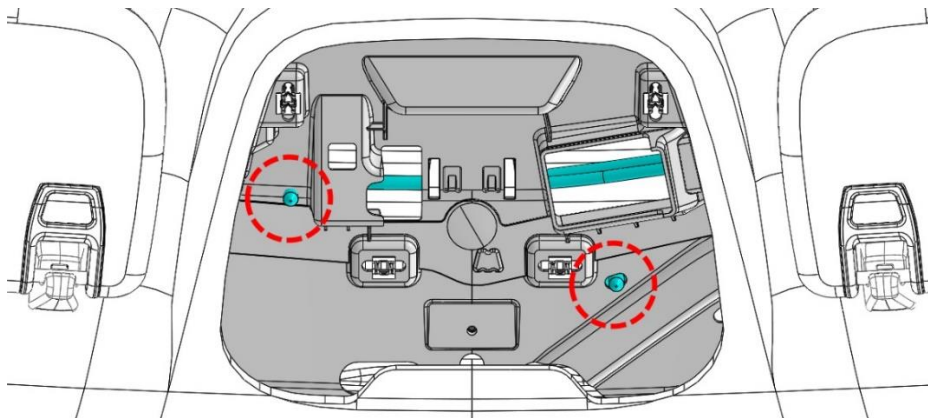


4.) Harnesses are glued at the inside of sub-panel, manage to find the glued locations, and carefully brake off the glue by pulling off on the harnesses.

5.) Once harnesses have been totally detached from sub-panel carefully pull sub-panel out from in between overhead liner and windshield as shown.

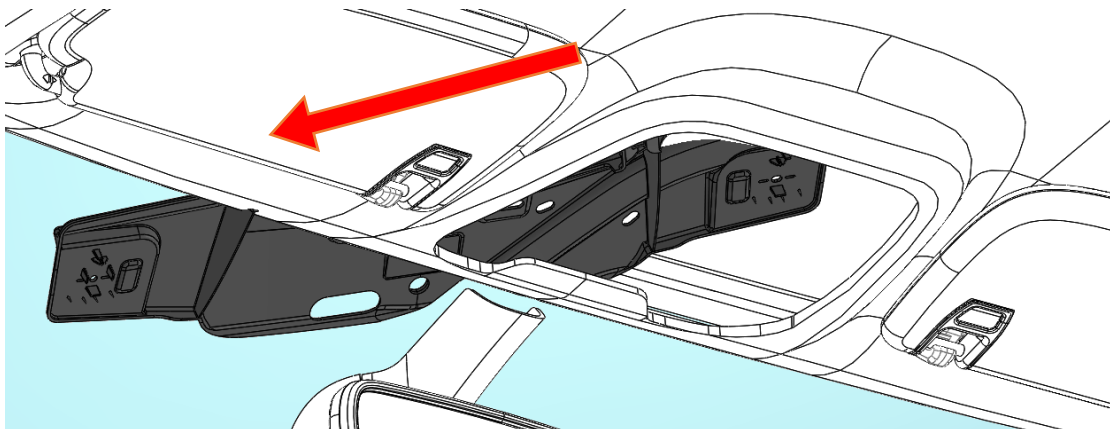


Install mounting bracket and overhead console


6.) Insert mounting bracket inside overhead liner as shown, make sure mounting bracket angle bend catches the inside gap of vehicle cross support once inside overhead liner.

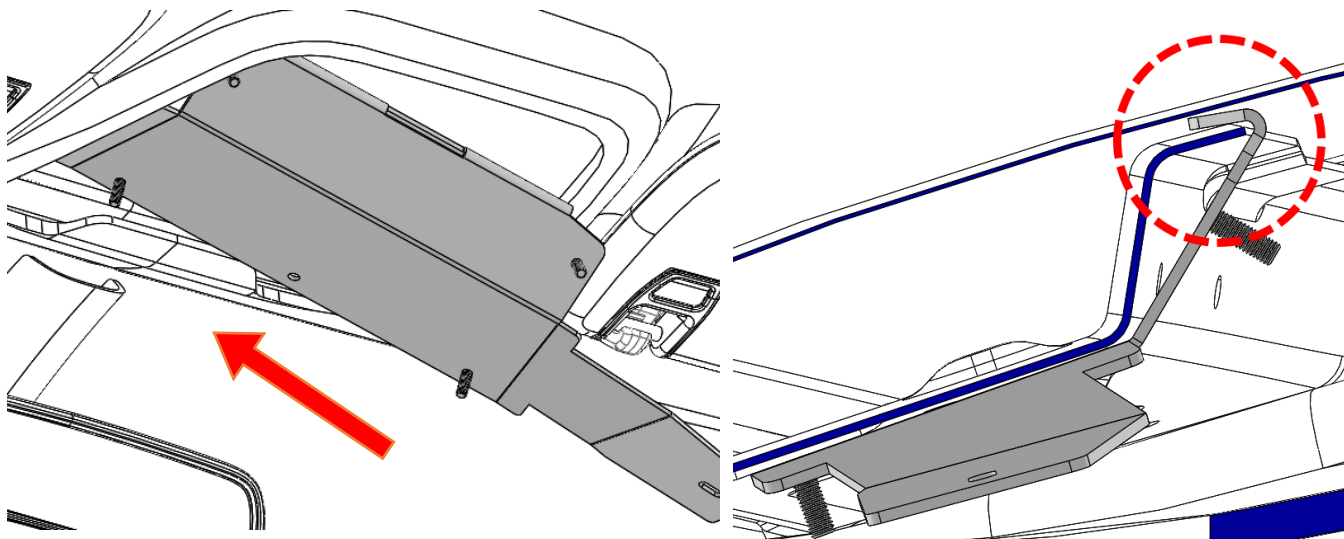


- 7.) Make sure mounting bracket gets placed behind harnesses.
- 8.) Secure mounting bracket to OEM retaining nut clips. Align mounting bracket clearance holes with OEM retaining nut clips and insert OEM screws from **Step 2** throughout mounting bracket.
- 9.) Insert halfway one screw at a time, once all screws are in place tightly secure all three screws. Flip up and close visor support clip covers.

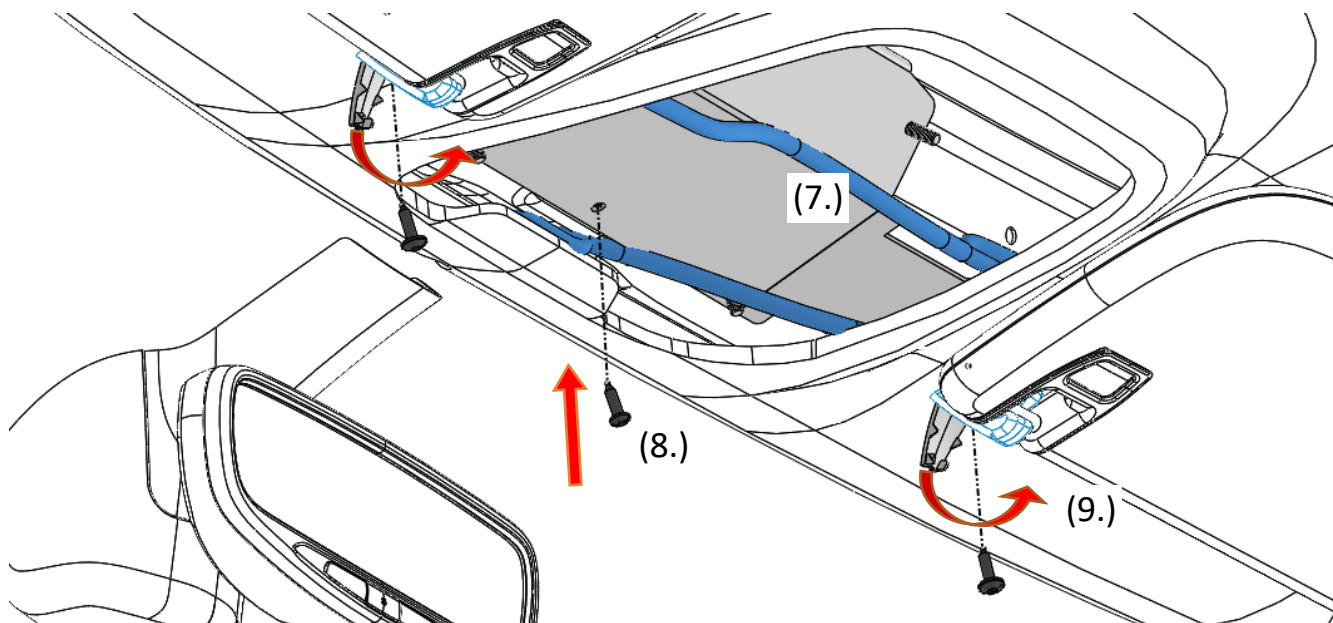

- 10.) Insert overhead console on threaded studs from mounting bracket, make sure vehicle harnesses get placed on overhead side cutouts.
- 11.) Slots punches on overhead will allow to slightly adjust overhead location. Once overhead is in desired position secure overhead to mounting bracket using the provided four #10 washers and #10-32 nylon hex nuts, use the 3/8 drive or socket.

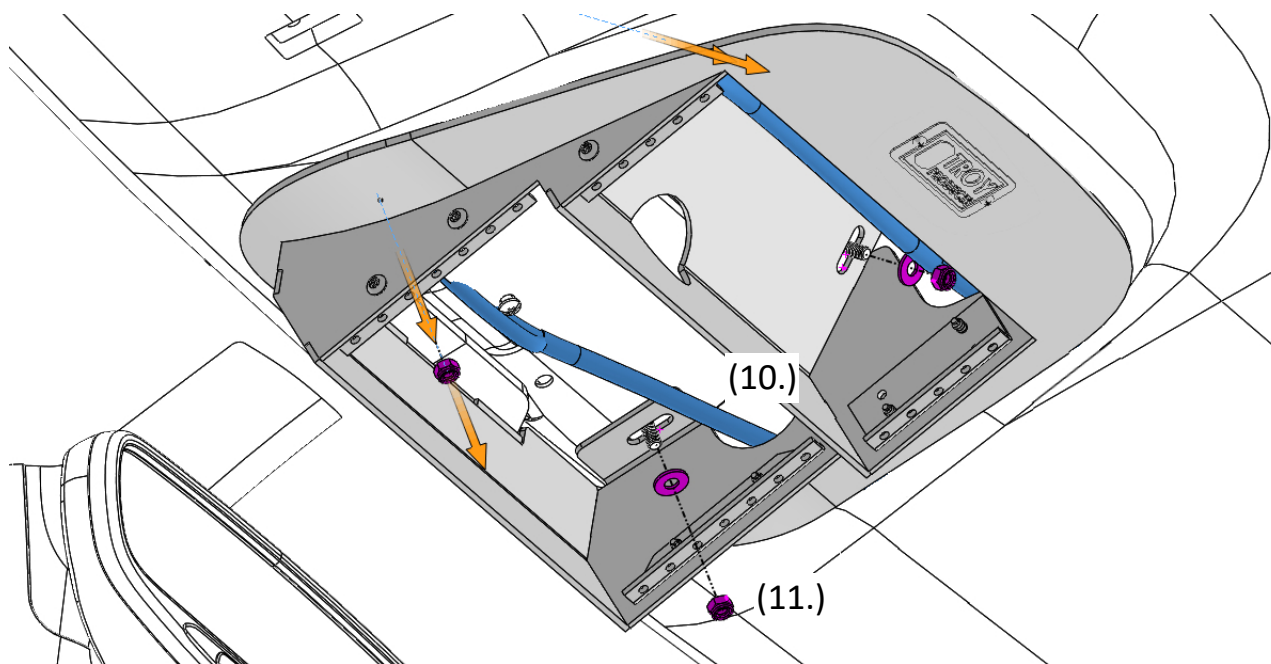

Your installation is now complete. If you have any questions or suggestions for adding additional instructions, please call **Customer Service at (800) 700-8769.**

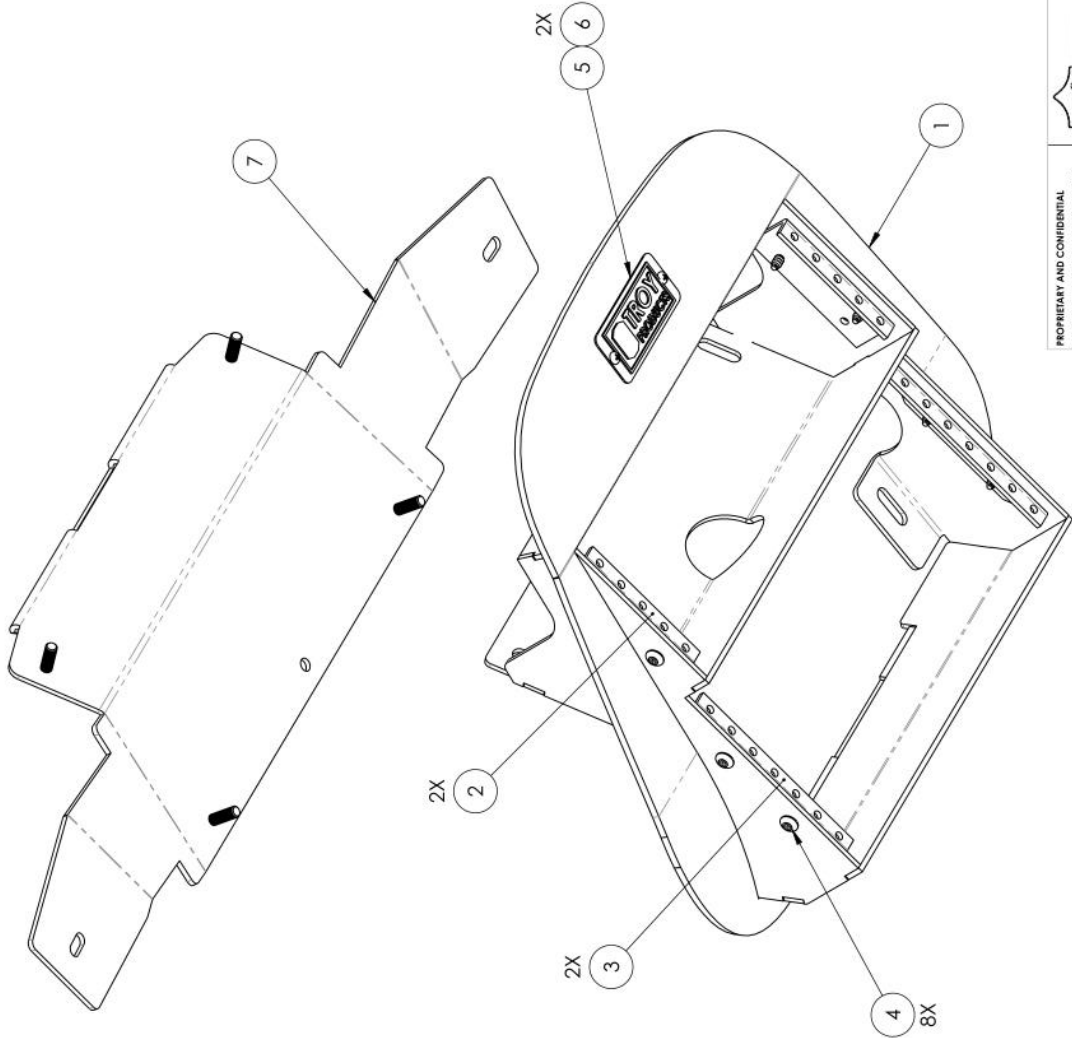

REVISIONS		
ZONE	REV.	DESCRIPTION

DATE	APPROVED

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	CC-OH-DUR18-#w	WELDMENT	1
2	AC-RAIL-3-TALL	3" FACE PLATE RAIL (TALL)	2
3	AC-RAIL-4-UV20	4" face plate rail	2
4	1-FST-05-330305	BH SEC TORX SCREW #8 X 1/2	8
5	3-PAK-TPLOGO	Troy Products Logo	1
6	1-FST-02-91654A	#4 x 3/16 drive screw	2
7	CC-OH-DUR18-#mb	MOUNTING BRACKET (SHIP LOOSE)	1
8	CC-OH-DUR18-#hwd	HARDWARE KIT	1

UNLESS OTHERWISE SPECIFIED:		TITLE:	
DIMENSIONS ARE IN INCHES	NAME	DATE	
TOLERANCES:	NG	5/6/2021	
FINISHES:	NG	5/6/2021	
ANGULAR MACH:	DESIGNER		
TWO PLACE DECIMAL	ENG APPR.		
THREE PLACE DECIMAL	MFG APPR.		
INTERPRET GEOMETRIC	Q.A.		
TOLERANCING PER:	COMMENTS:		
MATERIAL			
FINISH			
DO NOT SCALE DRAWING			



PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
TROY PRODUCTS. ANY REPRODUCTION
IN PART OR AS A WHOLE WITHOUT THE
WRITTEN PERMISSION OF TROY PRODUCTS
IS PROHIBITED.

**TROY
PRODUCTS**

**DURANGO OVERHEAD
CONSOLE**

SIZE	DWG. NO.	REV
B	CC-OH-DUR18	A
SCALE: 1:8		SHEET 1 OF 1

CC-OH-DUR-18 - Bill of materials

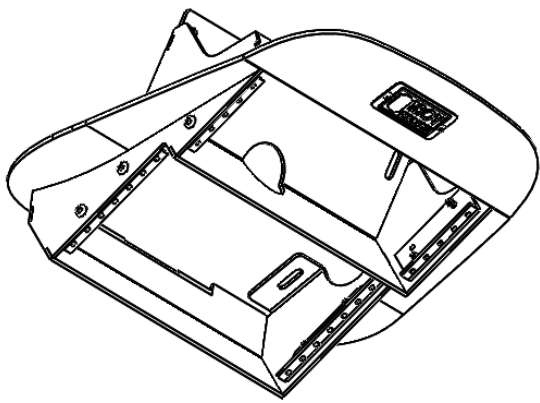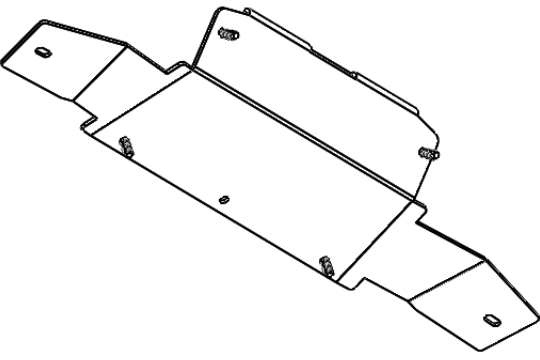PARTS			
Part #	Description	QTY.	Picture
CC-OH-DUR18	DURANGO OVERHEAD CONSOLE	1	
CC-OH-DUR18-#mb	MOUNTING BRACKET	1	

HARDWARE			
Part #	Description	QTY.	Picture
1-FST-35-31150	#10-32 Nylon Insert Nut	4	
1-FST-50-10600	#10 Flat Washer - Zinc	4	