

A division of Troy Sheet Metal Works, Inc.
1024 South Vail Avenue, Montebello, CA 90640
www.troyproducts.com 323 720-4100

Part No: CM-21TH
Description: Computer mount


Vehicle: Chevrolet Tahoe
Model year: 2021


Tools Required


5/32 allen key	7/16 socket
T55 driver	

Troy Products recommends reading through all installation instructions prior to installation to check all necessary parts have been included. To comply with manufacturer's safety ratings, all OEM self-threading bolts that are removed must be discarded and replaced with unused bolts at manufacturer's torque requirement.


- 1.) Remove plastic trim from front passenger seat rails by pulling upward. Trim mounting points are shown on inside of trim.

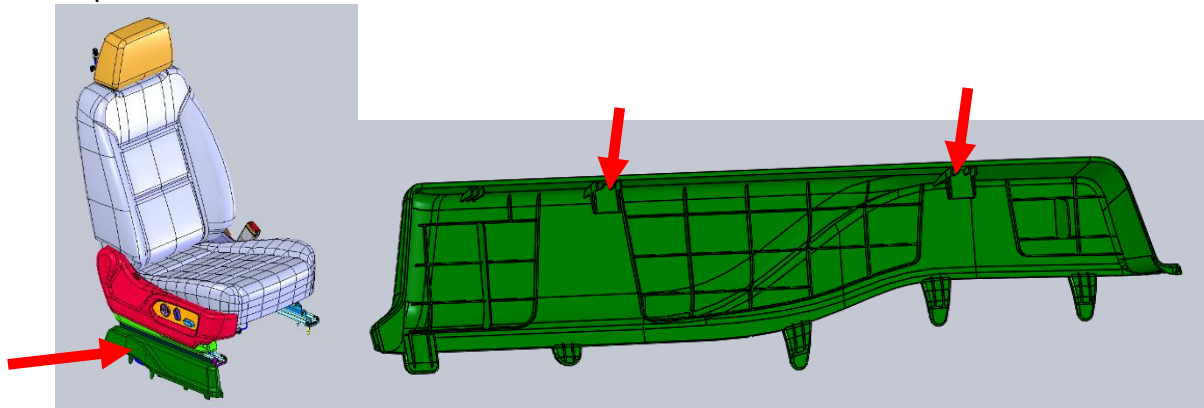


- 2.) Using a T55 driver, loosen rear mounting screws and remove front mounting screws on passenger seat.

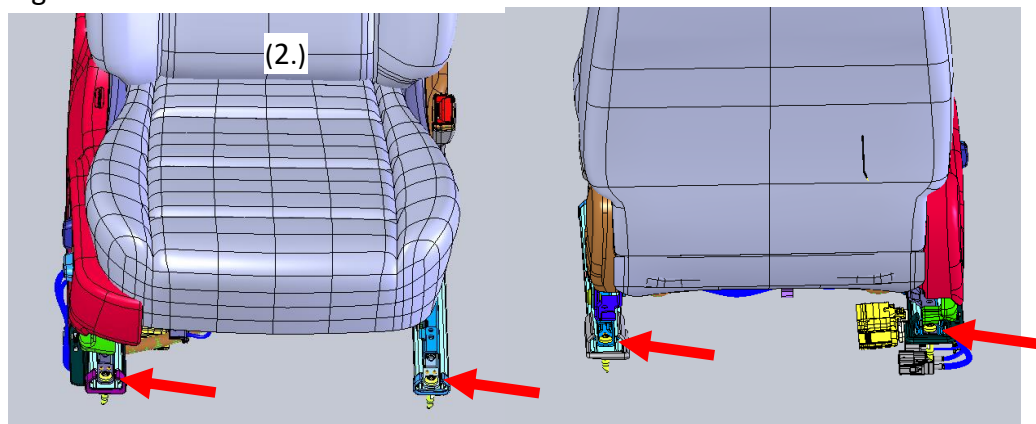


- 3.) Insert base as shown under passenger seat rails. Insert front two OEM seat fasteners to hold base in place. Leave fasteners loose.

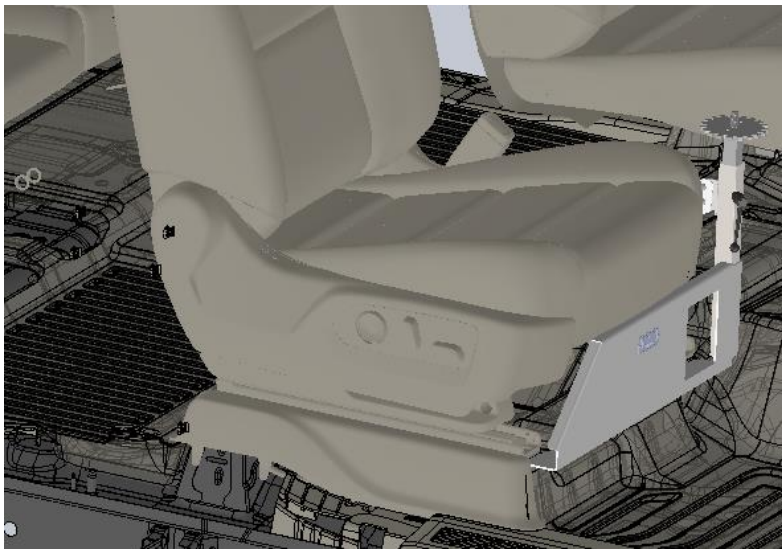

- 4.) Completely remove rear inside seat fastener using T55 driver. Insert z-brace (#zb) under rear inside seat rail and insert OEM fastener, leaving fastener loose.
 - a. Ensure z brace is on inside of base mounting tab as shown.

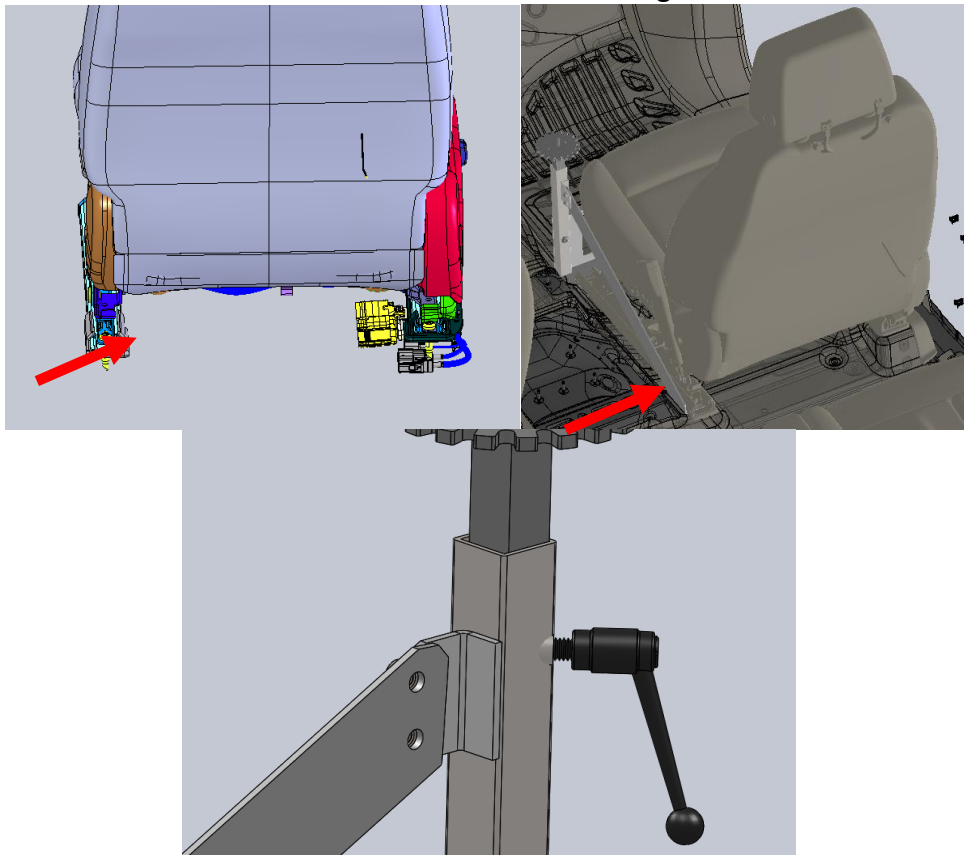


- 5.) Insert two provided 1/4-20x0.5 screws into PEM nuts as shown and tighten firmly using a 5/32 allen key.

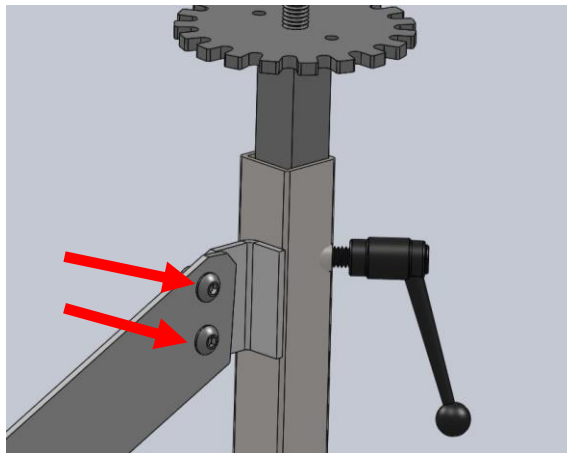

(5.)

6.) Tighten all four mount screws to OEM spec.




Your installation is now complete. If you have any questions or suggestions for adding additional instructions, please call **Customer Service at (800) 700-8769.**

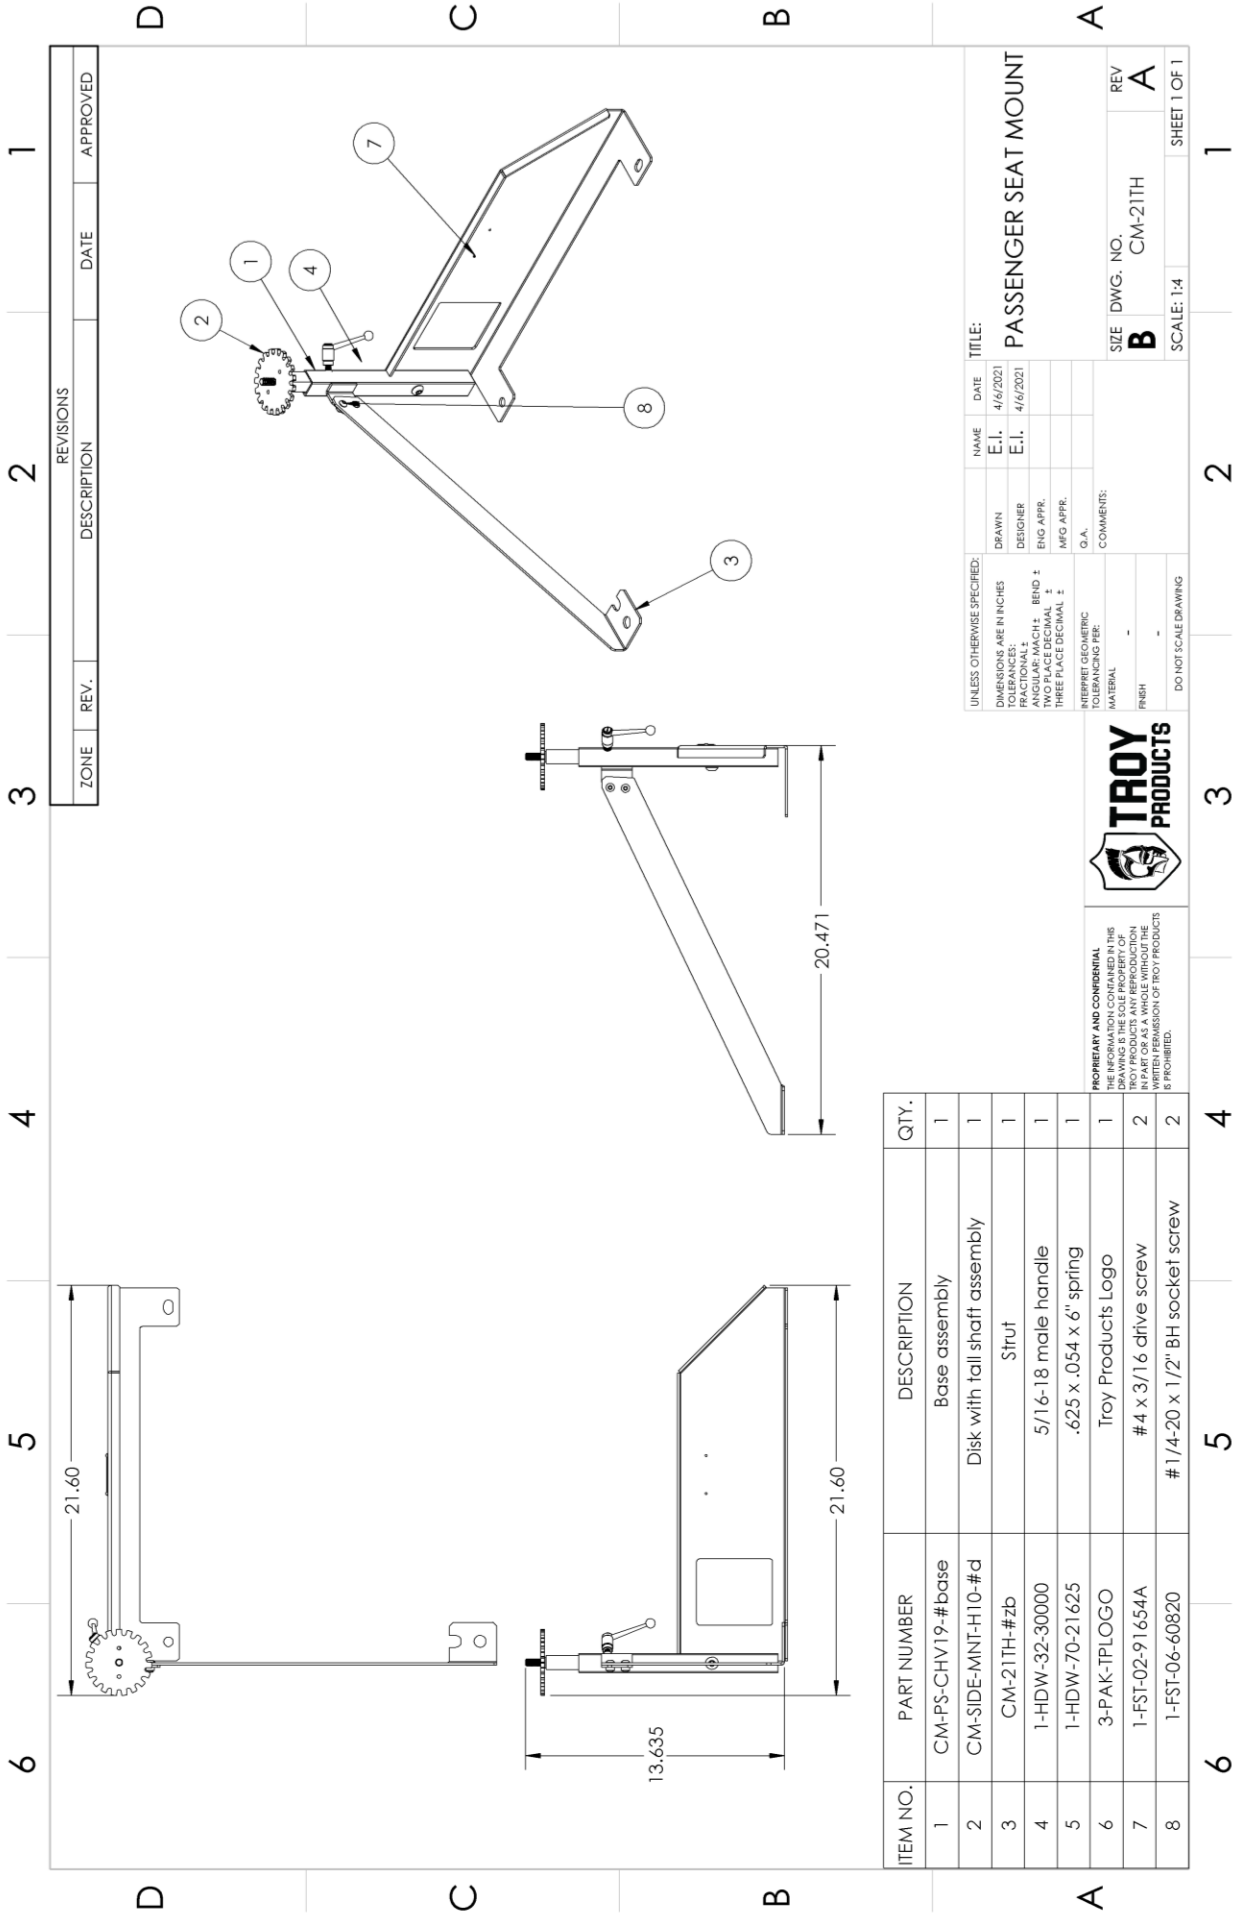


CM-21TH

BILL OF MATERIALS

A. Parts

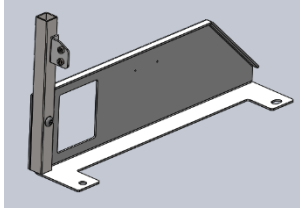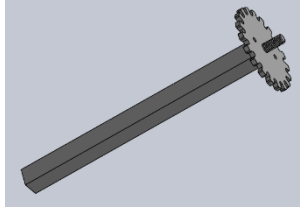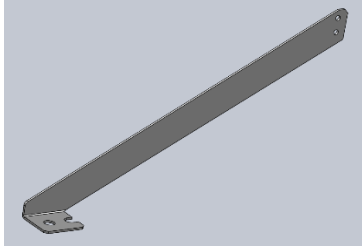Part #	Description	Qty.	Picture
CM-PS-CHV19-#base	Base Assembly	1	
CM-SIDE-MNT-H10-#d	Disk assembly	1	
CM-21TH-#zb	Z Brace	1	

B. Hardware

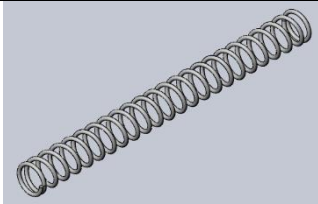1-HDW-32-30000	5/16 T-Handle	1	
1-HDW-70-21625	0.625 x 0.054 x 6" spring	1	
1-FST-06-60820	1/4-20x0.5 BHCS	2	