

A division of Troy Sheet Metal Works, Inc. 1024 South Vail Avenue, Montebello, CA 90640 www.troyproducts.com 323 720-4100

Part No: CP-21TH-R-DECK Vehicle: CHEVROLET TAHOE

Description: 2021 TAHOE REAR DECK **Model year:** 2021+



Tools Required:


Rivet gun with 1/4-20 nose piece

Allen keys: 5/32

Troy Products recommends reading through all installation instructions prior to installation to check all necessary parts have been included (check against bill of materials table.)

IMPORTANT NOTES


• This product must be installed with a Troy Products rear partition (sold separately).

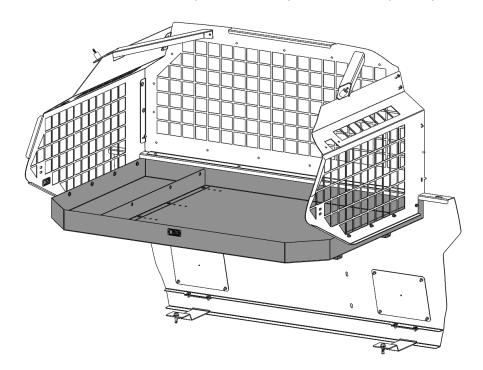

QuickStart Guide

- 1. Install 1/4-20 rivet nuts on rear partition side panels (4 per side).
- 2. Secure rear deck to side panels using provided hardware.
- 3. Secure rear deck to rear flange of partition using hardware from rear partition.


CP-21TH-R-DECK - BILL OF MATERIALS

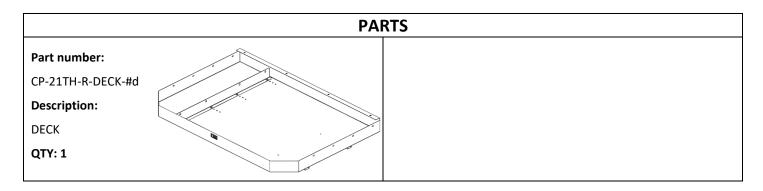


HARDWARE		
Part number:		Part number:
1-FST-50-60800		1-FST-06-60825
Description:		Description:
1/4" FLAT WASHER		1/4-20 X 5/8 BH SCREW
QTY: 8		QTY: 8
Part number:		
1-FST-43-25020		
Description:		
1/4-20 KNURLED RIVET NUT		
QTY: 8		

Prepare rear cage for installation_____


1.) Install provided 1/4-20 rivet nuts on lower edge holes from side panels of rear partition in the shown orientation (4 rivet nuts per side panel). Rivet nuts can also be installed on side panels prior installing rear partition.

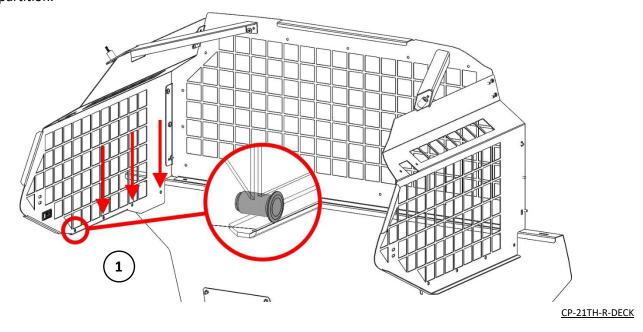

2.) Bring rear deck to rivet nut locations from side panels, secure deck with provided 1/4-20 screws and washers (4 per side).

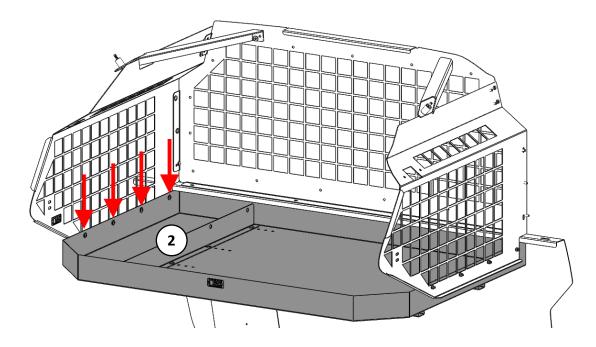

3.) Secure deck to rear flange of partition, (use four 1/4-20 X 5/8" button head screws and washers included with the rear partition hardware kit.)

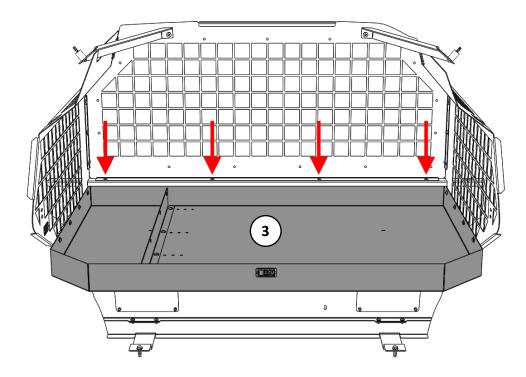

Your installation is now complete. If you have any questions or suggestions for adding additional instructions, please call **Customer Service at (800) 700-8769.**

