



December 27, 2022

Revision 0

*A division of Troy Sheet Metal Works, Inc.
1024 South Vail Avenue, Montebello, CA 90640
www.troyproducts.com 323 720-4100*

Part No: CP-2D-485616-WR
Description: 48X56X16 Weather Resistant Vault

Vehicle: FORD F150
Model year: 2021+



Troy Products recommends reading through all installation instructions prior to installation to check all necessary parts have been included (check against bill of materials table).


IMPORTANT NOTES

- This storage box installs directly to the existing mount points of 2021+ Ford F150 trucks by using the provided mounting brackets.

Tools Required:






- 3/8 Ratchet
- 5/32 Allen key
- Torx T50 bit
- 1/8 Allen key
- 7/16 Socket or Wrench




Hardware pack is located in one of the drawers inside a resealable plastic bag.

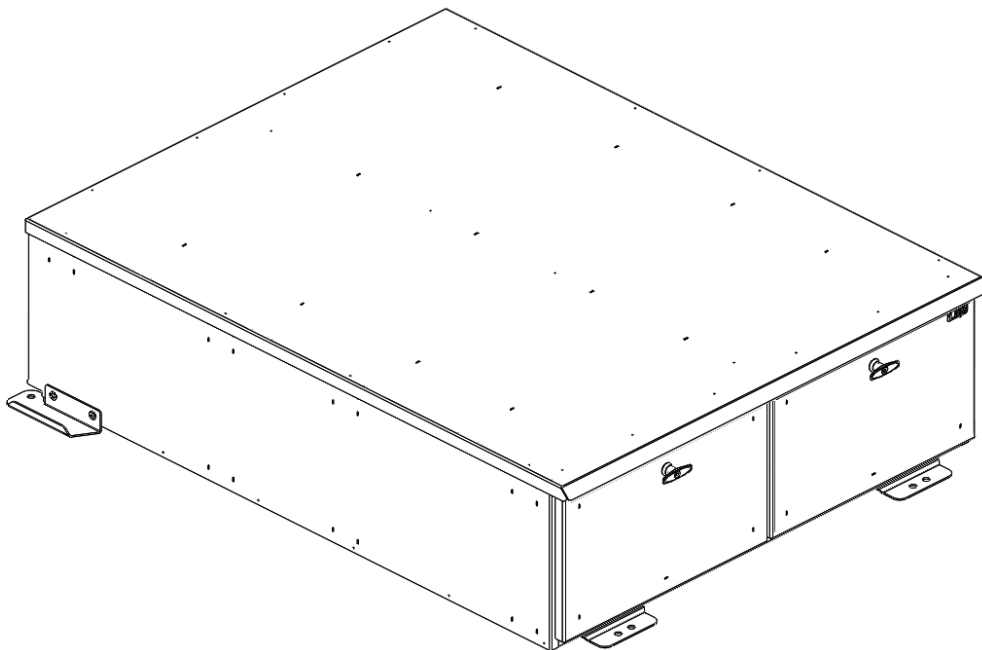


CP-2D-485616-WR

CP-2D-485616-WR - BILL OF MATERIALS

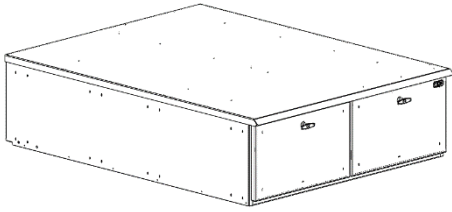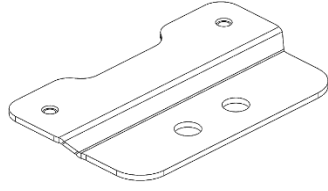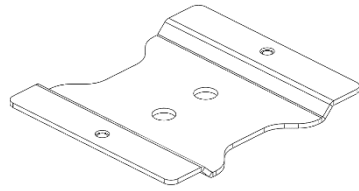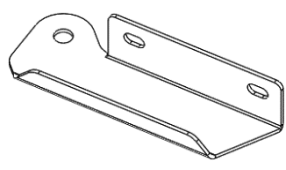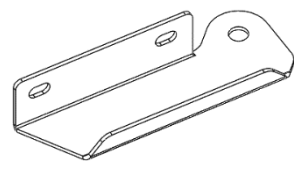
PARTS	
Part number: CP-2D-485616-WR Description: STORAGE VAULT QTY: 1 	Part number: CP-2D-485616-WR-#fmb Description: FRONT MOUNT BRACKET QTY: 2 
Part number: CP-2D-485616-WR-#mmb Description: MIDDLE MOUNT BRACKET QTY: 2 	Part number: CP-2D-485616-WR-#rdmb Description: REAR DRIVER MOUNT BRACKET QTY: 1 
Part number: CP-2D-485616-WR-#rpmb Description: REAR PASSENGER MOUNT BRACKET QTY: 1 	

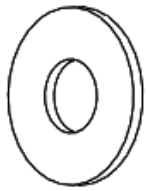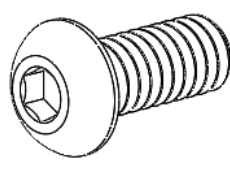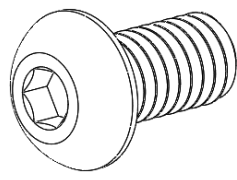HARDWARE	
Part number: 1-FST-50-60815 Description: 1/4" WASHER, BLACK ZINC QTY: 12 	Part number: 1-FST-06-60825-SS Description: 1/4-20 X 5/8, BH, STAINLESS STEEL QTY: 4 
Part number: 1-FST-06-51658-SS Description: 5/16-18 X 5/8, BH, STAINLESS STEEL QTY: 8 	


- 1.) Remove Marked OEM bolts from truck bed using the T50 torx bit and a ratchet.

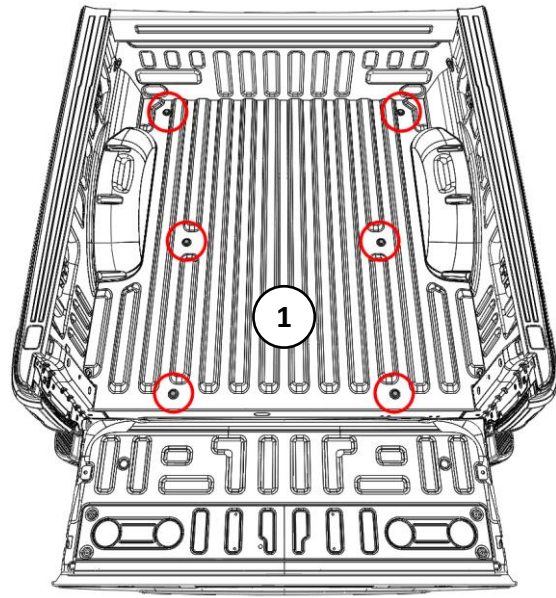


- 2.) Install front mount brackets using two of the previously removed OEM bolts, **DO NOT FULLY TIGHT BOLTS AT THIS TIME.**

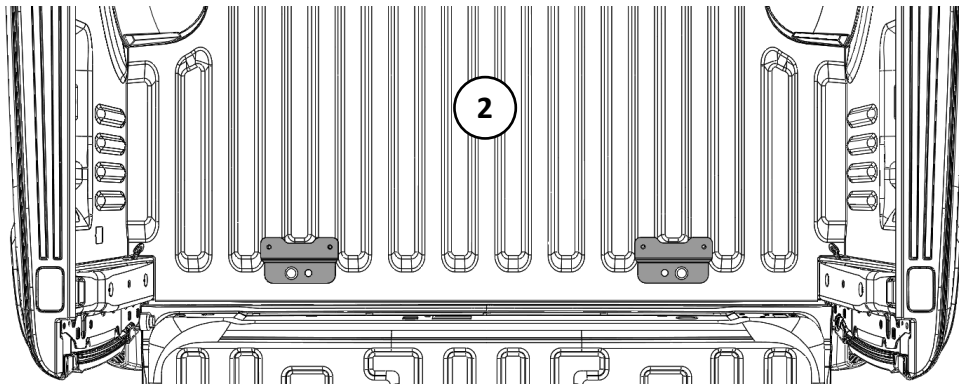


- 3.) Install middle mount brackets using two of the previously removed OEM bolts, **DO NOT FULLY TIGHT BOLTS AT THIS TIME.**

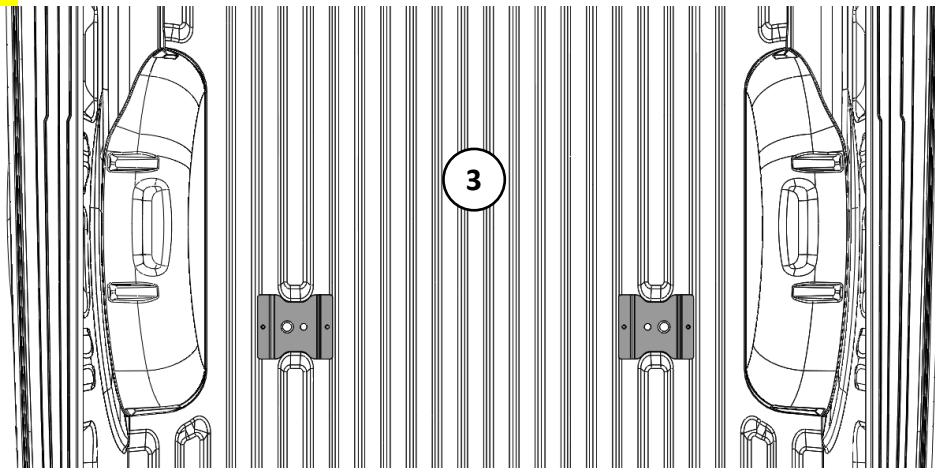


- 4.) Install rear mount brackets using two of the previously removed OEM bolts, **DO NOT FULLY TIGHT BOLTS AT THIS TIME.**

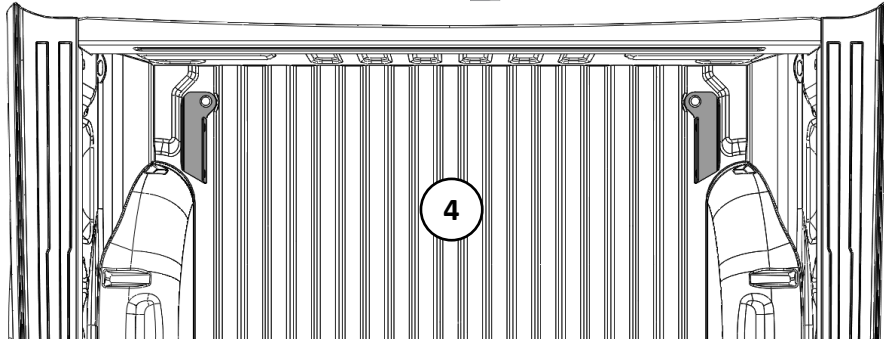

- 5.) Remove drawers from storage vault using the 5/32 Allen key and a 7/16 socket or wrench.
- 6.) Set vault housing on the trucks bed, slide housing towards the front end of vehicle. As the vault housing reaches the internal walls of rear brackets **SECURELY TIGHT DOWN THE OEM BOLTS**, make sure rear brackets are making good contact with the box outside walls.

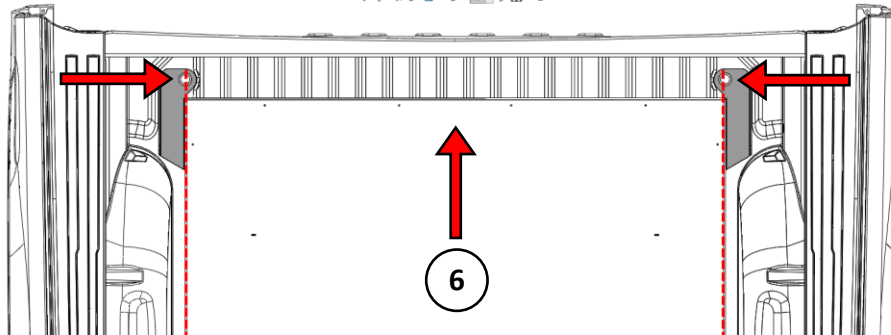


- 7.) Slide box towards the front of the vehicle until mount points from installation brackets align with mount holes of housing, side holes from rear mount brackets should align with housing side mount points.
- 8.) Tightly secure box to mount brackets with the provided hardware. Use the 1/8 Allen key to install the (4) 5/16-18 X 5/8 screws with washers at the front and middle mount bracket locations and use the 5/32 Allen key to install the (4) 1/4-20 X 5/8 screws at the rear bracket locations.

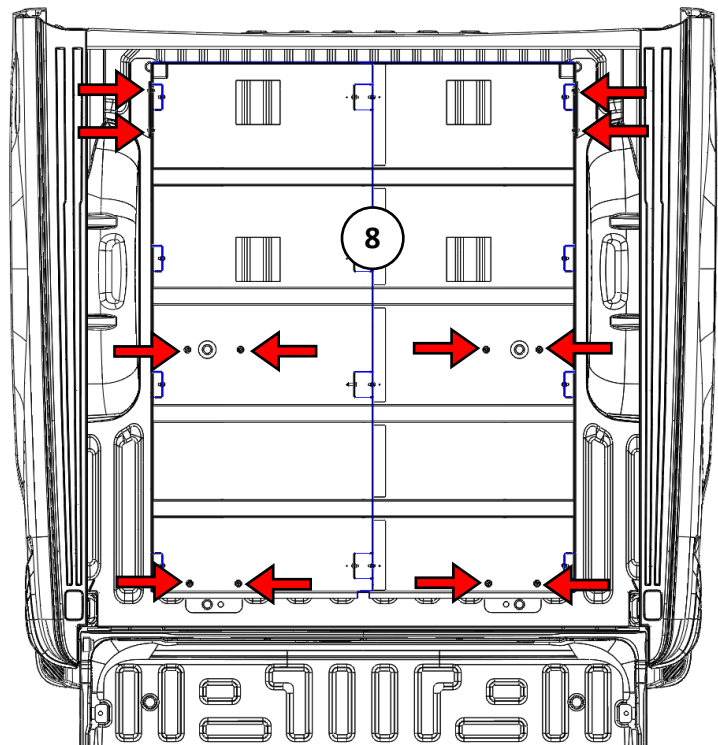


CP-2D-485616-WR

- 9.) Tightly secure OEM bolts to front and middle at shown mount brackets locations.

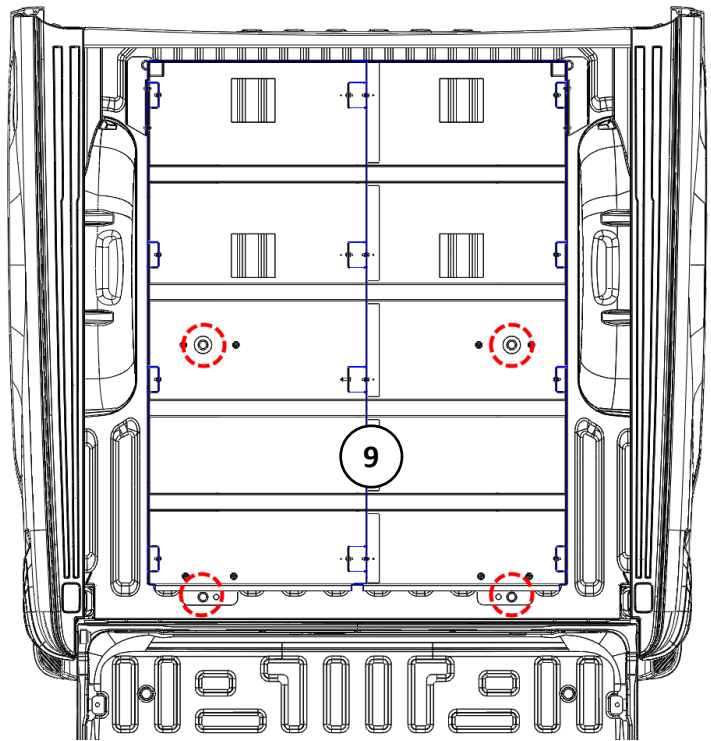

- 10.) Extend drawer slides from housing and re-install drawers with the removed hardware from **STEP 5**. Drawer with Troy Products logo is to be install on the passenger side of the box.

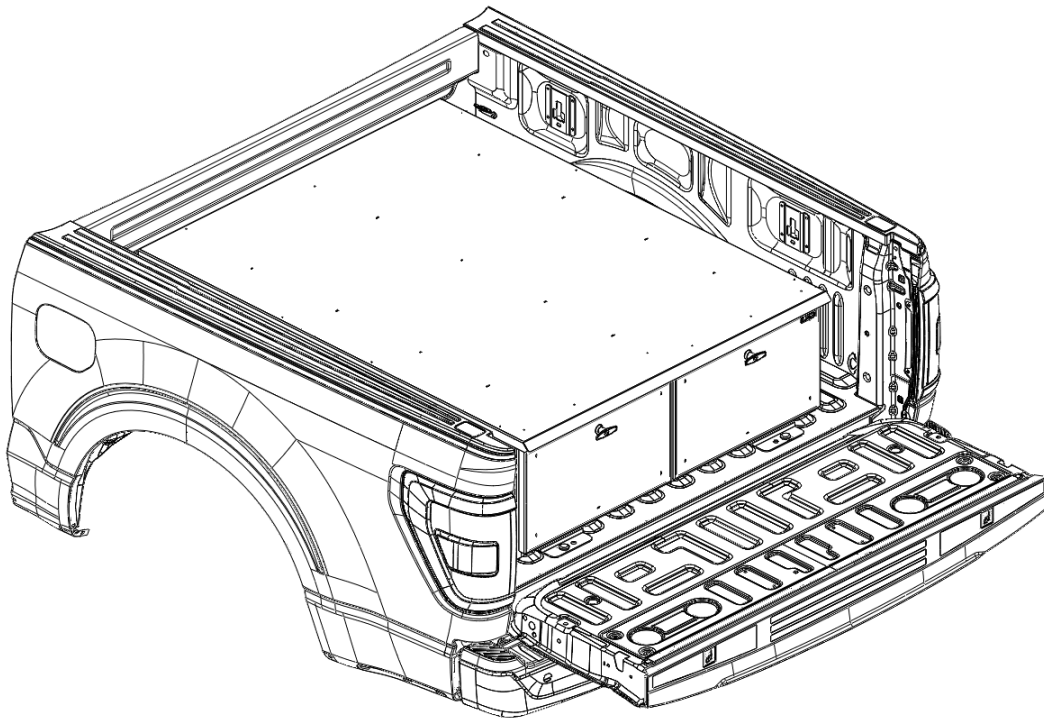

Your installation is now complete. If you have any questions or suggestions for adding additional instructions, please call **Customer Service at (800) 700-8769**.