



TROY PRODUCTS

INSTALLATION INSTRUCTIONS

Jan 17, 2019

Revision 0

A division of Troy Sheet Metal Works, Inc.
1024 South Vail Avenue, Montebello, CA 90640
www.troyproducts.com 800 700-8769

Part No: CP-DG-CG-MNT (OPTION 1)
& CP-21DUR-CG-MNT (OPTION 2)
Description: Cargo mount

Vehicle: Durango
Model year: 2018


I.) Remove rear deck (Both Option 1 & Option 2):

- 1.) Remove (2) O.E.M. rear deck components. NOTE: the rear portion has an electrical connector that must be disconnected.



II.) Prepare cargo mount assembly deck (Both Option 1 & Option 2):


- 2.) Bolt the driver side leg to the front support using (2) provided $\frac{1}{4}$ -20 x $\frac{5}{8}$ " bolts, washers and nuts. Do not tighten at this time.

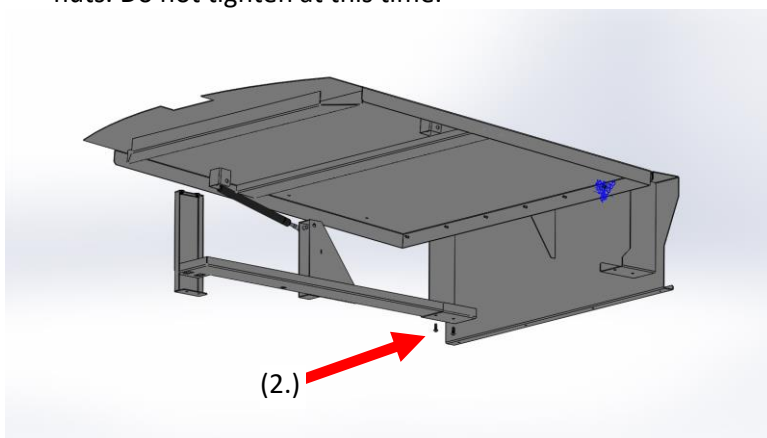


- 3.) Attach the gas spring as shown using (2) provided 5/16-18 nuts.
- 4.) Repeat previous two steps on passenger side leg.
- 5.) Securely tighten all fasteners.

III.) Install cargo mount (Option 1):

- 6.) Place the cargo mount into the vehicle and locate driver side and passenger side legs onto the (2) vehicle studs.

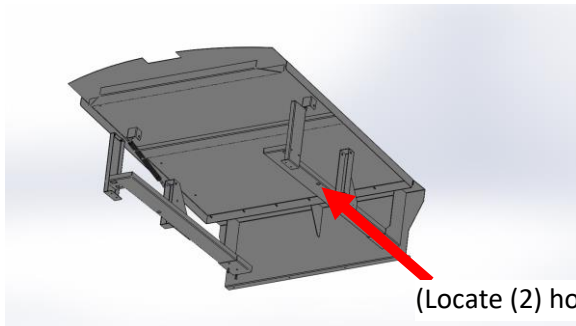


- 7.) Secure the legs using (2) provided M12 locking flange nuts. Tighten securely.
- 8.) Secure the front support and (2) rear legs by installing (8) #8 x 5/8" self-tapping screws into the vehicle floor. Be careful to not drill into any electrical components, hoses, lines or the spare tire when installing these screws.

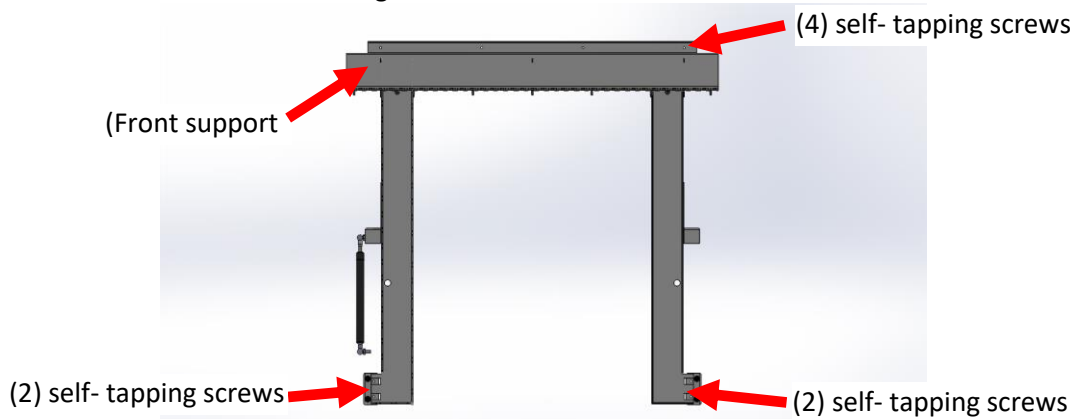


- 9.) Securely tighten all fasteners.

IV.) Install cargo mount (Option 2):


10. Place the cargo mount into the vehicle and locate driver side and passenger side legs onto the (2) vehicle studs.

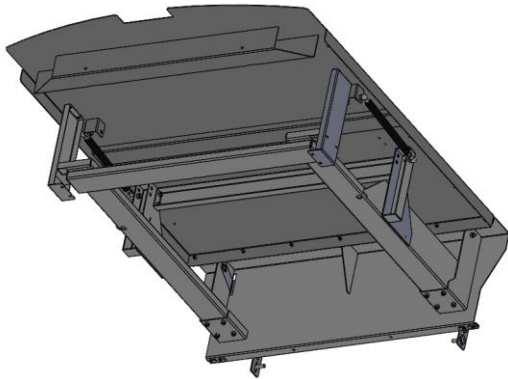

11. Secure the legs using (2) provided M12 locking flange nuts. Tighten securely.

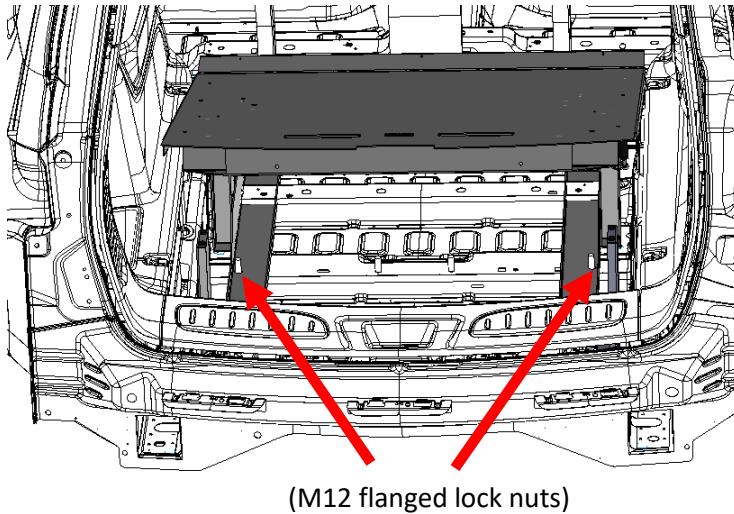


12. Secure the (2) rear legs by installing (4) #8 x 5/8" self-tapping screws into the vehicle floor. Be careful to not drill into any electrical components, hoses, lines or the spare tire when installing these screws.

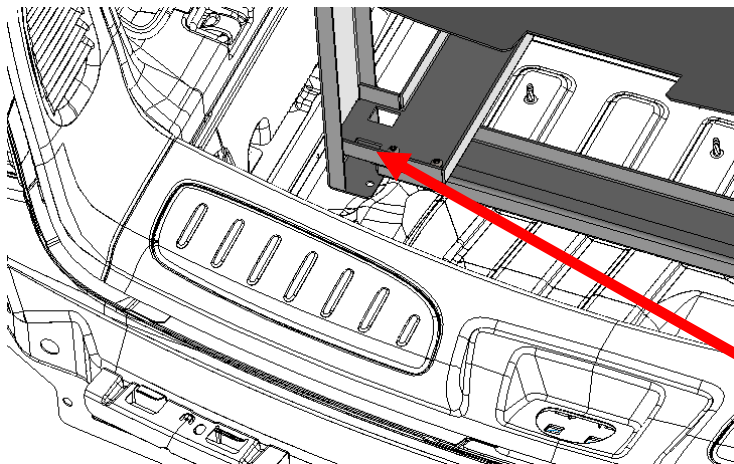

#8 x 5/8" self-tapping screws
(2) on each side


13. Secure the front support by attaching the front brackets to the OS seat floor bracket by removing the 3/8-16 bolts from the seat mount legs and re-securing them through the cargo mount front brackets
- 14.

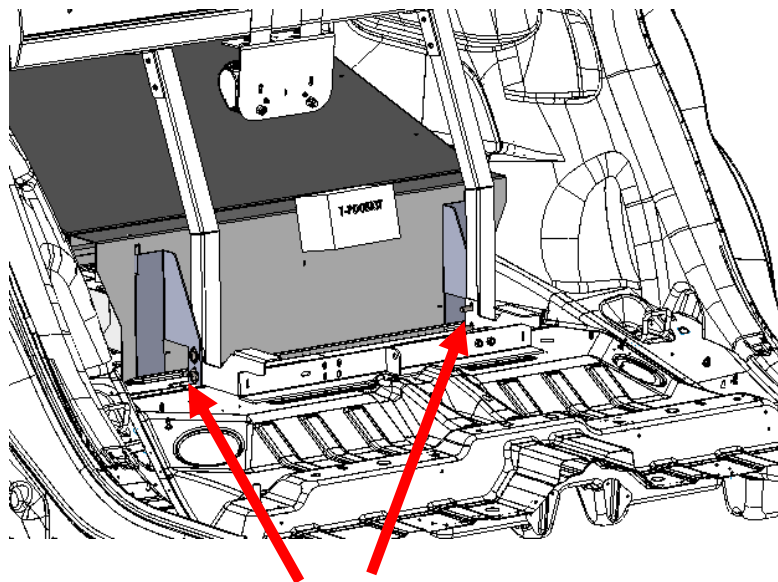

3/8-16 bolts from OS seat mount

15. Securely tighten all fasteners.

Your installation is now complete. If you have any questions or suggestions for adding additional instructions, please call **Customer Service at (800) 700-8769.**

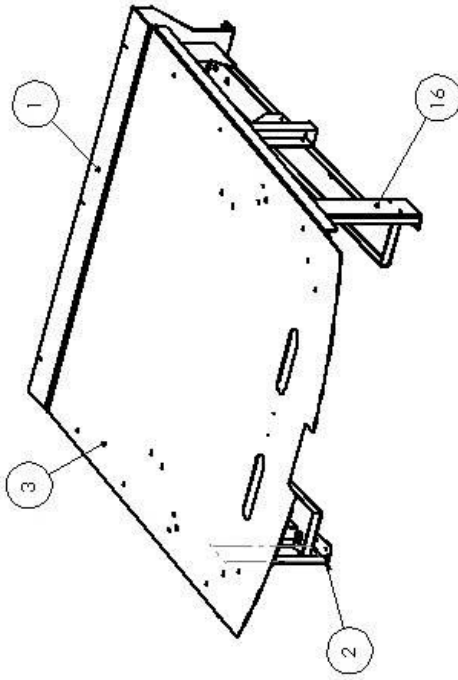

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	CP-DG-CG-MNT-#fa	Front weldment	1
2	CP-DG-CG-MNT-#da	DS leg weldment	1
3	CP-DG-CG-MNT-#ta	Top weldment	1
4	1-HDW-25-GSSI 20	17" / 120 # Gas Spring	2
5	1-FST-55-08000	9/16 OD x 1/8 rubber bumper	4
6	1-FST-06-65620	# 10-32 x 1/2 BH socket screw	7
7	1-FST-35-40000	# 10-32 Keps nut & washer	7
8	1-FST-58-10625-stc	# 10 X 5/8" TEK screw,ZL (loose)	8
9	1-FST-06-60825-stc	1/4-20 x 5/8 Allen BH Screw, (Loose)	4
10	1-FST-35-32250-stc	1/4-20 Keps nut & washer (loose)	4
11	1-FST-35-30000	5/16-18 nyloc nut	4
12	1-FST-33-M12175F	M12-1.75 nylon locking flange nut	2
13	3-PAK-TPLOGO	Troy logo plate	1
14	1-FST-02-91654A	#4 x 3/16 drive screw	2
15	3-PAK-600545	Box 60" x 5" x 45" Single part box	1
16	MirrorCP-DG-CG-MNT-#da	PS leg weldment	1

UNLESS OTHERWISE SPECIFIED:		NAME	DATE
DINER-REAR ENGINE		MR	11/1/78
TOLERANCES:			
FRACTIONAL DECIMALS		DECIMAL BY	
TWO PLACE DECIMALS		ENC APPR.	
THREE PLACE DECIMALS		ENC APPR.	
		O.A.	
		COMMENTS:	
PROPERTY AND CONFIDENTIAL			
NOT TO BE LOANED, COPIED, REPRODUCED, OR FOR SALE PROPERTY OF			
THE COMPANY AND NOT TO BE REPRODUCED OR FOR SALE WITHOUT THE WRITTEN PERMISSION OF			
THE COMPANY			
PROPERTY AND CONFIDENTIAL			
NOT TO BE LOANED, COPIED, REPRODUCED, OR FOR SALE PROPERTY OF			
THE COMPANY AND NOT TO BE REPRODUCED OR FOR SALE WITHOUT THE WRITTEN PERMISSION OF			
THE COMPANY			

