



Dec 5, 2024
Revision 1

A division of Troy Sheet Metal Works, Inc.
1024 South Vail Avenue, Montebello, CA 90640
www.troyproducts.com 323 720-4100

Part No: DC-DUR18-SET

Vehicle: Dodge Durango

Description: Door Cover


Model year: 2018+



Tools Required: 3/16 Drill Bit Drill Rivet Gun

Troy Products recommends reading through all installation instructions prior to installation to check all necessary parts have been included (check against bill of materials table.)




IMPORTANT NOTE: Holes must be drilled in the door panel and door panel cover.

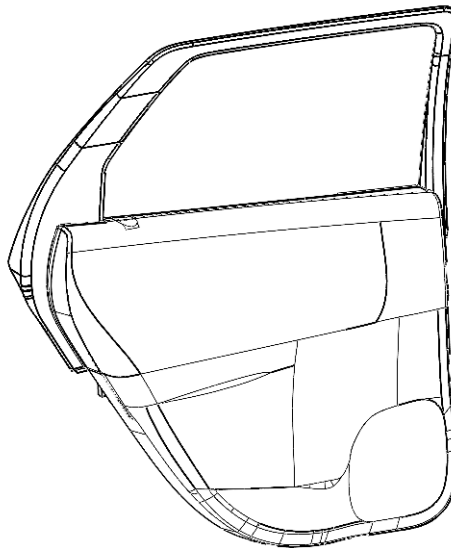

Quick Guide


1. Place the door cover over the door panel.
2. Drill 3/16-inch holes through the door cover and door panel.
3. Use a rivet gun to install the door cover onto the door panel using provided rivets.

DC-DUR18-SET - BILL OF MATERIALS

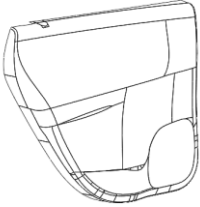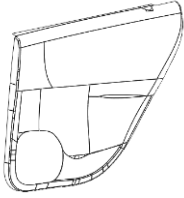
PARTS	
Part number: T-PD105D Description: DOOR COVER - DS QTY: 1	
Part number: T-PD105P Description: DOOR COVER - PS QTY: 1	
HARDWARE	
Part number: P253 Description: 3/16 BLIND RIVET FOR SOFT MATL - BLK QTY: 16	

Installation _____

- 1.) Place door covers over door panel in fully seated position.

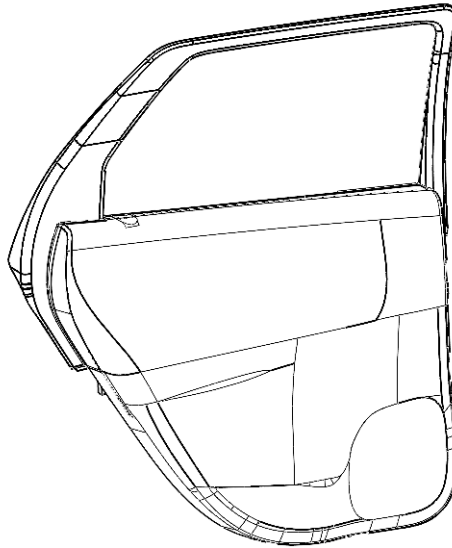

- 2.) While the door cover is in the correct position, drill 8x 3/16-inch holes into the door cover and door panel to allow for riveting.

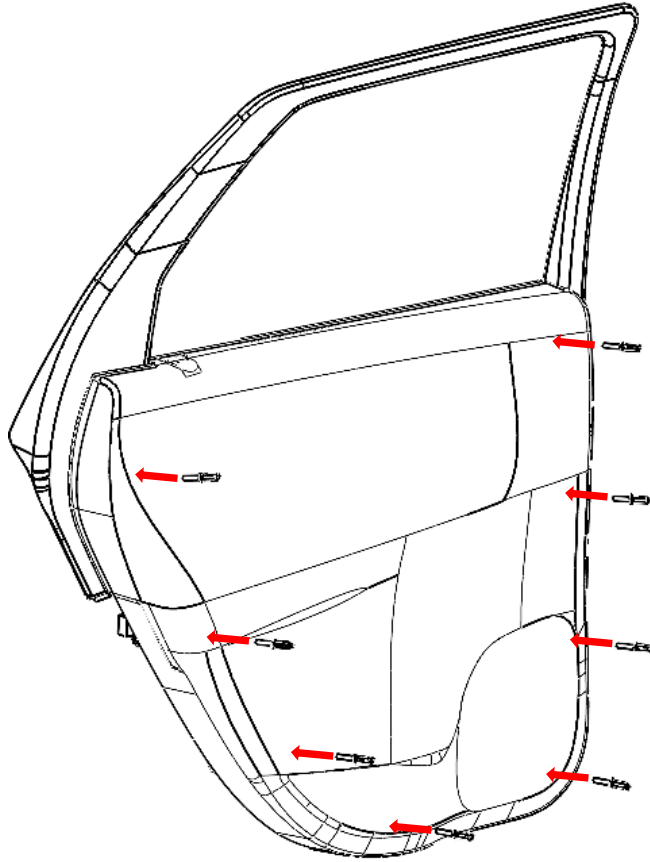

- 3.) Install door cover using the provided 3/16-inch rivets.

Your installation is now complete. If you have any questions or suggestions for adding additional instructions, please call **Customer Service at (800) 700-8769.**