

A division of Troy Sheet Metal Works, Inc.
1024 South Vail Avenue, Montebello, CA 90640
www.troyproducts.com 800 700-8769

Part No: FM-21TH
Description: Center Console Floor Mount

Vehicle: Chevrolet Tahoe
Model year: 2021




Tools Required

- T55 socket or wrench


Troy Products recommends reading through all installation instructions prior to installation to check for all necessary parts. To comply with manufacturer's safety ratings, all OEM self-threading bolts must be discarded and re-tightened with unused bolts to manufacturer's torque specifications.

I.) Preparation

- 1.) Remove OEM plastic trim from outboard sides of front seat rails by pulling on trim, being careful not to break metal mounting pins free from plastic trim. Inside of trim is pictured below; remove by pulling upward. If pins snap free from trim, they can be removed from mounting slots using two screwdrivers and re-inserted onto plastic trim posts.

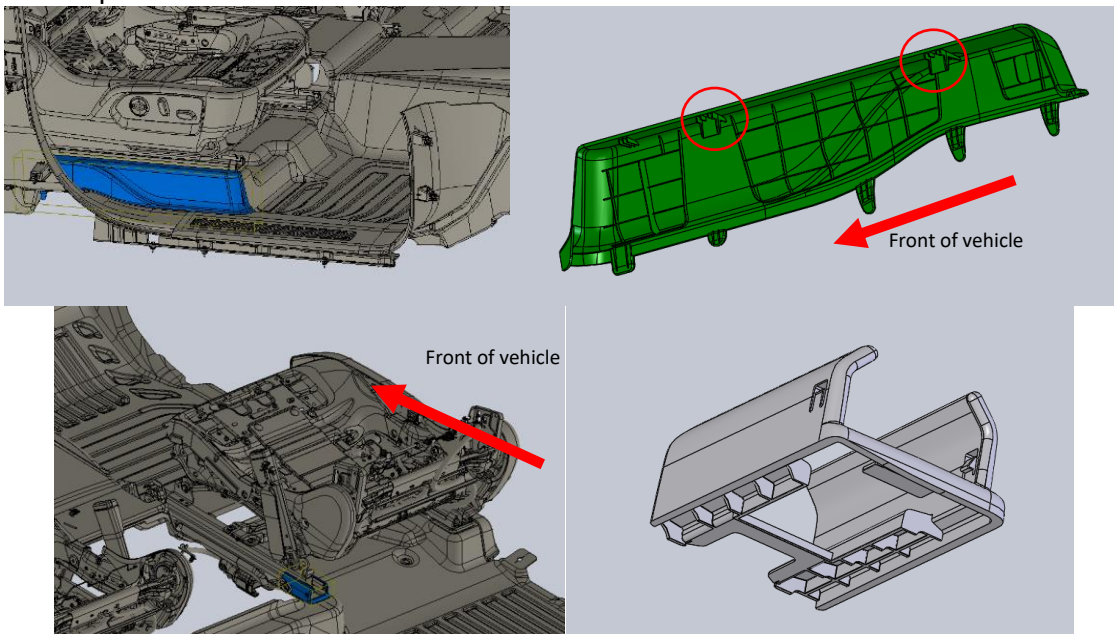


- 2.) Loosen mounting screws on front driver and passenger seats, 8 bolts in total, using T55 driver.

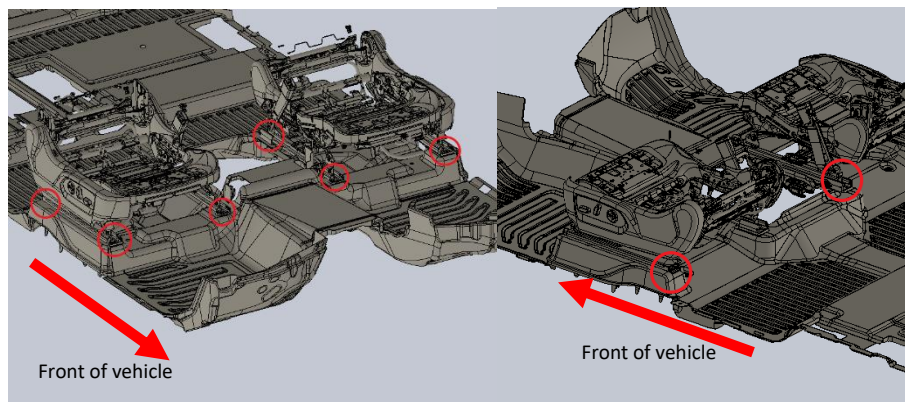


II.) Installation


- 3.) Remove inner mounting screws on both passenger and driver side, four in total. Tilt seats toward outside of vehicle and slide floor plate under seats, noting orientation of plate.

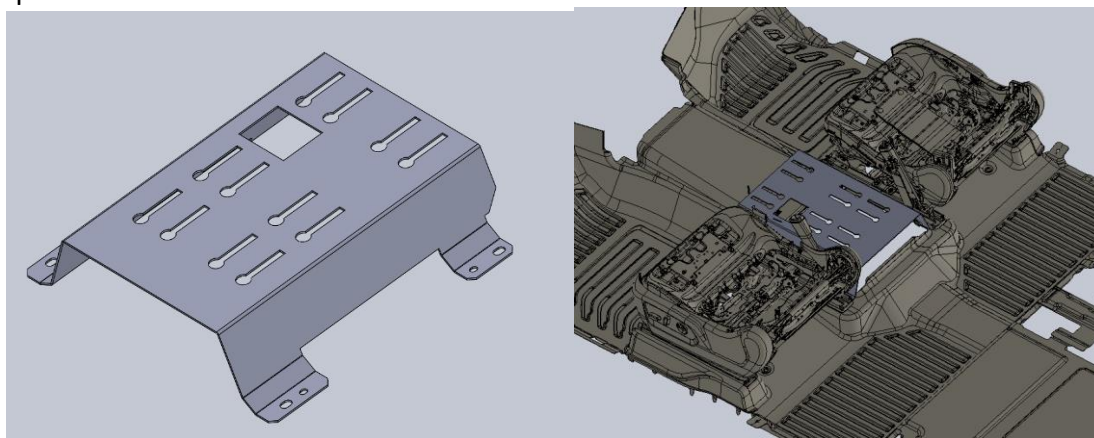

(5.)


- 4.) Re-insert inner screws, leaving them loose. Remove outer mounting screws, four in total. Insert spacers under outer mounting points of seats, noting orientation of spacers and location of locating pins in seat mounts. There are two rear spacers and two front spacers, one of each for each seat.

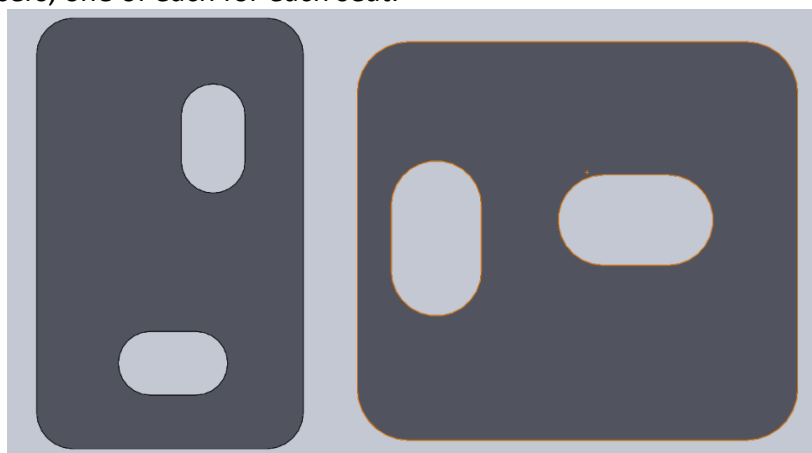

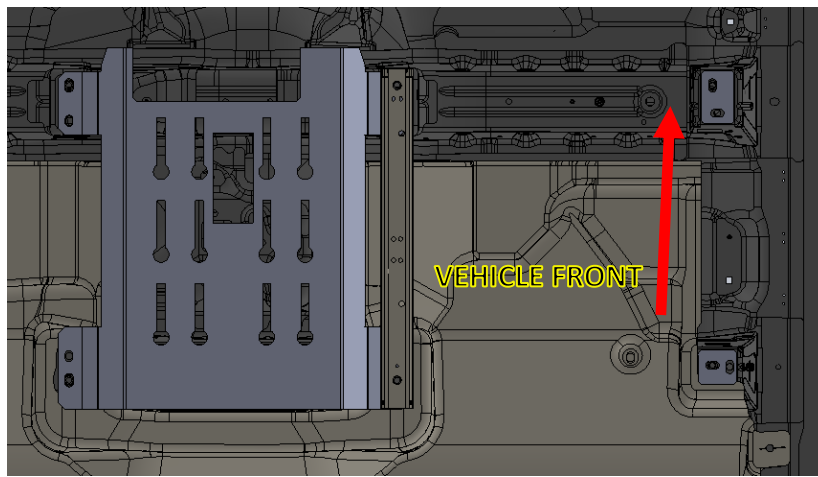

- 5.) Re-tighten all bolts using T55 driver.
- 6.) Re-insert front plastic trim. Discard rear plastic trim.


Your installation is now complete. If you have any questions or suggestions for adding additional instructions, please call **Customer Service at (800) 700-8769**.

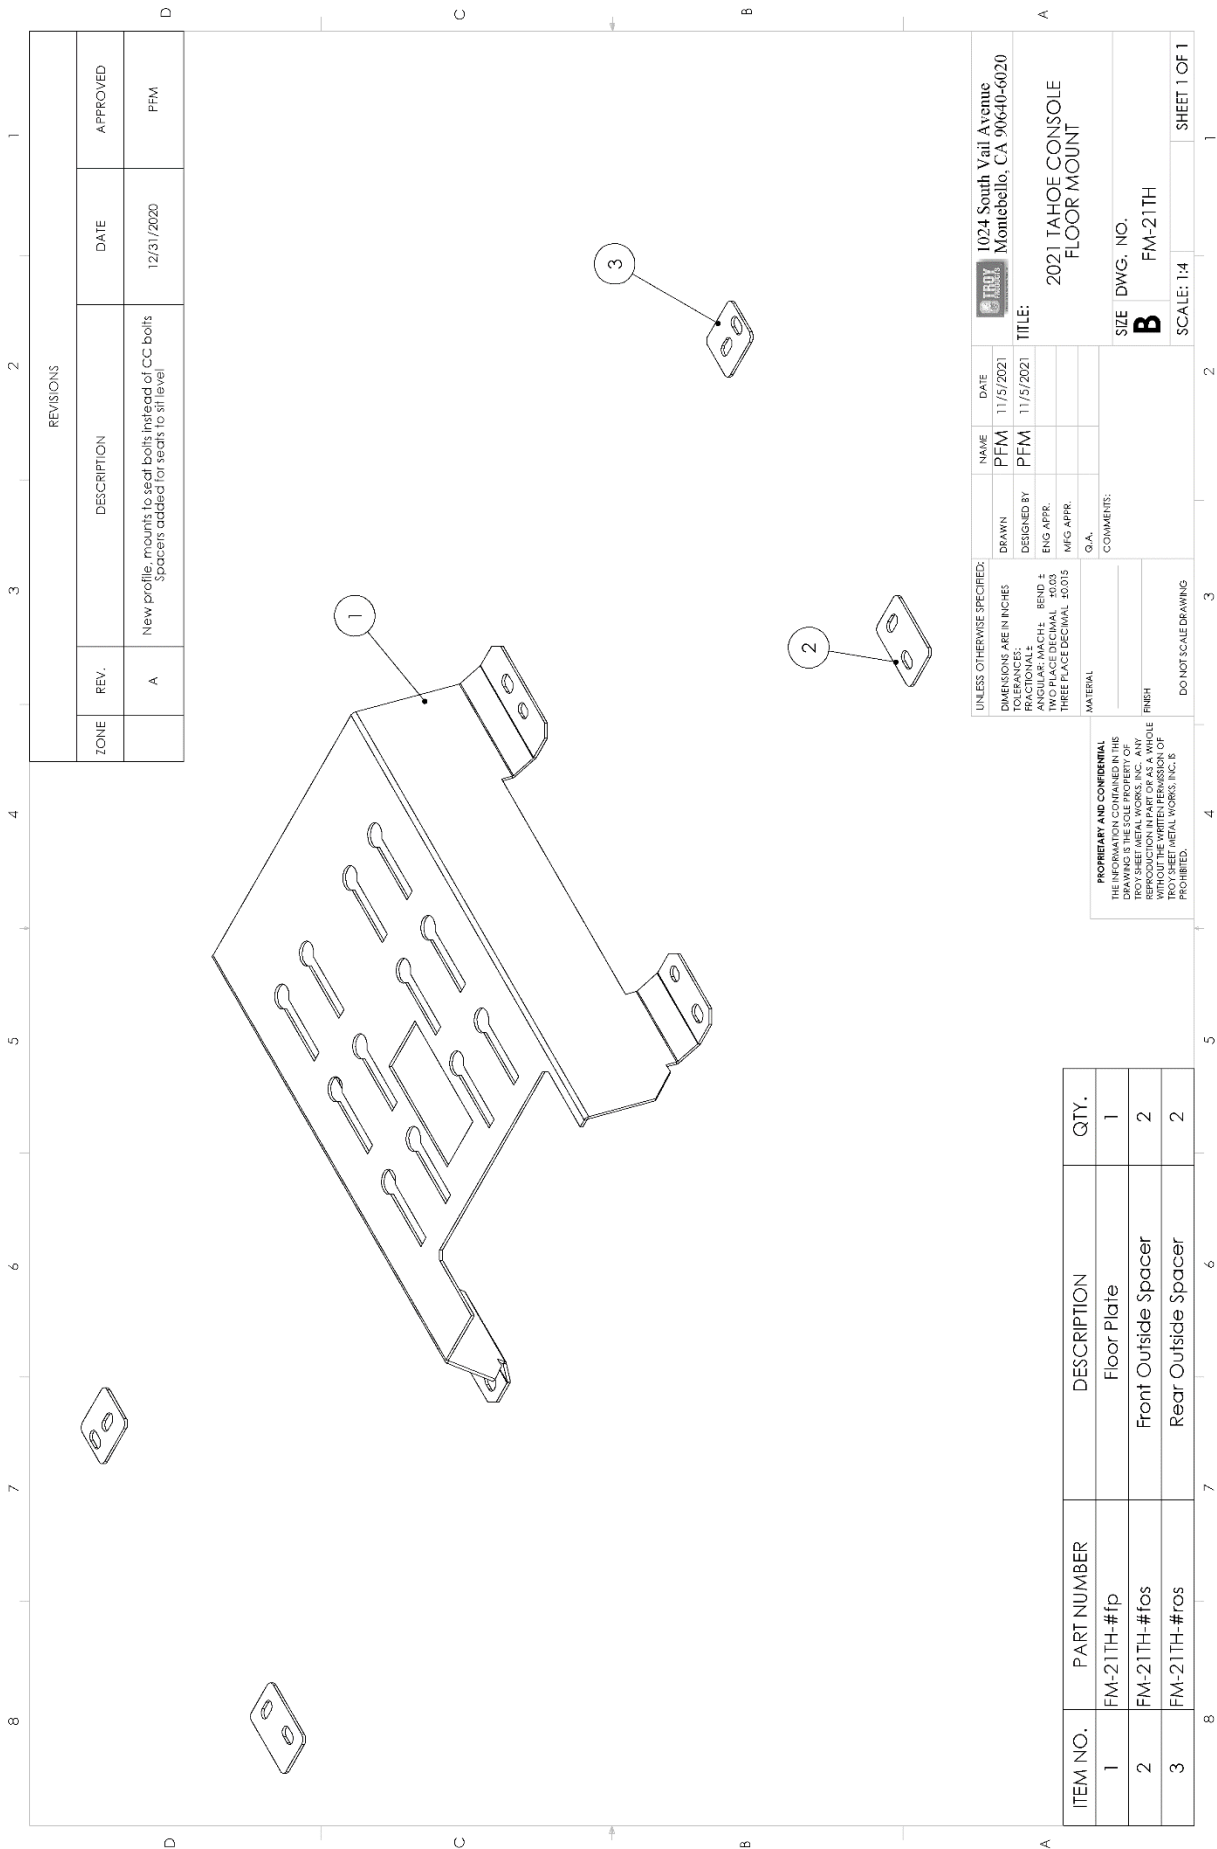

FM-21TH

BILL OF MATERIALS

A. Parts

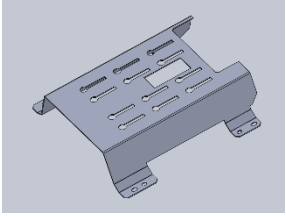Part #	Description	Qty.	Picture
FM-21TH-#fp	Floor Plate	1	
FM-21TH-#ros	Rear Outside Spacer	2	
FM-21TH-#fos	Front Outside Spacer	2	