



TROY PRODUCTS

INSTALLATION INSTRUCTIONS

NOV, 12 2024

Revision A.

A division of Troy Sheet Metal Works, Inc.
1024 South Vail Avenue, Montebello, CA 90640
www.troyproducts.com 800 700-8769

Part No:	KP-20-FDUV-SS,	Vehicle:	Ford PIUV
Description:	2020-24 Ford PI Utility 3 pc. Kick panel w/foot pockets.	Model year:	2020

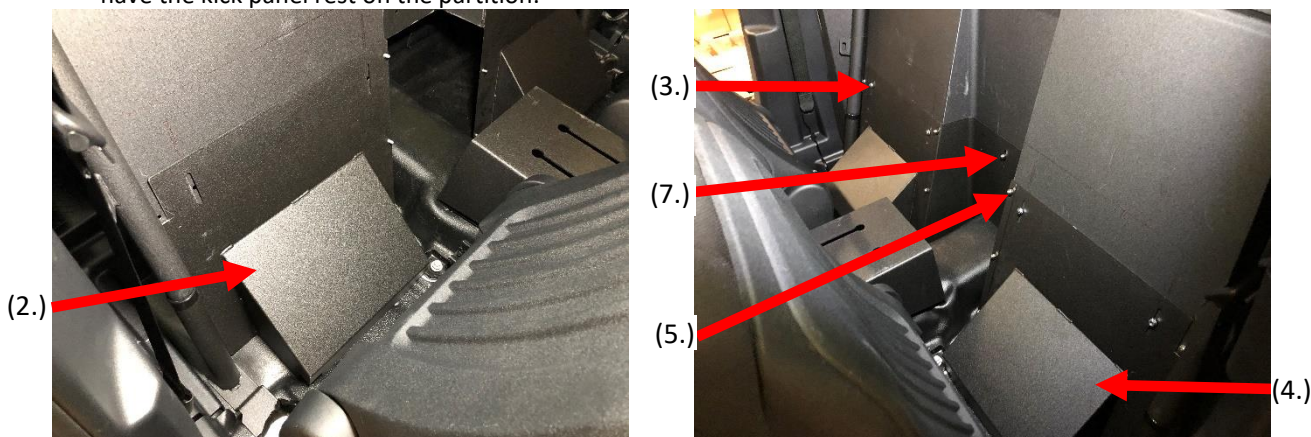
I.) Inspect unit:

- 1.) Remove contents from box and confirm that all parts arrived complete and intact from shipping.
- 2.) Confirm installation hardware. (5) ¼-20 x ½" bolts, (11) ¼-20 acorn nuts, (11) ¼" lock washers.

II.) Install Troy products partition in vehicle: [Separate instructions provided with partition installation kit]

III.) Install side panels:

- 1.) Slide and tilt both passenger and driver seats fully forward.
- 2.) From the front seat side, install the passenger side kick panel by sliding the foot pocket under the seat and have the kick panel rest on the partition.




- 3.) Attach the panel to the partition [studs facing the front of the vehicle] using (2) provided ¼-20 x ½" bolts, washers and nuts to the partition. Finger-tighten only.
- 4.) Repeat the above procedure with the driver side kick panel.

Driver/ Passenger Bracket.


I. Install Brackets:

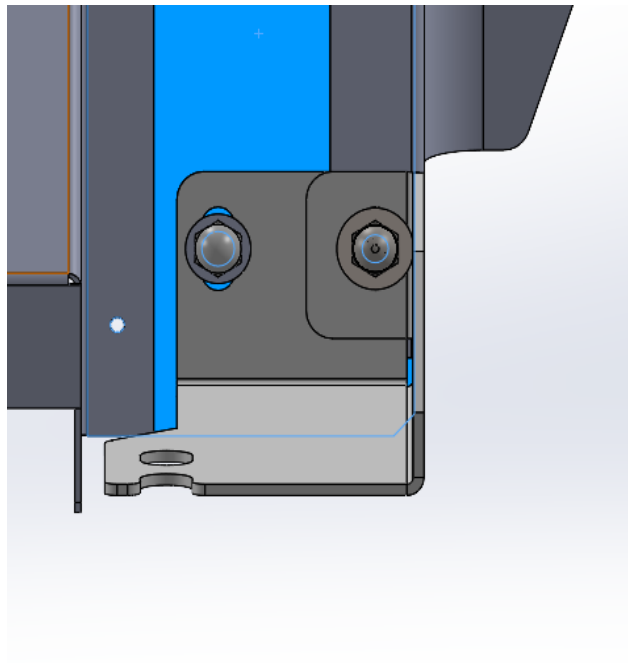- 1.) After confirming the kick panels have been placed correctly, begin attaching the bracket stiffeners.
- 2.) Fasten the bracket stiffeners to the center panel using the provided washers and acorn nuts. Finger tighten all the bolts.



KP-20-FDUV-SS-#pb

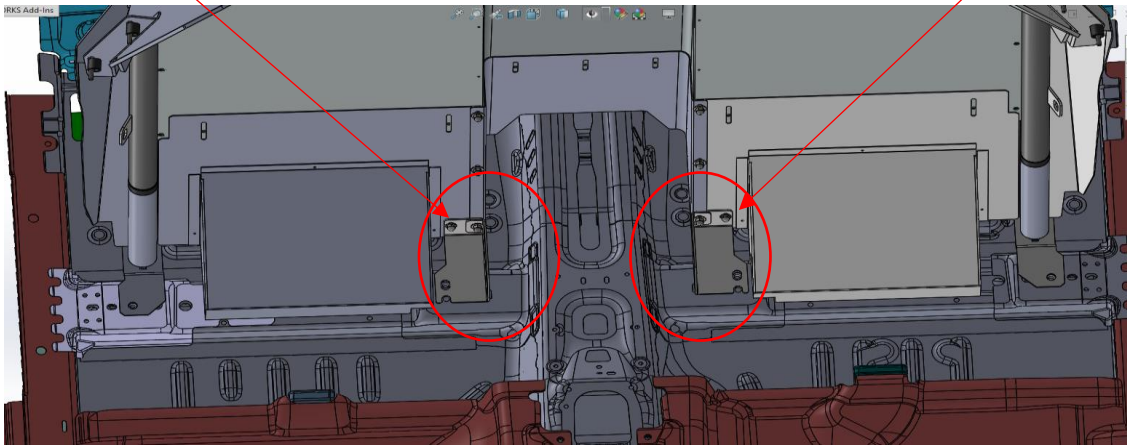
KP-20-FDUV-SS-#db








IV.) Install center panel:

- 5.) Install the center panel onto the side panel studs.
- 6.) Fasten the center panel to the side panel studs using (6) provided washers and nuts. Finger tighten all bolts.
- 7.) Using (1) provided $\frac{1}{4}$ -20 x $\frac{1}{2}$ " bolt, washer and nut, fasten the center panel through the center slot to the partition. Finger tighten only.
- 8.) Confirm the kick panel fit and securely tighten all fasteners.

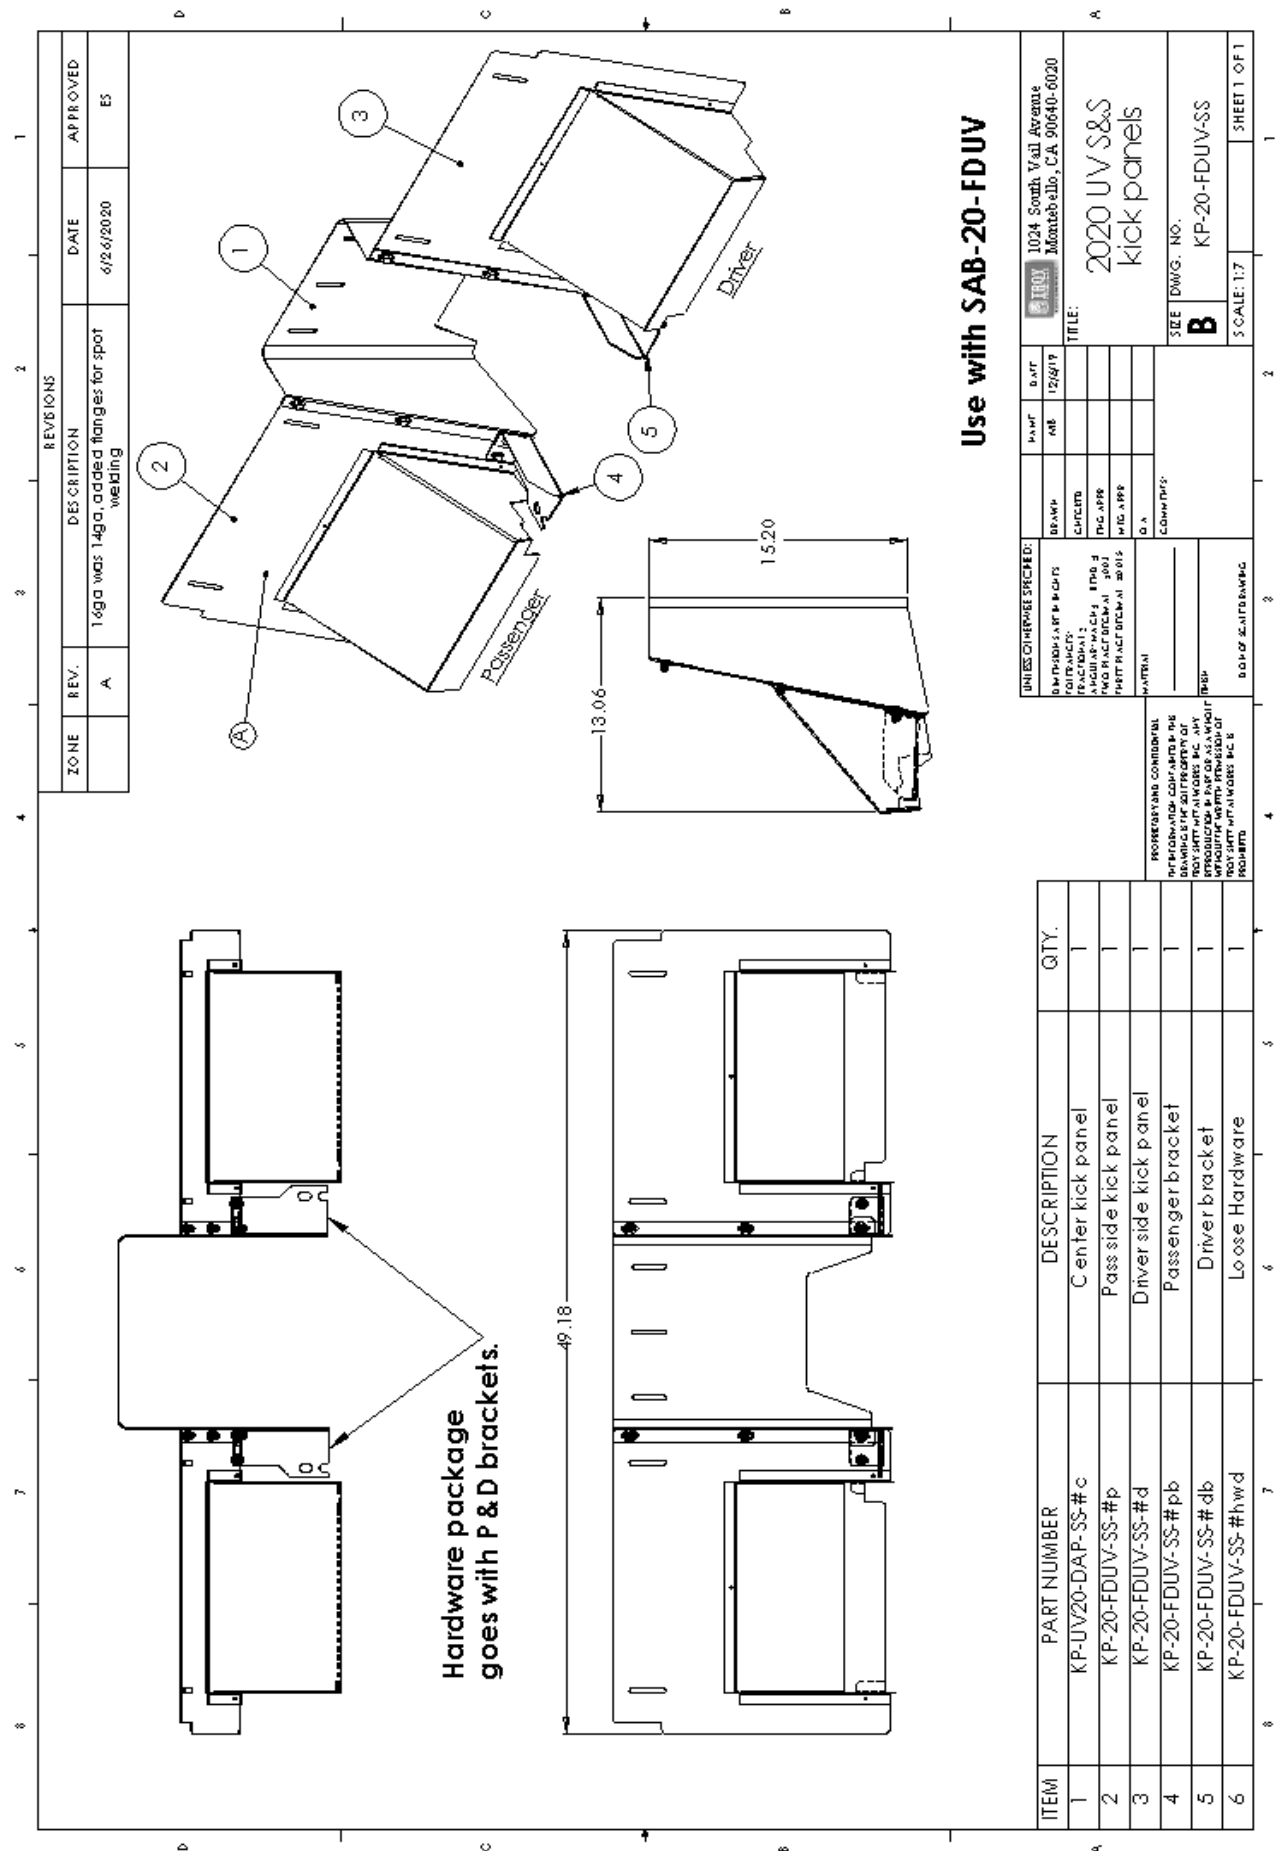Your installation is now complete. If you have any questions or suggestions for adding additional instructions, please call **Customer Service at (800) 700-8769**



KP-20-FDUV-SS
BILL OF MATERIALS

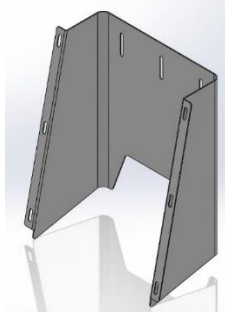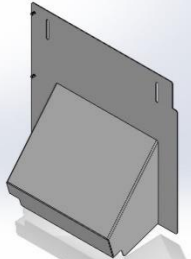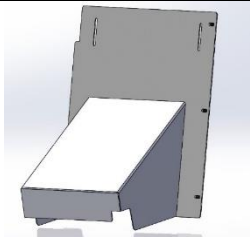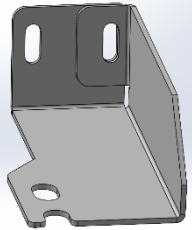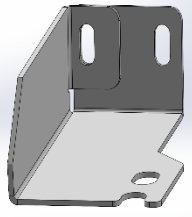PART #	DESCRIPTION	QTY.	PHOTO
KP-UV20-DAP-SS-#c	Center Kick Panel	1	
KP-UV20-DAP-SS-#d	Driver Side Kick Panel	1	
KP-UV20-DAP-SS-#p	Passenger Side Kick Panel	1	
KP-20-FDUV-SS-#pb	Passenger bracket	1	
KP-20-FDUV-SS-#db	Driver bracket	1	
HW-EXT	Hardware Kit- (11) ¼-20 Acorn Nuts, (11) ¼" Split Lock Washers, (5) ¼-20 X ½" BH socket screws	1	