



TROY PRODUCTS

INSTALLATION INSTRUCTIONS

NOV. 11, 2024

Revision A.

A division of Troy Sheet Metal Works, Inc.
1024 South Vail Avenue, Montebello, CA 90640
www.troyproducts.com 800 700-8769

Part No:	KP-21DUR-SS	Vehicle:	Dodge Durango
Description:	2021 DURANGO KICK PANEL W/ FOOT POCKETS	Model year:	2021

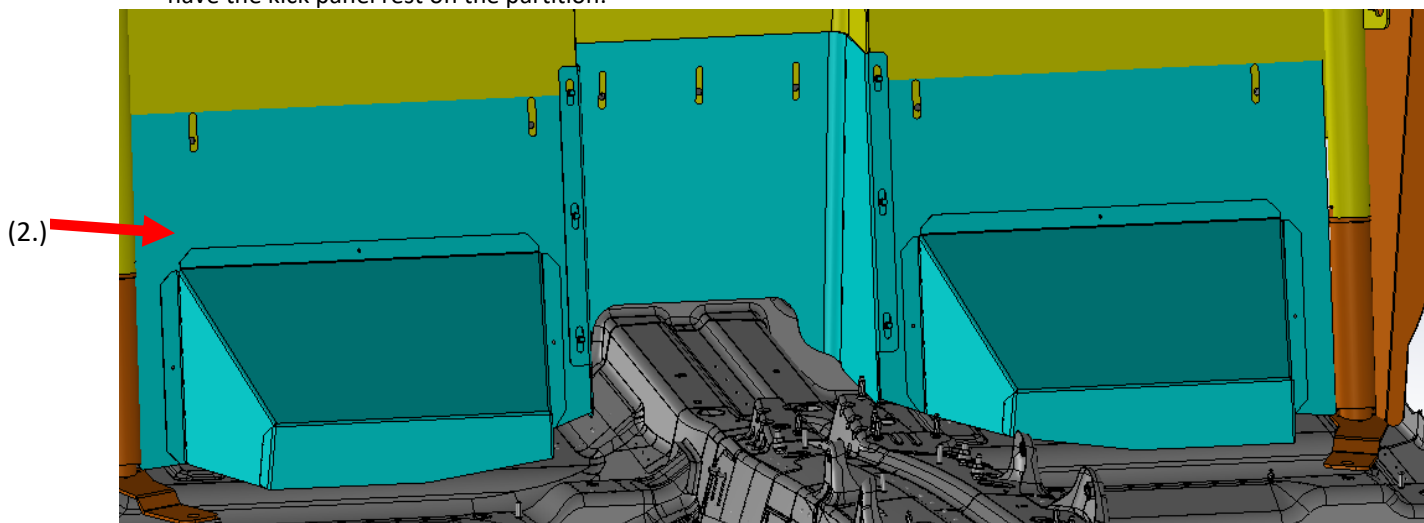
I.) Inspect unit:

- 1.) Remove contents from box and confirm that all parts arrived complete and intact from shipping.
- 2.) Confirm installation hardware. (5) $\frac{1}{4}$ -20 x $\frac{1}{2}$ " bolts, (11) $\frac{1}{4}$ -20 acorn nuts, (11) $\frac{1}{4}$ " black washers.

II.) Install Troy products partition in vehicle: [Separate instructions provided with partition installation kit]

III.) Install side panels:

- 1.) Slide and tilt both passenger and driver seats fully forward.
- 2.) From the front seat side, install the passenger side kick panel by sliding the foot pocket under the seat and have the kick panel rest on the partition.




- 3.) Attach the panel to the partition [studs facing the front of the vehicle] using (2) provided $\frac{1}{4}$ -20 x $\frac{1}{2}$ " bolts, washers and nuts to the partition. Finger-tighten only.
- 4.) Repeat the above procedure with the driver side kick panel.

IV.) Install center panel:

- 5.) Install the center panel onto the side panel studs.
- 6.) Fasten the center panel to the side panel studs using (6) provided washers and nuts. Finger tighten all bolts.
- 7.) Using (1) provided $\frac{1}{4}$ -20 x $\frac{1}{2}$ " bolt, washer and nut, fasten the center panel through the center slot to the partition. Finger tighten only.
- 8.) Confirm the kick panel fit and securely tighten all fasteners.

Your installation is now complete. If you have any questions or suggestions for adding additional instructions, please call **Customer Service at (800) 700-8769**

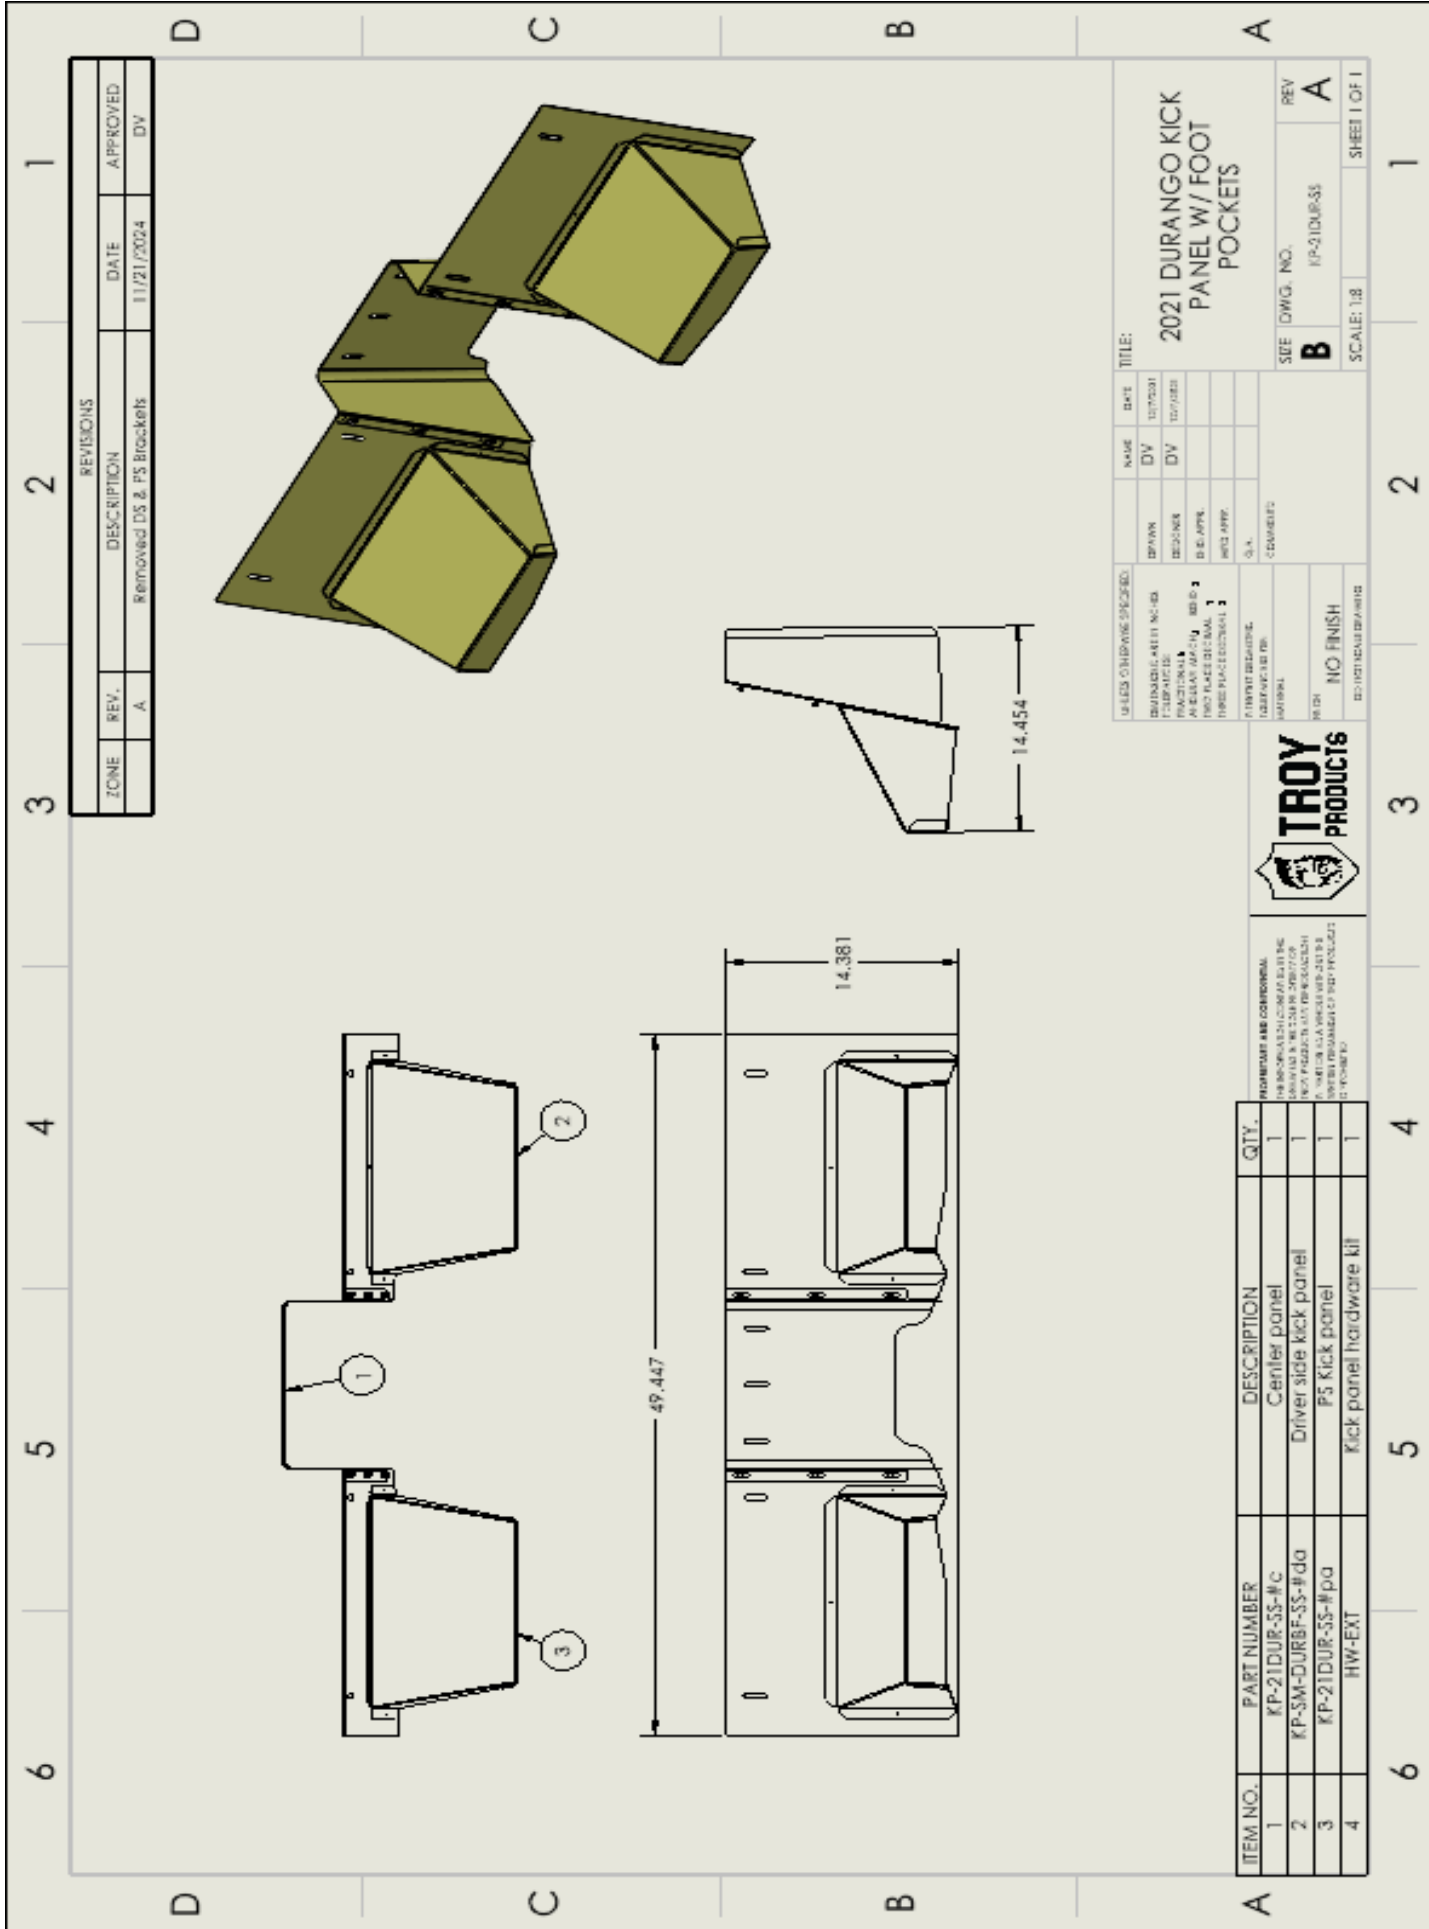KP-21DUR-SS



REVISIONS			
ZONE	REV.	DESCRIPTION	DATE
	A	Removed DS & FS Brackets	11/21/2024
			APPROVED DV




TITLE:			
2021 DURANGO KICK PANEL W/ FOOT POCKETS			
DESIGNED BY	DV	DATE	
CHECKED BY	DV	DATE	
BY	APP.		
DATE			
SCALE	1:8		
SHEET	1	OF	1



MEMBER OF COMBUSTION
 PRODUCTS
 10000 WILSON AVENUE
 SUITE 100
 DALLAS, TEXAS 75243
 (214) 343-1000
 WWW.TROYPRODUCTS.COM

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	KP-21DUR-SS-#C	Center panel	1
2	KP-SM-DURBF-SS-#da	Driver side kick panel	1
3	KP-21DUR-SS-#pa	PS Kick panel	1
4	HW-EXT	Kick panel hardware kit	1

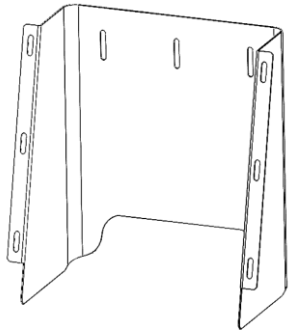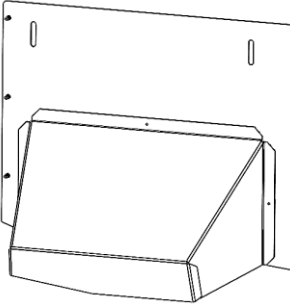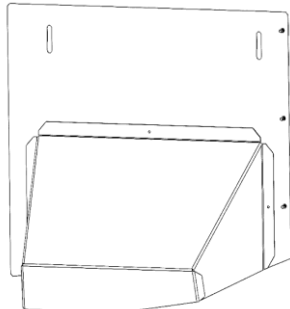KP-21DUR-SS
BILL OF MATERIALS

PART #	DESCRIPTION	QTY.	PHOTO
KP-21DUR-SS-#c	Center Panel	1	
KP-SM-DURBF-SS-#da	DS Kick Panel	1	
KP-21DUR-SS-#pa	PS Kick Panel	1	
HW-EXT	Hardware Kit- (13) ¼-20 Acorn Nuts, (13) ¼" BLACK FLAT WASHERS (7) ¼-20 X ½" BH socket screws	1	