

A division of Troy Sheet Metal Works, Inc.
1024 South Vail Avenue, Montebello, CA 90640
www.troyproducts.com 800 700-8769

Part No: KP-21TH-SS
Description: Kick Panels

Vehicle: Chevrolet Tahoe
Model year: 2021


Tools Required

5/32 allen key	7/16 socket	


Troy Products recommends reading through all installation instructions prior to installation to check for all necessary parts.

I.) Preparation:


- 1.) Front partition must be installed before kick panels as per instructions on partition install kit, part number PM-21TH or PM-21TH-BF.

II.) Panel Installation:


- 2.) Begin by locating driver and passenger kick panels (#dasm, #pasm) on partition. Panels sit toward vehicle front. Insert two provided ¼-20x0.5 fasteners per panel, with washers, and loosely secure them with acorn nuts. Acorn nuts sit toward vehicle front. Ensure kick panels sit flush on floor.

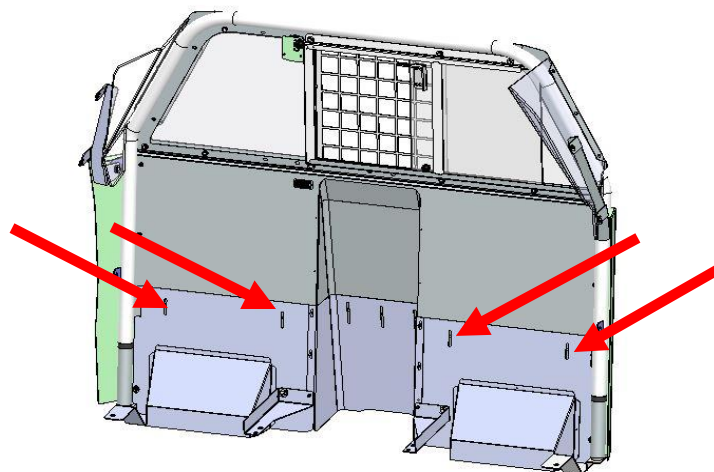


- 3.) Place center section (#c) on front side of partition, aligning PEM studs with slots in kick panels. Fasten center section with four ¼-20 acorn nuts and washers, provided, in top four mounting locations.

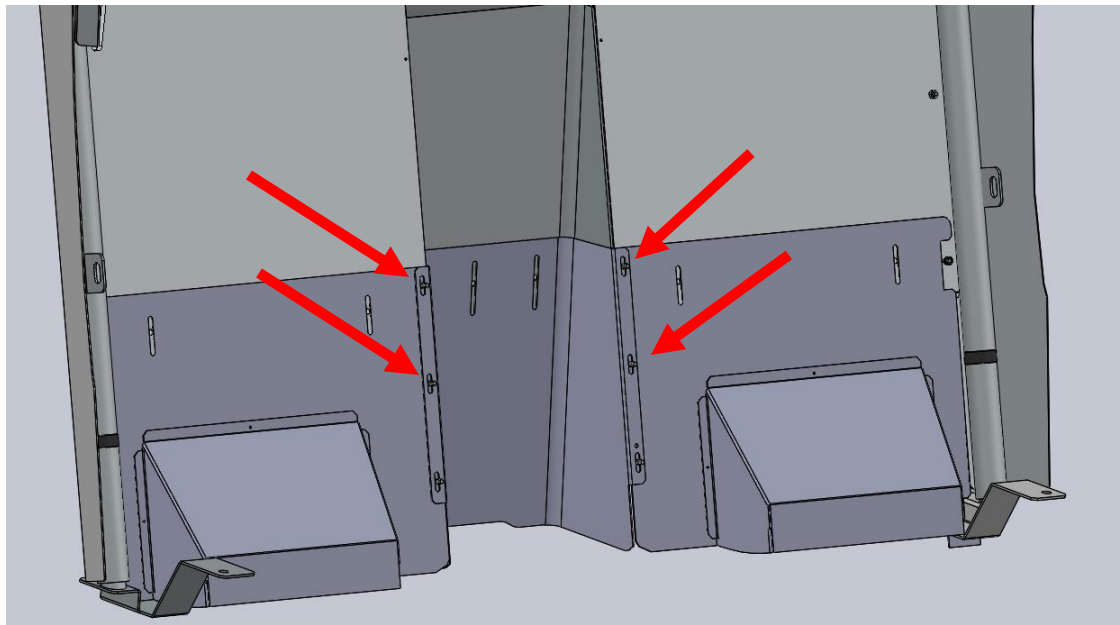


- 4.) Remove rear inside mounting screws of front seats where shown. Insert driver and passenger support braces and insert OEM screws in seat mounts, loosely.
 - a. If center console floor mount and/or computer mount are to be used, ensure the kick panel braces take the lowest position under the seat.

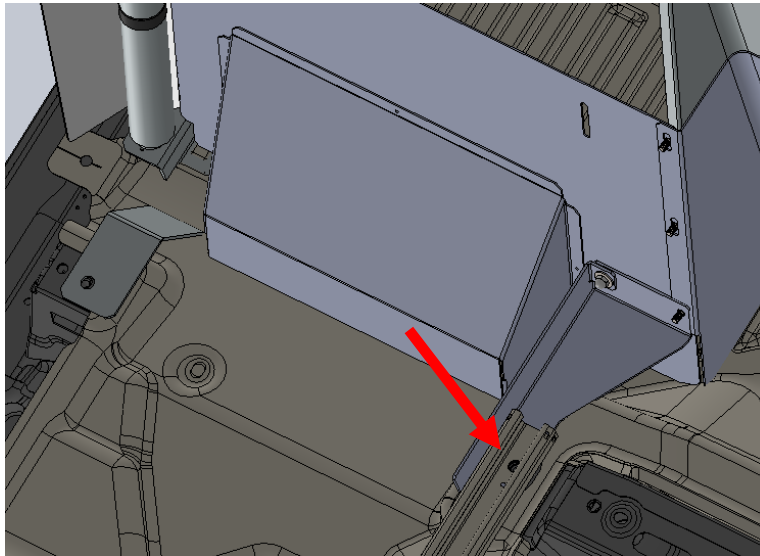


- 5.) Use two ¼-20 acorn nuts and washers, provided, to secure braces to kick panels as shown.

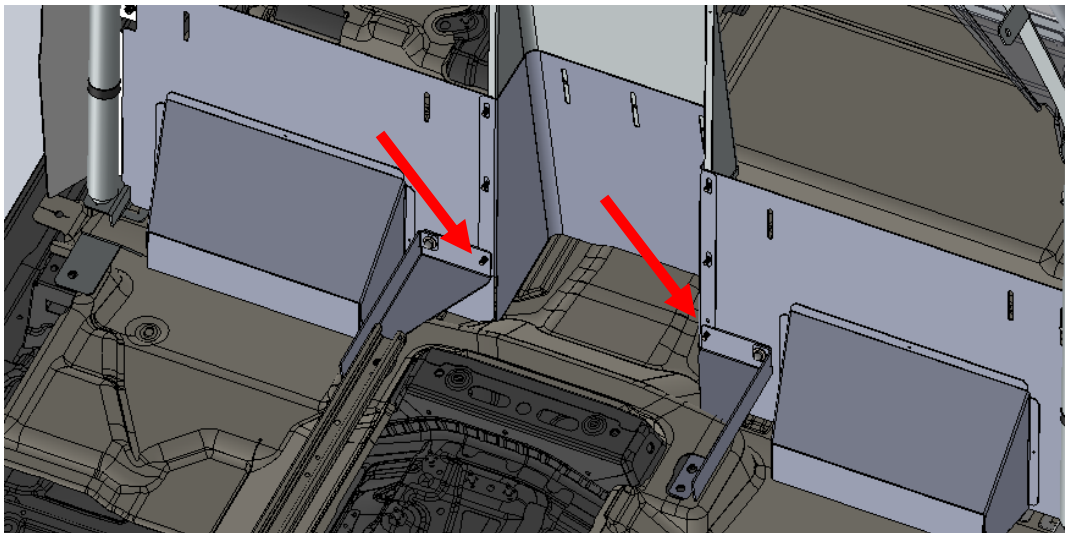

- 6.) Use two ¼-20 x 5/8 screws with ¼-20 acorn nuts and washers, provided, to secure remaining mounting points of braces as shown. Use washer on front side of kick panels.

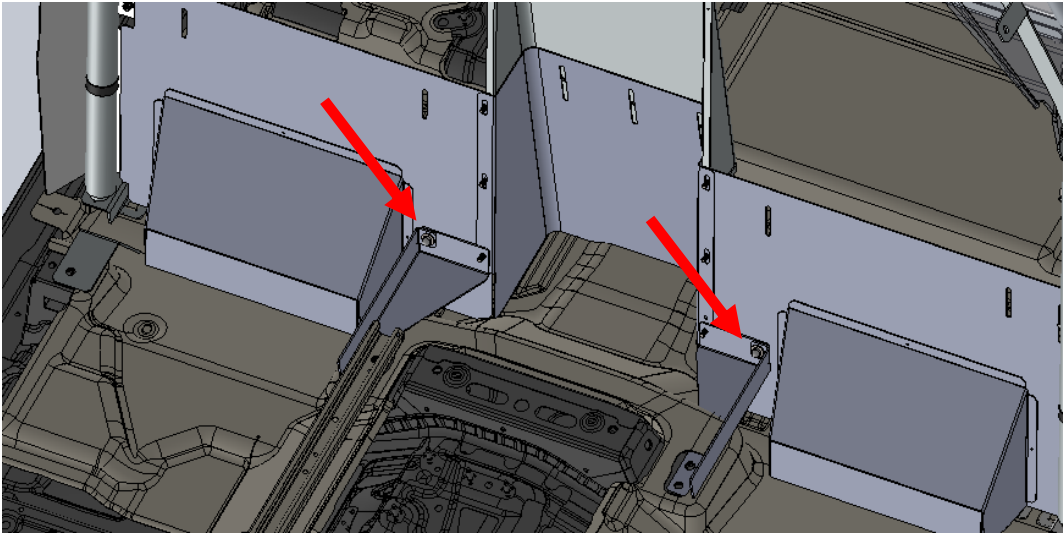




- 7.) Use four ¼-20 x 5/8 screws with ¼-20 acorn nuts and washers, provided, to secure kick panel assembly to partition. Braces not shown.

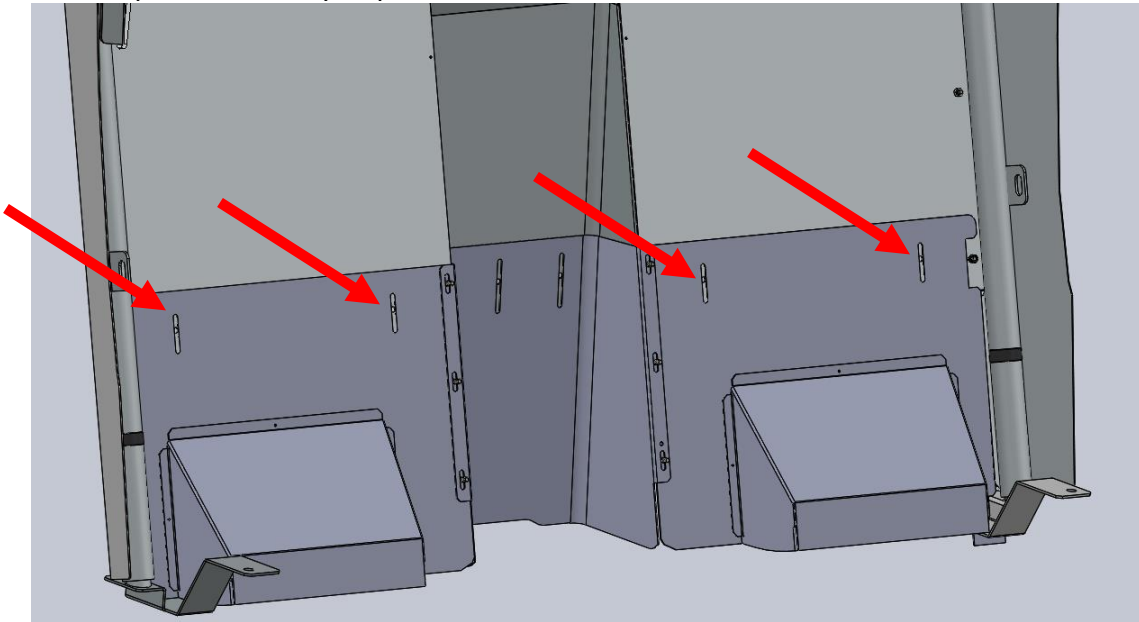

- 8.) Ensure all fasteners are tightened.

Your installation is now complete. If you have any questions or suggestions for adding additional instructions, please call **Customer Service at (800) 700-8769**.

REVISIONS			
ZONE	REV.	DESCRIPTION	DATE
	A	#pb, #db ADDED	10/23/2021
			APPROVED
			PFM

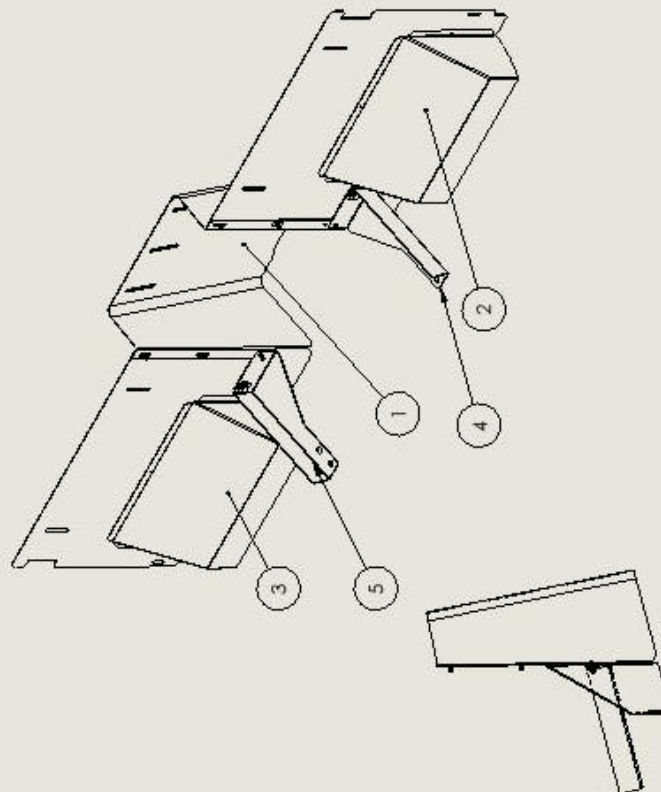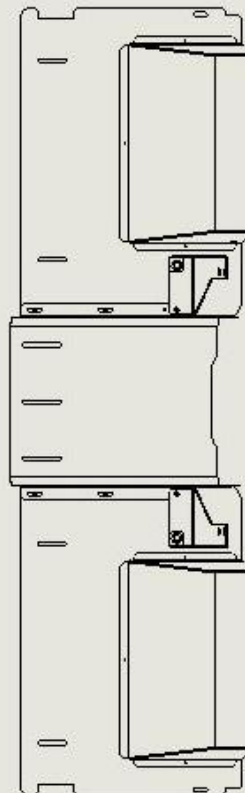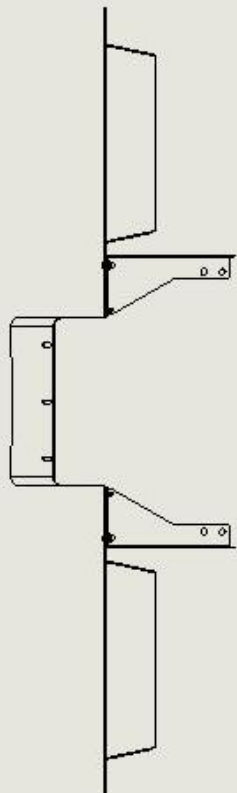

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	KP-21TH-SS-#c	Center kick panel	1
2	KP-21TH-SS-#dasm	Driver Kick Panel	1
3	KP-21TH-SS-#pasm	Passenger Kick Panel	1
4	KP-21TH-SS-#db	DRIVER BRACKET	1
5	KP-21TH-SS-#pb	PASSENGER BRACKET	1
6	KP-21TH-SS-#hw	LOOSE HARDWARE	1
7	3-PAK-231418	Box 23" x 14" x 18" 200# DW	1

UNLESS OTHERWISE SPECIFIED:		NAME	DATE
DIMENSIONS ARE IN INCHES		DATE	10/19/20
FRACTIONAL DIMENSIONS		DESIGNED BY	
ANGULAR ARCHITECTURE		BY APPL	
THIRD PLACE DIMENSION		DATE APPL	
THIRD PLACE DIMENSION		DATE APPL	
NATURAL		COMMENTS	
PROPRIETARY AND CONFIDENTIAL THIS DOCUMENT IS THE PROPERTY OF SOUTH SHETLAND WORKS, INC. AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF SOUTH SHETLAND WORKS, INC.			
DO NOT SCALE DRAWING		SCALE: 1/8"	SHEET 1 OF 1

1024 South Vail Avenue
Montebello, CA 90640-0020






2021 Tahoe Kick Panels-SS

SIZE DWG. NO. **B** KP-21TH-SS


KP-21TH-SS

BILL OF MATERIALS

A. Parts

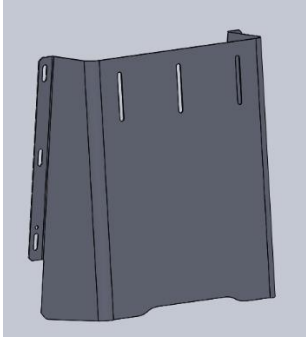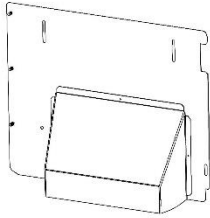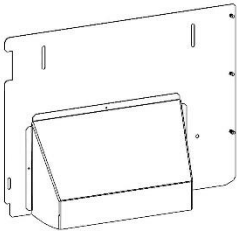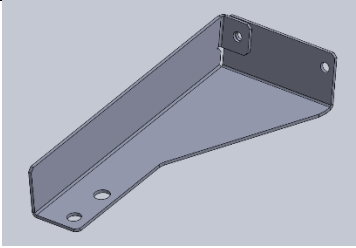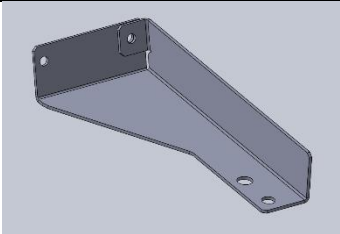Part #	Description	Qty.	Picture
KP-21TH-SS-#c	Center Kick Panel	1	
KP-21TH-#dasm	Driver Kick Panel	1	
KP-21TH-#pasm	Passenger Kick Panel	1	
KP-21TH-SS-#pb	Passenger Brace	1	
KP-21TH-SS-#db	Driver Brace	1	

B. Hardware

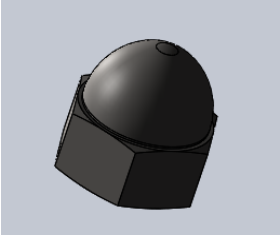1-FST-06-60825	¼-20 x 0.625" button head socket screw	2	
1-FST-36-60800	¼-20 acorn nut	2	
1-FST-50-60800	¼ washer	2	
HW-EXT	KICK PANEL HARDWARE KIT	1	