



# TROY PRODUCTS

## INSTALLATION INSTRUCTIONS

Oct 15, 2019

Revision 1



A division of Troy Sheet Metal Works, Inc.  
1024 South Vail Avenue, Montebello, CA 90640  
www.troyproducts.com 800 700-8769

Part No: CC-OH-CHV19  
Description: Overhead Console

Vehicle: Silverado 1500  
Model year: 2019

### I.) Configure console for 3" faceplate or 4" faceplate:

- 1.) This console can accommodate either (1) 3" faceplate for a radio -OR- (1) 4" faceplate for a siren control.
- 2.) If a 3" faceplate is to be used, install the (2) short (2.5" long) faceplate rails into the console using (4) provided self-tapping screws as shown.

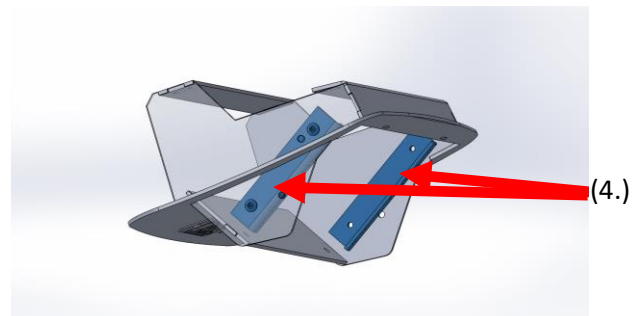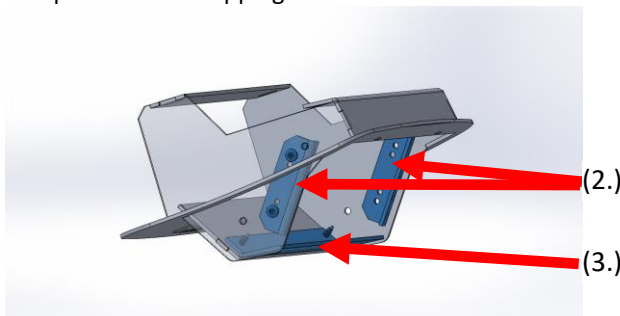

- 3.) Install the gap panel using (2) provided self-tapping screws as shown.
- 4.) If a 4" faceplate is to be used, install the (2) longer (3.5" long) faceplate rails into the console using (4) provided self-tapping screws as shown. The gap panel is not used.

### II.) Remove O.E.M. light:

- 5.) Remove (2) cover plates to expose screws.




- 6.) Remove (2) screws using a long T10 Torx bit. These (2) screws will be re-used later.
- 7.) Pull down to un-snap console, disconnect all connectors.
- 8.) Remove OEM light assembly.

### IMPORTANT NOTE:

- 9.) The seat belt indicator light must be removed from the O.E.M. plastic console, re-connected to its wiring harness, tucked into the headliner and secured to prevent an alarm message. With doing so, the OnStar feature will lose its function.

### III.) Install mounting clips and console:

10.) Install (2) provided nut clips onto roof sheet metal tabs.

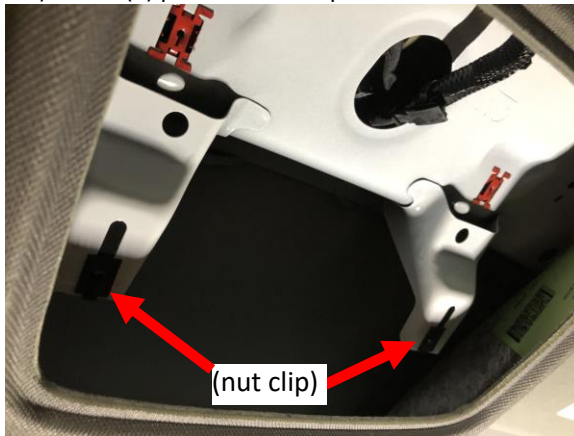


11.) Install Troy console into headliner opening and fasten using (2) provided #8-32 x 5/8" screws and (2) provided washers.

12.) Install (2) OEM screws previously removed using washers. Tighten all fasteners securely.

### IV.) Install faceplates:

13.) Install siren control or remote-head radio unit into faceplate and attach faceplate to faceplate rails.

Your installation is now complete. If you have any questions or suggestions for adding additional instructions, please call **Customer Service at (800) 700-8769.**

10.42

PROPERTY AND CONFIDENTIAL  
THE INFORMATION CONTAINED HEREIN  
IS THE SOLE PROPERTY OF  
TEQ SYSTEMS, INC. ANY  
REPRODUCTION OR  
DISSEMINATION OF  
THIS INFORMATION WITHOUT  
THE WRITTEN PERMISSION OF  
TEQ SYSTEMS, INC. IS  
PROHIBITED.